

# Owner's Manual

Spiral® and Spiral® Prewire Doors

1072467-0

Rev 1 04/22

© Rytec Corporation 2022



## **⚠ WARNING**

**Read and understand** all operation, warning and safety instructions in this manual before operating or servicing the door.

When instructed to do so, follow lockout/tagout procedure before servicing the door.



<b>Table of Contents</b>	<b>3</b>	Drive Shaft, Non-Drive Side	30
<b>Introduction</b>	<b>5</b>	Drive Shaft, Drive Side	31
How to find the serial number	.5	Drive Belt	32
Rytec naming conventions	.6	Door Panels -L size doors with Full Vision panels (1072406 STT-L)	33
<b>Safety</b>	<b>7</b>	Door Panels -L size doors with solid panels (1072407 SST-L)	34
Operational and maintenance safety	.7	Door Panels -S size doors with Full Vision panels (1072408 STT-S)	35
Object Detection and Alerting Systems	.8	Door Panels -S size doors with solid panels (1072409 SST-S)	36
<b>Operation</b>	<b>9</b>	Door Panels -US size doors with solid panels (1072412 SST-US)	37
How to hold the door open - normal use	.9	Bottom Bar Assembly	38
How to hold the door open to service	10	End brackets and splice blocks/clamps	39
How to open and close the door manually	10	Door Panel Hinges	40
<b>Maintenance</b>	<b>11</b>	Hood Cover -L size doors	41
Recommended inspection and maintenance schedule	11	Hood Cover -S size doors	42
Daily maintenance	12	Hood Cover -US size doors	43
How to inspect the safety labels	13	Slanted Hood Cover -L size doors	44
<b>Parts</b>	<b>17</b>	Slanted Hood Cover -S size doors	45
How to order parts	17	Slanted Hood Cover -US size doors	46
How to return unwanted parts	18	Motor and Encoder -L and -S size doors	47
Warranty return	18	Brake Components -L and -S size doors	48
Physical return	18	Motor and Encoder -US size doors	49
Why you may be sent substitute parts	18	Brake and Proximity Sensor Components -US size doors	50
Rytec Technical Knowledge Center	18	Spring Assemblies - Part 1	51
Side Column Assemblies	19	Spring Assemblies - Part 2	52
Side Column Assemblies - Baseplate Area	20	Remote Mobile Unit	53
Spreaders and Seals	21	SmartSurround™ and Advanced3 Light Curtains	54
Head Assembly Consoles STT-L doors	22	CAN Cables, Connectors and Components	55
Head Assembly Consoles SST-L doors	23	System 4® Controller and Accessories	56
Head Assembly Consoles STT-S doors	24	User Terminals	57
Head Assembly Consoles SST-S doors	25	Expansion Boards	58
Head Assembly Consoles -US size doors	26	<b>Warranty</b>	<b>59</b>
Head Assembly Console Brackets -L and -S size doors	27	SPIRAL® AND SPIRAL® PREWIRE LIMITED WARRANTY	59
Head Assembly Console Brackets -US size doors	28		
Vertical Tracks	29		





The information contained in this manual will allow you to operate and maintain your Rytec Spiral® door in a manner which will ensure maximum life and trouble-free operation.

Any unauthorized changes to these procedures, or failure to follow the steps as outlined, will automatically void the warranty. Any changes to the working parts, assemblies, or specifications as written, which are not authorized by Rytec Corporation, will also cancel the warranty. The responsibility for the successful operation and performance of this door lies with the owner.

**DO NOT OPERATE OR PERFORM MAINTENANCE ON THIS DOOR UNTIL YOU READ AND UNDERSTAND THE INSTRUCTIONS CONTAINED IN THIS MANUAL.**

If you have any questions contact your Rytec representative or **call the Rytec Technical Support Department at 800-628-1909**. Always refer to the serial number of the door when calling the representative or Technical Support.

A set of wiring schematics is provided with each individual door specifically covering the control panel and electrical components of that door. The schematics for a door are shipped inside the box that holds the System 4® controller.


## How to find the serial number

### !IMPORTANT!

You will need to know the serial number of your door any time you call Rytec Technical Support.


There are labels displaying the serial number in several locations on the door.

The easiest labels to locate are at roughly eye level on the left side side column of the door and at the bottom of the display on the controller.

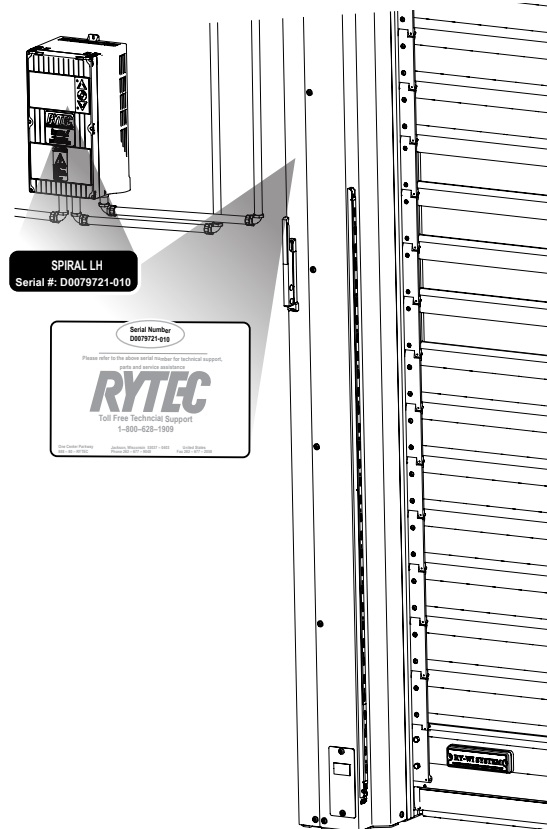

# Rytec naming conventions

The illustration below shows the terms used by Rytec technical support to refer to the major components of your door. Using these terms helps technical support to provide assistance as quickly as possible.

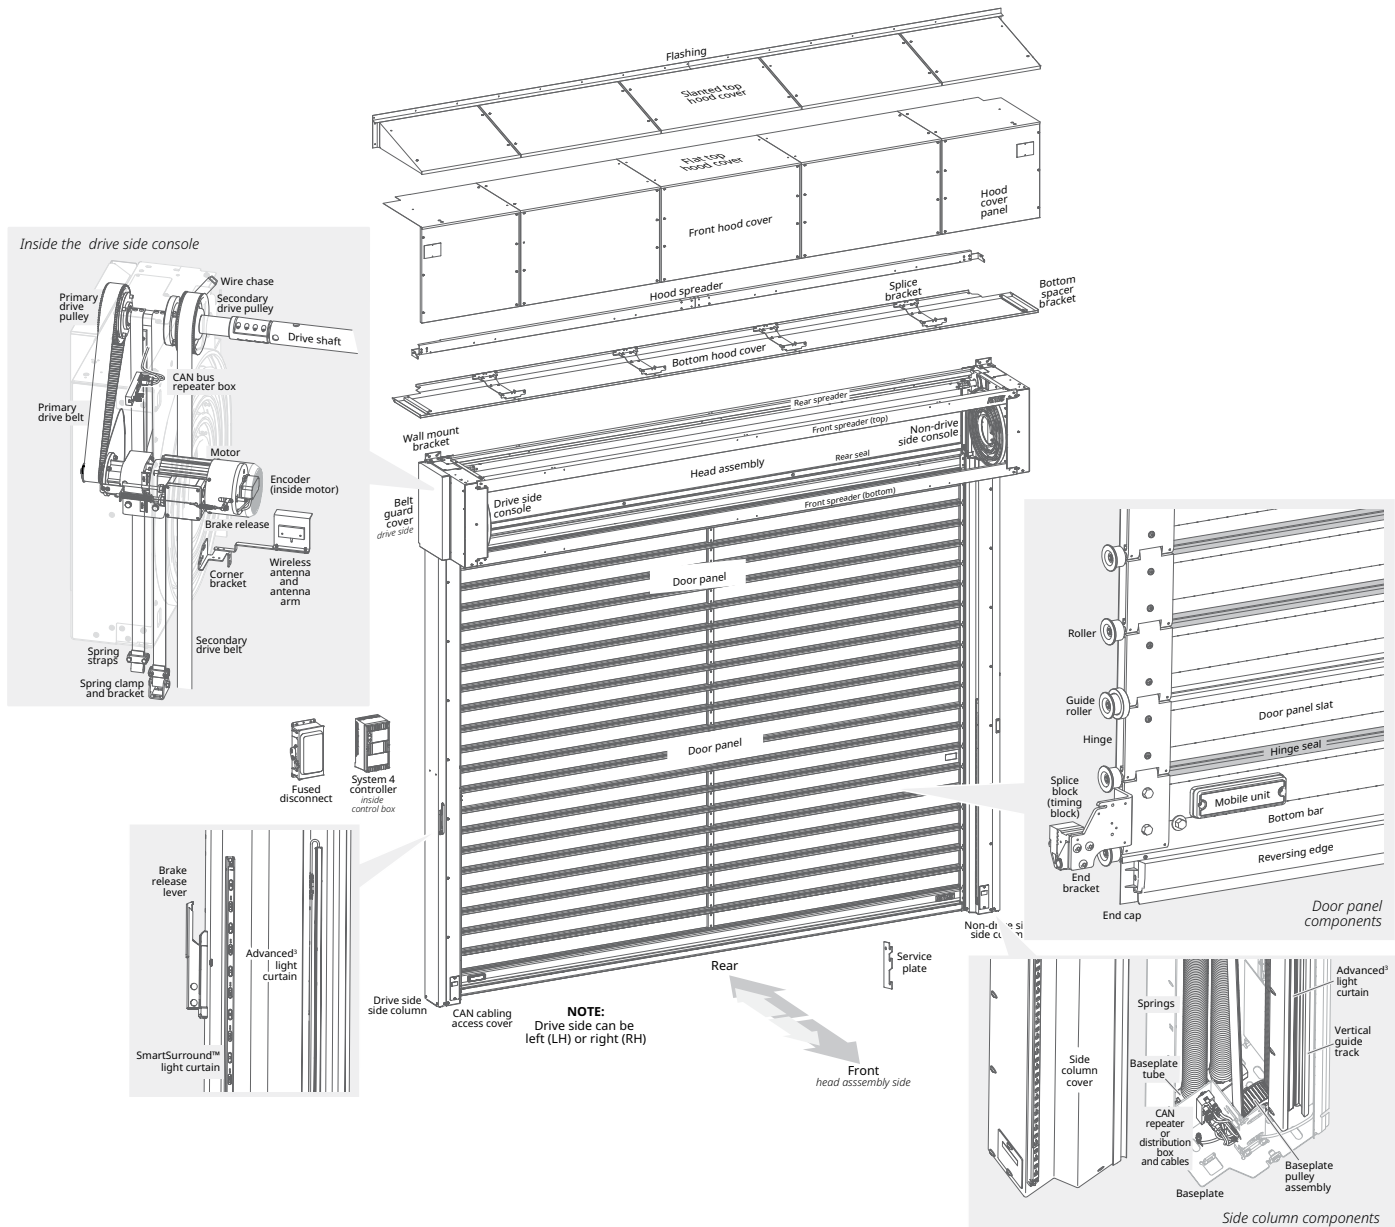

## Safety information and the meaning of signal words

### Summary



Technical content produced by Rytec includes safety information which must be read, understood and obeyed to reduce the risk of death, personal injury, or equipment damage. This information is boxed to set it apart from other text. The boxed text identifies the nature of the hazard and appropriate steps to avoid it.

The safety alert symbol identifies a situation that can result in personal injury. The accompanying signal word indicates the likelihood and potential severity of the injury. The meaning of the signal words are as follows:

	<p><b>WARNING</b></p> <p><b>Warning</b> indicates a hazardous situation which, if not avoided, could result in death or serious injury.</p>
	<p><b>CAUTION</b></p> <p><b>Caution</b> indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.</p>
<p><b>NOTICE</b></p> <p><b>Notice</b> is used to address practices not related to physical injury but which, if not followed, can result in damage to the door or other property.</p>	

## Operational and maintenance safety

### Operational precautions

Observe these precautions while using the door.

- Make sure that all individuals who use the door have been informed about the correct use of the door and all activating devices, and that they understand all safety devices for the door.
- Make sure that only individuals who are trained, qualified and authorized can access the control system, system software and control parameters.
- Do not run through the door opening or attempt to cross the threshold before you are able to do so while walking fully upright.
- Do not drive a vehicle through the door until the door is completely open and has stopped moving.
- Do not climb on or hang on the door.
- Do not touch any part of the door or door frame while the door is opening or closing.
- Only operate the door at the approved supply voltage.
- If the door is to be kept open for a sustained period of time, use the control system to put the door in jog mode, and jog to the desired height. For servicing, set the door to the open position, then set the power disconnect to the OFF position and perform a lockout/tagout. Make sure all personnel are informed that the door is not operational during this time.
- Safety devices must not be modified or put out of services. Do not use the door if there is any indication that a safety device is not operating correctly.

- Maintenance precautions** Observe these precautions while performing maintenance on the door.
- Maintenance of the door and the control system is to be done by trained, qualified and authorized individuals only.
  - Make sure all routine maintenance is performed as scheduled in the instructions for the door.
  - Make sure the power disconnect is set to the OFF position and a correct lockout/tagout procedure has been performed before servicing any component of the door that is powered by the control system.
  - The control system includes components that remain charged after the power has been disconnected. Do not open the control box until at least 5 (five) minutes have elapsed after power is disconnected.
  - Do not pass through or stand in the door panel pathway while the door is being serviced.
  - Make sure you have and use all required Personal Protective Equipment.
  - Make sure that you are aware of the location of all power lines, piping and HVAC systems within the work site.
  - Make sure all components and hardware used to service the door are approved by the manufacturer.

## Object Detection and Alerting Systems

The standard Spiral installation includes both required and optional safety features, which are located in and around the side columns of the door and, as an option, in the bottom bar.


The **SmartSurround™** and **Advanced<sup>3</sup> light curtains** provide three detection planes across the door opening that reverse the closing door, or hold the door open, when an obstruction is detected in the door opening. The light curtains extend from the floor to a height of five to seven feet, depending on the configuration of the door.

The **SmartSurround™ light curtains** also act as intelligent alerts, with a bright LED display that indicates the status of the door:

- **While the door opens or closes:** a repeating sequence of lights that move up or down until the door stops.
- **Before the door closes:** slow blinking lights to indicate a close at normal speed, fast blinking lights to indicate a close at "creep" speed, that match the timing of the Delay to Close timer.
- **If an obstruction is detected:** rapidly blinking lights until the obstruction is cleared.
- **If the RESET button is pressed to stop the door while it is opening:** a solid red display until the door is restarted.

The **reversing edge** is located at the bottom of the bottom bar, and reverses the door if it makes contact with an obstruction while the door is closing. This object detection system is optional on doors with the **SmartSurround™** feature.

Your installation may also include other optional safety devices.

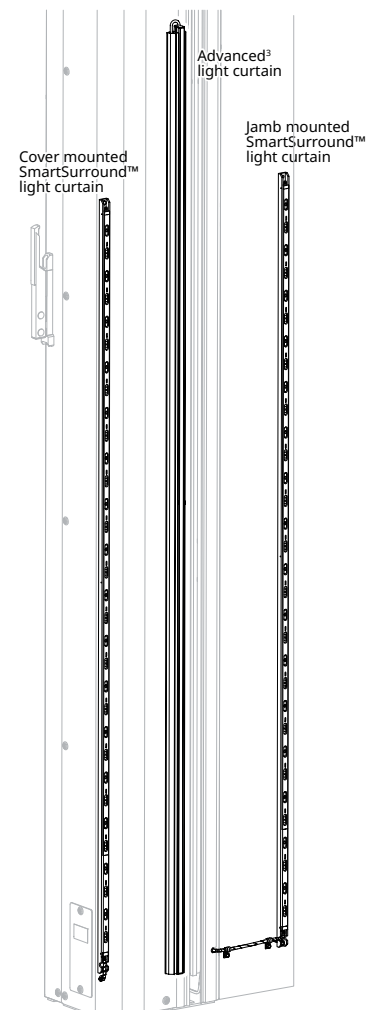


## How to open and close the door using the System 4 controller

The System 4 controller should be installed within sight of the Spiral door.

- **Press the UP arrow** to manually open the door.
- **Press the DOWN arrow** to manually close the door. Under normal operating conditions, the door should always close automatically.

Under normal operating conditions, it should not be necessary to use the System 4 controller. Rytec offers a wide range of automatic and manual activators designed to fit the specific requirements of the installation. Call Rytec Technical support at **800-628-1909** if you have questions about the activators for your door.

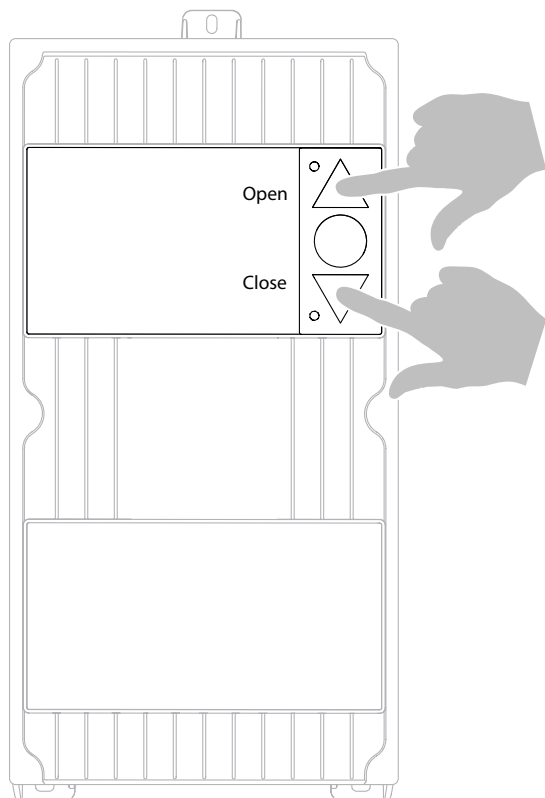


## How to hold the door open - normal use


### NOTICE

Do not use a safety feature or activator, such as a light curtain or motion detector, to hold the door open.

- 1 Press and hold the DOWN arrow and RESET buttons** until the display changes to show jog mode.

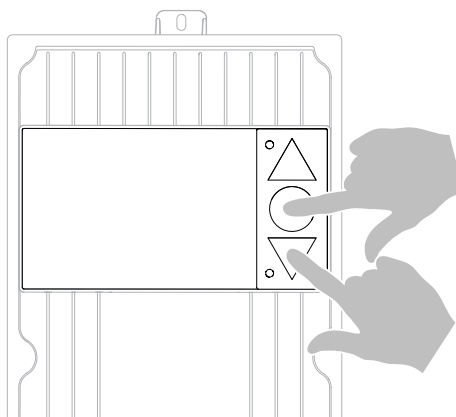


- 2 Press the UP arrow** to set the door to the desired height.

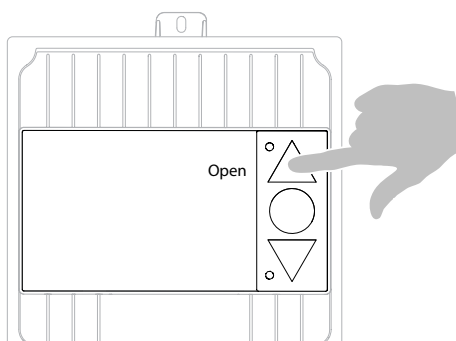


## How to hold the door open to service

- 1 Press the **UP arrow** to open the door.

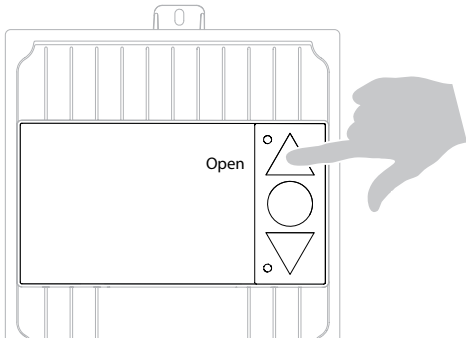

- 2 Turn the **disconnect switch** to the OFF position. The switch may be located on the System 4 controller or on an external disconnect.

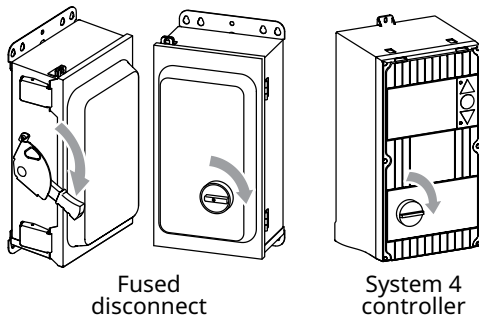

- 3 Perform a **lockout/tagout**.



	<b>⚠ CAUTION</b>
	<p><b>Make sure</b> all users of the door are informed when the door is out of service, and when it is put back into service.</p>


## How to open and close the door manually

- 1 Pull down the brake release lever until the lever is in the fully released position.

### IMPORTANT

There will be some resistance when you push the lever down, but **it should not require excessive force** to reach the fully released position.

**If you feel too much resistance**, you will need to loosen the tension on the brake cable inside the side column.

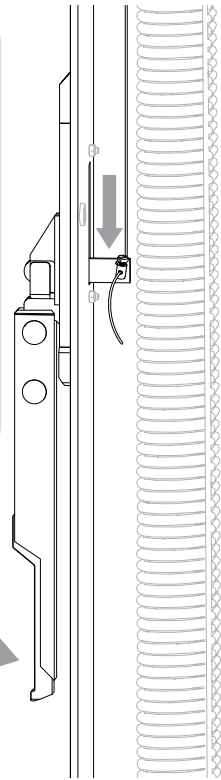

- 2 You can now raise and lower the door panel by hand.

### IMPORTANT

- ▢ Place a vise grips or c-clamp in both vertical tracks under the bottom bar rollers to hold the door in place.
- ▢ The springs in the side columns will prevent the door panel from reaching the fully closed position.

- 3 Release vise grips or clamps and **push up** the brake release lever when you are done to re-engage the brake and allow the door panel to raise and lower automatically.

## Recommended inspection and maintenance schedule

Action	Daily	Quarterly
Inspect visually for damage		
Test door operation		
Test reversing edge		
Test photo eyes or light curtains		
Clean vision panels		
Visually inspect controller, cabling and conduit		
Inspect hardware; tighten where necessary		
Visually inspect side columns and anchoring		
Visually inspect all components in head assembly		
Inspect the primary drive belt		
Inspect the secondary drive belt		
Visually inspect all spreaders and seals		
Inspect seals on both sides of door track		
Inspect the springs, spring strap and brackets in both side columns		
Visually inspect the wireless antenna and wire		
Visually inspect the door panel		
Inspect the full length of the reversing edge		
Check open and close limit; adjust if necessary		
Test brake release and inspect brake release cable		

### NOTICE

**This door does not require lubrication.**

- The gearbox used with this door is a sealed unit. **DO NOT** attempt to lubricate.
- **DO NOT** lubricate any parts, components, or assemblies of this door. This includes the door panel rollers, guides and track. Lubricants will attract dust and dirt, which can cause the door panel to bind.

## Daily maintenance

These steps should be followed every day.

### NOTICE

**!IMPORTANT! Immediately** turn off the door and perform a lockout/tagout if any of the daily checks reveals that the door is not operating properly.

- 1 **Activate** the door using each activating system. **Run** the door through at least three cycles for each system.
  - **Make sure** the door panel rises to the fully open position, remains in place for the standard time, and then closes to the fully closed position.
  - **Make sure** the reversing edge is level when the door is fully closed.
  - **Repeat** for each activating device.
- 2 While the door cycles, **look and listen** for:
  - **Unusual noises** such as grinding, whining or excessive motor noise
  - **Changes in door speed** from one cycle to the next. **NOTE:** The door motion should accelerate, then decelerate, during a normal run up or down.
  - **Excess movement** by the motor, drive or door panels.
  - **Unexpected delay** in activation or unusually long time period before automatically closing.


- 3 **Make sure** the SmartSurround™ operates correctly as the door opens and closes:
  - **An upward cascade of red lights** while the door opens.
  - **A sequence of blinking yellow lights** matching the delay to close timer before the door starts to close.
  - **A downward cascade of red lights** while the door closes.

- 4 **Inspect** the side columns and head assembly for signs of damage or signs of excessive wear.

- 5 **Inspect** the door panels, reversing edge and rollers for damage or signs of excessive wear.

- 6 **Test the SmartSurround™ system:**

- **Make sure** the light curtains flash rapidly whenever either of the planes are broken.
- **If one plane is broken but the other is not**, the light curtains should reverse/hold the door, then the door should count down and descend at creep speed.
- **If all planes are broken**, the light curtains should reverse/hold the door, then the door should count down and descend at normal speed.

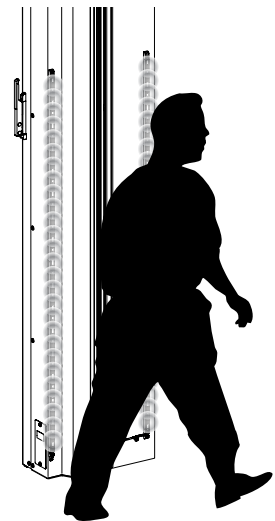




## How to inspect the safety labels

- 1** There are three safety labels on this door: a DASMA label on the side column (depending on the configuration of the door, this can be the left side column or the right side column), a shock warning on the front of the System 4 control box, and a shock warning with instructions for manually moving the door on the bottom of the motor, next to the brake release lever.

**Make sure** all three labels have no rips or tears, that they can be clearly seen, and that all text is readable.

Call Rytec technical support at **800-628-1909** if any of the labels need to be replaced.

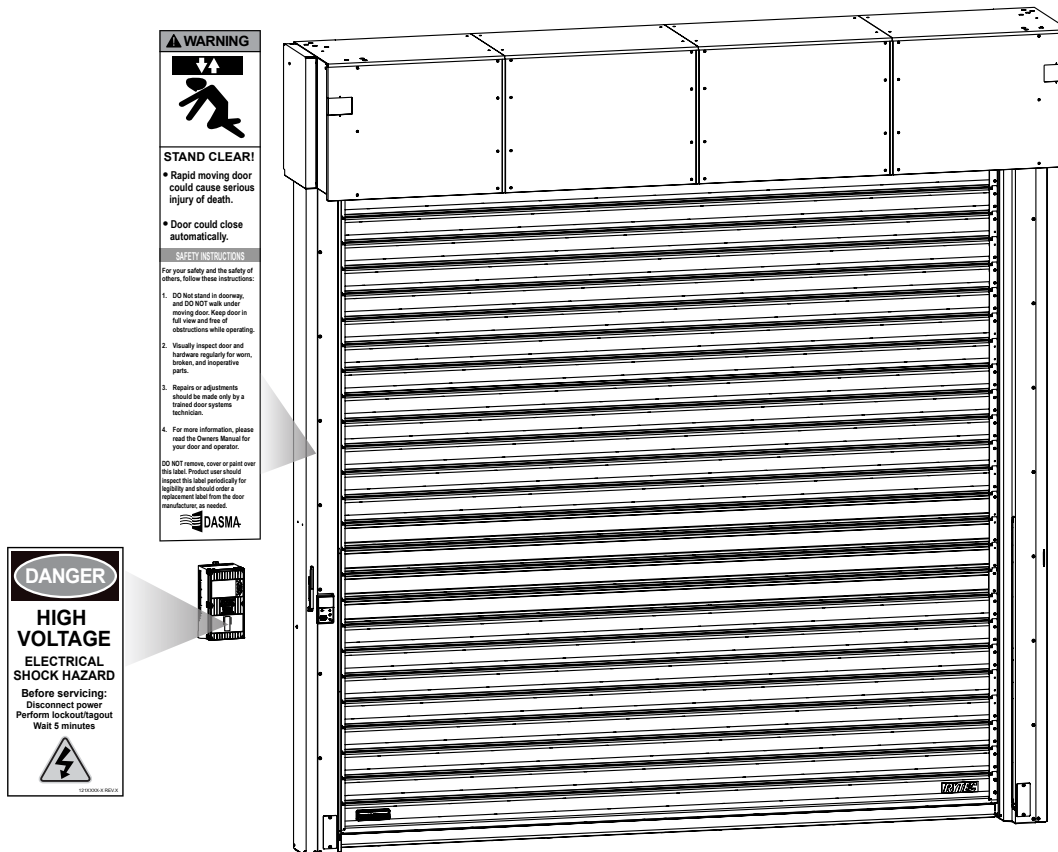

## How to clean the door

### NOTICE

**!IMPORTANT! Do not use bleach, industrial grade cleaners, abrasive cleaners or petroleum-based solvents** on Rytec doors.

### NOTICE

**Rytec doors are self-lubricating.** Do not lubricate the drive track or door panel. Grease and lubricating oil can attract dirt and grime, which may prevent the door from operating correctly.

### NOTICE

Clean the light curtains with a damp cloth soaked in water only. Do not get cleaners of any kind on the light curtain lenses.

**Rain-X® 620036 Plastic Water Repellent** is approved for light curtains.

## General cleaning of the door


Clean side columns with a mix of household cleaner and water. Isopropyl alcohol can be used on hard-to-clean areas.

## Cleaning solid door panels

Clean solid door panels with a mix of household cleaner and water. Isopropyl alcohol can be used on hard-to-clean areas.

## Cleaning full vision panels

Full vision panels should be inspected on a daily basis for dirt, grease, scratches and abrasions. Cleaning must be done when anything else that diminishes panel clarity is observed.

	<b>⚠ WARNING</b>
	<p><b>The fused disconnect must be in the OFF position and a lockout/tagout performed before performing the following procedure</b></p>

## General cleaning

1. Rinse with flowing water.
2. Clean with warm water and small amount of mild non-abrasive soap (dish soap).
3. Lightly rinse vision panels using a water spray.
4. Remove excess water using a clean and dry microfiber or lint free cloth.
5. Use a small squeegee to completely dry all panels.
6. Wipe any additional moisture with dry microfiber or lint free cloth.

## Heavy cleaning and fine scratch removal

1. Remove all surface dirt and dust with warm water spray.
2. Mix a mild non-abrasive soap (dish soap) into a bucket of warm water.
3. Gently wash using a microfiber or lint free cloth keeping the cloth sudsy at all times.
4. Lightly rinse vision panels using a water spray.
5. Remove excess water using a clean and dry microfiber or lint free cloth.
6. Use a small squeegee to completely dry all vision panels.
7. Wipe any additional moisture with a dry microfiber or lint free cloth.
8. Over the counter products can be used to polish the vision panels. Products such as NOVUS Polish #2 ([www.novuspolish.com](http://www.novuspolish.com)) are designed specifically for polycarbonate windows and will help maintain clarity and shine of the vision panels. Follow the instructions on the product for the proper application.

**NOTE:** The product must be non-abrasive and designed specifically for polycarbonate windows. Avoid the use of abrasive cleaners, squeegees and/or other cleaning implements that may mar or gouge the coating.

## For full vision panels with Lexan™ windows, use these cleaning agents

*Aqueous solution one of these detergents:*

- Top Job
- Mr. Clean
- Joy
- Formula 409
- Fantastik

*Organic solvents:*

- Butyl Cellosolve
- Hexcel, F.O. 554
- Kerosene
- Neleco-Placer
- Naphtha (VM&P) Grade
- Turco 5042

**NOTE:** All residual organic solvents should be removed with a secondary rinse.

*Alcohols:*

- Methanol
- Isopropyl

All residual organic solvents should be removed with a secondary rinse.

## Graffiti removal

- Butyl Cellosolve (for removal of paints, marking pen inks, lipstick, etc.). The use of masking tape, adhesive tape or lint removal tools works well for lifting off old weathered paints.
- To remove labels, stickers, etc., the use of kerosene or VM&P naphtha are generally effective.
- When the solvent will not penetrate sticker material, apply heat (hair dryer) to soften the adhesive and promote removal.

## Cleaning and scratch removal using NOVUS #1, #2, and #3

*NOVUS #1 Plastic Clean and Shine*

1. Remove surface dust with soft cloth.
2. Shake well. Apply a light mist of polish.
3. Spread evenly over the entire surface.  
If the surface is extremely dirty, apply NOVUS #1 liberally and wipe using long, sweeping strokes. Do not use pressure at this time or large dirt particles may scratch the Lexan™.
4. Buff with a clean, soft, lint-free cloth.
5. Re-apply NOVUS #1 Polish using short, circular strokes with a clean portion of the cloth.
6. When the surface is thoroughly clean and uniformly covered, buff to a slippery glaze with a clean portion of the cloth. Surfaces buffed to a high glaze are more resistant to dust and future scratching.

**NOTE:** Reapply NOVUS #1 regularly to maintain the antistatic, smudge and scratch resistant properties.

*NOVUS #2 Fine Scratch Remover*

Observe condition of the surface to be treated. The deeper the scratches, the greater the pressure required to remove them. If the surface is dirty, clean with NOVUS #1 first.

1. Shake well. Test in an inconspicuous area.
2. Remove surface dust with clean, soft cloth.
3. Apply polish in circular motion until dry. Apply NOVUS #2 liberally. Using a clean, soft cloth, polish with a firm back-and-forth motion at right angles to the scratches. Keep the cloth saturated with polish at all times.
4. Buff with a clean cloth.
5. When the worst scratches have been polished out, reapply NOVUS #2 uniformly in a circular motion to the entire surface using short, circular strokes and light pressure. Allow to dry to a light haze.
6. Using a clean portion of the cloth, buff the surface to a slippery glaze using firm, short strokes. This procedure is imperative in achieving the best results.


**NOTE:** For heavy scratches, multiple applications of NOVUS #2 or application of NOVUS #3 may be required. Follow with NOVUS #1 for best results.

*NOVUS #3 Heavy Scratch Remover*

1. Shake well. Test in an inconspicuous area.
2. Remove surface dust with a clean, soft cloth.
3. Using a clean, soft cloth, apply NOVUS #3 with firm back and forth strokes at right angle to visible scratches. Apply NOVUS #3 liberally. Using a clean, soft cloth, polish with a firm back-and-forth motion at right angles to the scratches. Keep the cloth saturated with polish at all times.
4. Continue polishing until only the fine scratches remain.
5. **!IMPORTANT!** Using a cloth, remove all of the remaining polish.

## How to order parts


- 1** **!IMPORTANT! Make sure** you have the serial number of your door before you start.

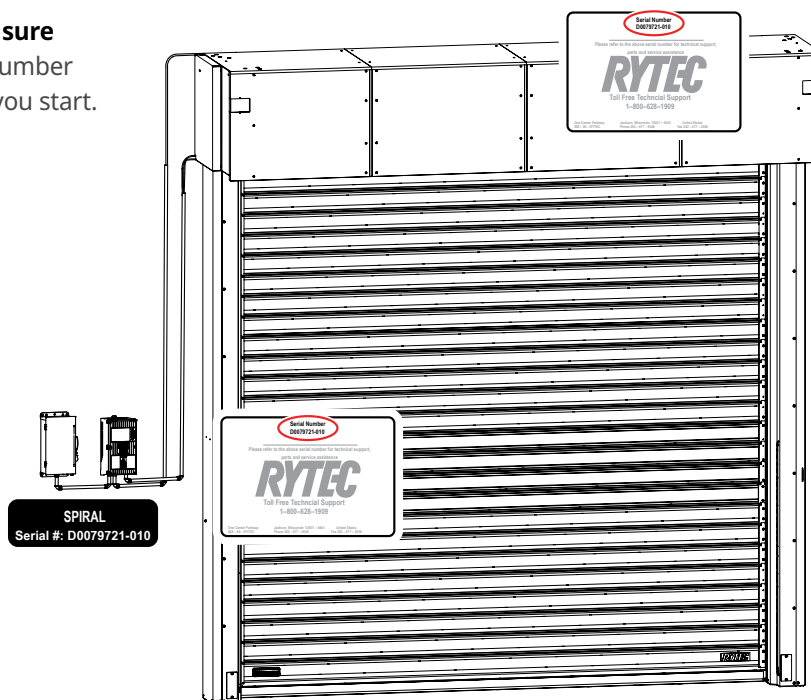

**Check** next to the drive track inside both side columns, and on the control box, for labels showing the serial number.

**!IMPORTANT! Make sure** all numbers match. Tell the person you speak with if they do not.

- 2** **Look** at the head assembly of your door to see if the drive side is left hand (LH) or right hand (RH).

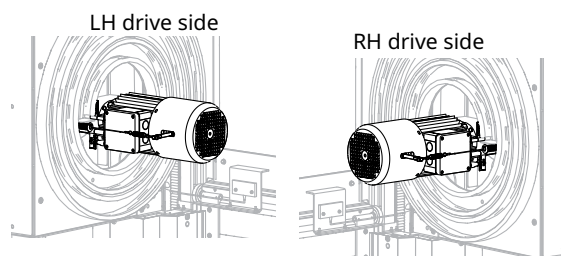

- 3** **Use** the parts lists on the following pages to find the part numbers and descriptions for the parts you need.

- 4** **Call** your local Rytec representative or Rytec technical support at **800-628-1909**. Enter #1 for technical support, #2 for the parts department.



**NOTE:** Rytec Corporation also has an online parts store at [www.rytecdoors.com](http://www.rytecdoors.com).

- You must have a user account to access the site. Contact the Rytec parts department at **800-628-1909 Ext. 2** to request an account.
- The site stocks standard parts such as bearings, spools and encoders, as well as straps at precut lengths. Parts listed as "configured" in this manual **are not available** on the site.
- Some parts are available for next-day shipping.

## How to return unwanted parts

- 1 For returns covered by warranty, call Rytec technical support at **800-628-1909 Ext. 1** for authorization.  
**For returns NOT covered by warranty (physical returns), call the Rytec parts department at 800-628-1909 Ext. 2** for authorization. Requests for quotes, or part orders, should also be e-mailed to **PARTS@RYTECDOORS.COM**.
  - Your call will be redirected if necessary to put you in touch with the correct department.
  - There may be a **restock fee** for the returned part.
  - **Electrical parts which have been energized**, such as the System 4® controller, the brake assembly, the mobile unit, the light curtains or third party activators, cannot be returned.
  - Also, there are restrictions on returns for **configured parts** that were built to match the specifications of your door.

### Warranty return

- 1 Rytec will create a **Return Merchandise Authorization (RMA)** and assign you an **incident number**.
- 2 **You will receive** replacement parts, a prepaid return label, and the RMA paperwork.  
**NOTE:** Rytec may determine that it is not necessary to return the warranted parts in order to receive the replacement parts.
- 3 Use the box and prepaid label to return the warranted parts to Rytec **within 30 days of receiving the replacements**.  
**!IMPORTANT!** You must include the RMA paperwork with the returned parts.

### Physical return

- 1 Rytec will assign you an **incident number**.
- 2 **Box and return** the parts.  
**!IMPORTANT!**  
**You must include the incident number with the returned parts.**  
 Unless you are told otherwise by Rytec, shipping costs for a physical return **are your responsibility**. Call the Rytec parts department at **800-628-1909 Ext. 2** if you have any questions.
- 3 **When Rytec receives the parts**, we will inspect them. When we have determined the parts are in good working order, we will issue a refund to your account, or send a check by mail **within 30 days**.

## Why you may be sent substitute parts

Many Rytec doors are custom engineered to meet the unique needs of the installation site, so the parts used for your door may be different from those shown in this manual.

If a part has been improved or updated since your installation, the new part will be substituted for the part ordered. The new part may have a revised part number.

## Rytec Technical Knowledge Center

The Rytec Technical Knowledge Center, reached via the Customer Support page at **www.rytecdoors.com**, holds manuals, service bulletins, and video presentations for all Rytec model doors.

# Side Column Assemblies *all doors*

**1072388-1X** ASSY,SC,STT-L,LH  
**1072389-1X** ASSY,SC,SST-L,LH  
**1072382-1X** ASSY,SC,STT-S,LH  
**1072383-1X** ASSY,SC,SST-S,LH  
**1072386-1X** ASSY,SC,SST-US,LH

*Includes column, one piece (shown) or spliced, cover, one piece (shown) or spliced, seal, baseplate and CAN brackets (see page 18), vertical track (see page 24), brake release lever (see page 39), light curtains (see page 40), CAN cabling (see page 41).*

**Configured part: requires door serial number to order**  
 Hardware listed below

*Side column variations based on:  
 drive side, prewire option,  
 SmartSurround™ (LGCA)  
 option, BTA4 option*

*Side column cover variations based on:  
 SmartSurround™ (LGCA) option,  
 BTA4 option*

**1072388-1X** ASSY,SC,STT-L,LH  
**1072389-1X** ASSY,SC,SST-L,LH  
**1072382-1X** ASSY,SC,STT-S,LH  
**1072383-1X** ASSY,SC,SST-S,LH  
**1072386-1X** ASSY,SC,SST-US,LH

*Includes column, one piece (shown) or spliced, cover, one piece (shown) or spliced, seal, baseplate and CAN brackets (see page 18), vertical track (see page 24), brake release lever (see page 39), light curtains (see page 40), CAN cabling (see page 41).*

**Configured part: requires door serial number to order**  
 Hardware listed below

**1072346-1X**  
 ASSY,COVER,SIDE COLUMN,LH,SST-L  
**1072345-1X**  
 ASSY,COVER,SIDE COLUMN,LH,STT-L  
**1072347-1X**  
 ASSY,COVER,SIDE COLUMN,LH,STT-S  
 (-S size doors)  
**1072344-1X**  
 ASSY,COVER,SIDE COLUMN,LH,SST-US

*One piece (shown) or spliced  
 Includes seal,  
 access cover (see page 18).  
 Configured part: requires door serial number to order  
 Hardware listed below*

**1072346-2X**  
 ASSY,COVER,SIDE COLUMN,RH,SST-L  
**1072345-2X**  
 ASSY,COVER,SIDE COLUMN,RH,STT-L  
**1072347-2X**  
 ASSY,COVER,SIDE COLUMN,RH,STT-S  
 (-S size doors)  
**1072344-2X**  
 ASSY,COVER,SIDE COLUMN,RH,SST-US

*One piece or spliced (shown)  
 Includes seal,  
 access cover (see page 18).  
 Configured part: requires door serial number to order  
 Hardware listed below*

**SC SEAL**  
*Seal for side column cover; field trim to size.  
 Part number based on door size:  
 requires door serial number to order*

**SC SEAL**  
*Seal for side column; field notch  
 for SmartSurround® cable.  
 Configured part: requires door  
 serial number to order*

**NOTE: drive side  
 may be LH or RH.**

*\* = multiple variations of part  
 number: use wildcard to search  
 (Rytec parts representative)*

**NOTE: part numbers vary  
 based on door model**

**STT-L** Transpaent door slats, small  
**SST-L** Solid door slats, small  
**STT-S** Transpaent door slats, large  
**SST-S** Solid door slats, large  
**SST-US** Solid door slats, extra large

## Hardware – Order Separately

PN/Description	Hardware	Description	Qty
ASSY,SC,2-PC*	5550289-0Z04	BLIND RIVET FLUSH HEAD 0.19OD 0.33GP SS	16
ASSY,COVER*	01900820	BSCSF,M8-1.25 X 16,T40,ZN	v
ASSY,COVER,2-PC*	5550289-0Z04	BLIND RIVET FLUSH HEAD 0.19OD 0.33GP SS	16



5550289-0Z04




01900820

*v = varies based on height of door*


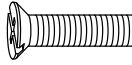
 
 
 

 
 


**1210738-0**  
 DOME PLUG, 0.50 DIA HOLE,  
 0.25 MAX WALL, NYLON, BLK

## Side Column Assemblies - Baseplate Area *all doors*

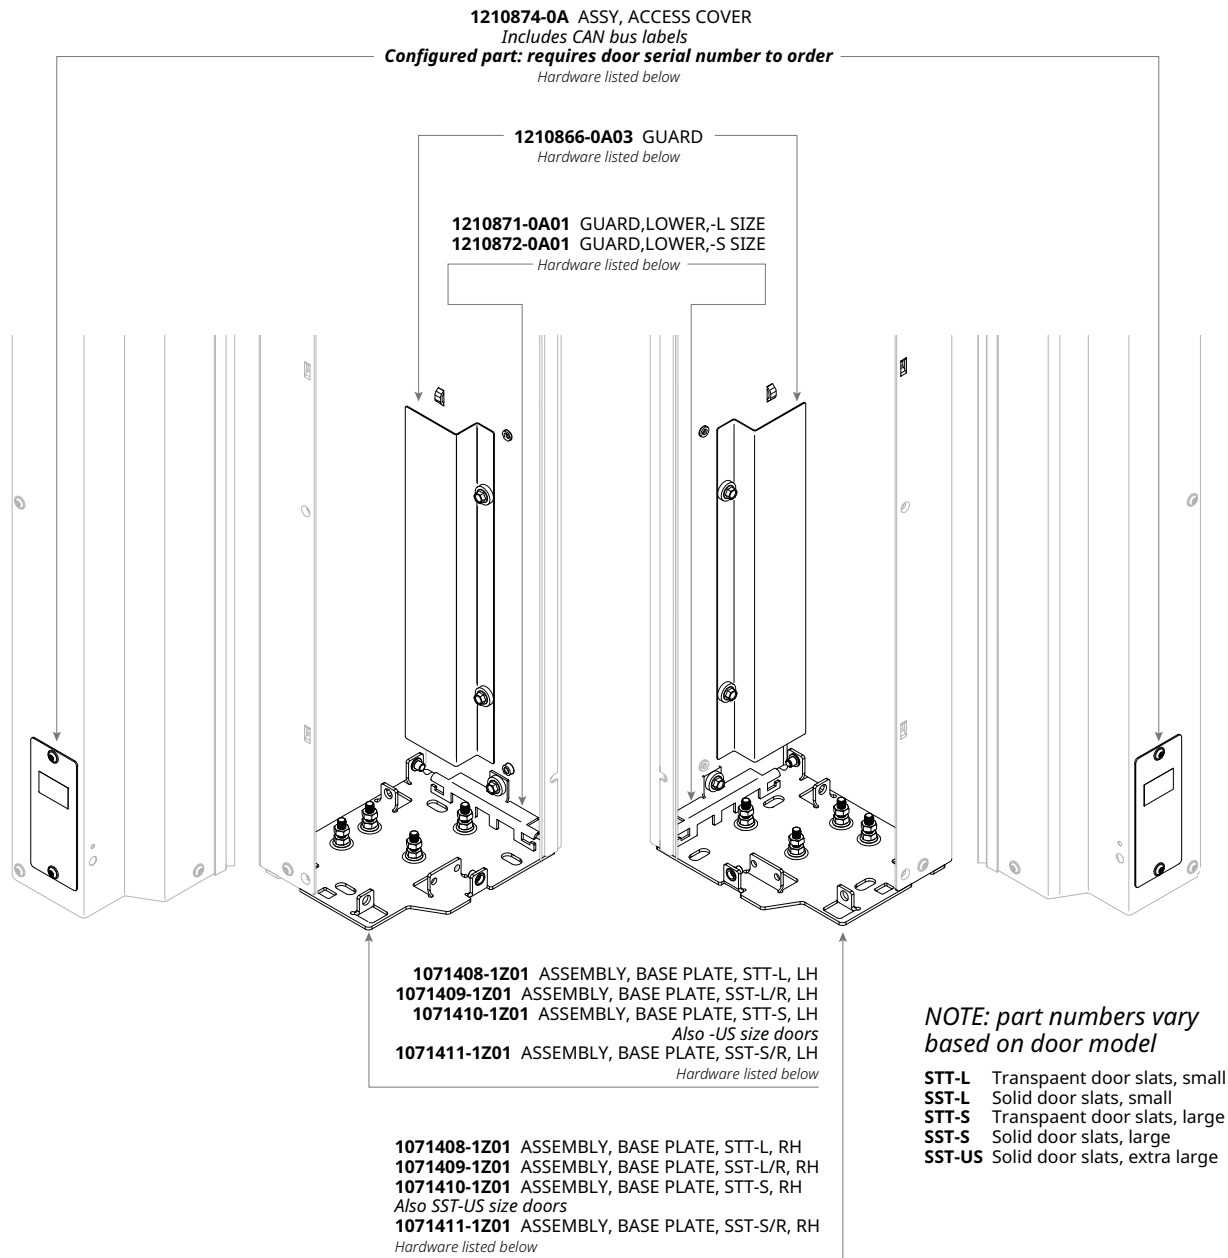


### Hardware - Order Separately

PN/Description	Hardware	Description	Qty			
BASEPLATE	5550301-0Z01	HFSMS, M8-1.25X8 CL10.9 ZN	1			
	5550296-0Z01	RIV-NUT, M8-1.25, AHS4T-8125-7.9	3			
	01300530	SCREW, M10 X 30, DIN 963-4.8	2			
	01270060	NUT, M10 HEX, DIN 934-8 ZN	4			
	01900820	BSCSF, M8-1.25 X 20, T40, ZN	3			
1210866	5550300-0Z01	HFSMS, M8-1.25X12 CL10.9 ZN	2			
	1210870-0A	SPACER, ROUND	2			
1210868	01900816	BSCSF, M8-1.25 X 16, T40, ZN	2			
1210871/72	5550300-0Z01	HFSMS, M8-1.25X12 CL10.9 ZN	1			
	1210870-0A	SPACER, ROUND	1			
				5550296-0Z01	5550300-0Z01	5550301-0Z01



# Spreaders and Seals *all doors*


**1071551-0X**  
FRONT SPREADER, STT-L, SST-L  
**Configured part: requires door serial number to order**

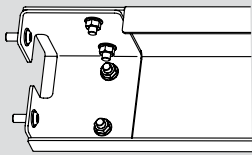

**1071542-0Z01**  
BKT, UPPER FRONT CORNER, STT-L, SST-L  
**Qty: 2**  
Hardware listed below

**1071553-0X**  
FRONT SPREADER, STT-S, SST-S  
No brackets  
**Configured part: requires door serial number to order**  
Hardware listed below

**1071606-0X**  
FRNT UPPER SPRDR ASSY (-US size doors)  
**Configured part: requires door serial number to order**

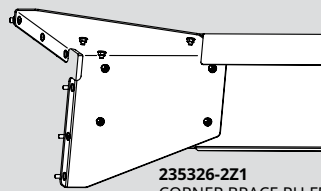

**235326-2Z1**  
CORNER BRACE,RH,FRONT SPREAD  
**235326-1Z1**  
CORNER BRACE,LH,FRONT SPREAD  
Hardware listed below


**1071552-0X** REAR SPREADER, STT-L, SST-L  
**1071554-0X** REAR SPREADER, STT-S, SST-S  
**1071614-0X** REAR SPREADER ASSEMBLY (-US size doors)  
**Configured part: requires door serial number to order**  
Hardware listed below

**1071709-0A** RACEWAY, NON-METALLIC, SPIRAL, L  
**1071709-0C** RACEWAY, NON-METALLIC, SPIRAL, S  
**1071709-0B** RACEWAY, NON-METALLIC, SPIRAL, US  
**Qty: 2**

**-S size doors**  
**1071553-0X** FRONT SPREADER, STT-S, SST-S  
**Configured part: requires door serial number to order**  
**-US size doors**  
**1071610-0X** FRNT LOWER SPRDR ASSY  
**Configured part: requires door serial number to order**  
Hardware listed below

**STT-S,-L**  
**231833** SEAL ASSY, REAR HORIZONTAL, STT  
**Configured part: requires door serial number to order**

**SST-L,-S,-US**  
**237867** SEAL, REAR HORIZONTAL, SST  
**Configured part: requires door serial number to order**

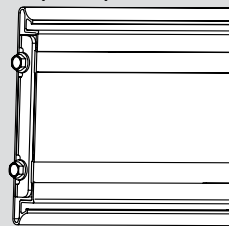

**237868**  
**237868** END BRKT ASSY, REAR SPREADER  
**Qty: 2**  
Hardware listed below

## Hardware – Order Separately

Part Number	Hardware	Description	Qty
1071542-0Z01	01900820	BSCSF,M8-1.25 X 20,T40,ZN	6
	01901508	NUT, M8 FLANGED	4
1071553-0X, 1071610-0X	01900820	BSCSF,M8-1.25 X 20,T40,ZN	10
	01900820	BSCSF,M8-1.25 X 20,T40,ZN	13
REAR SPREADER	01900820	BSCSF,M8-1.25 X 20,T40,ZN	2
237867	01900812	BSCSF,M8-1.25 X 12,T40,ZN	4
237868	5550259-0Z01	HFSMS,M6-1.0x20mm,ZN	2
231833	5550259-0Z01	HFSMS,M6-1.0x20mm,ZN	4



01900812



01900820



5550259-0Z01



01901508


## Head Assembly Consoles STT-L (full vision slats, small size) doors

**1072396-1A**  
ASSY, HEAD, B, STT-L, LH DRIVE


**1071464-1X**  
ASSEMBLY, CONSOLE, B, LH, STT-L, SST-L  
*Hardware listed below*

**1072396-2A**  
ASSY, HEAD, B, STT-L, RH DRIVE

**1071464-2X**  
ASSEMBLY, CONSOLE, B, RH, STT-L, SST-L  
*Hardware listed below*

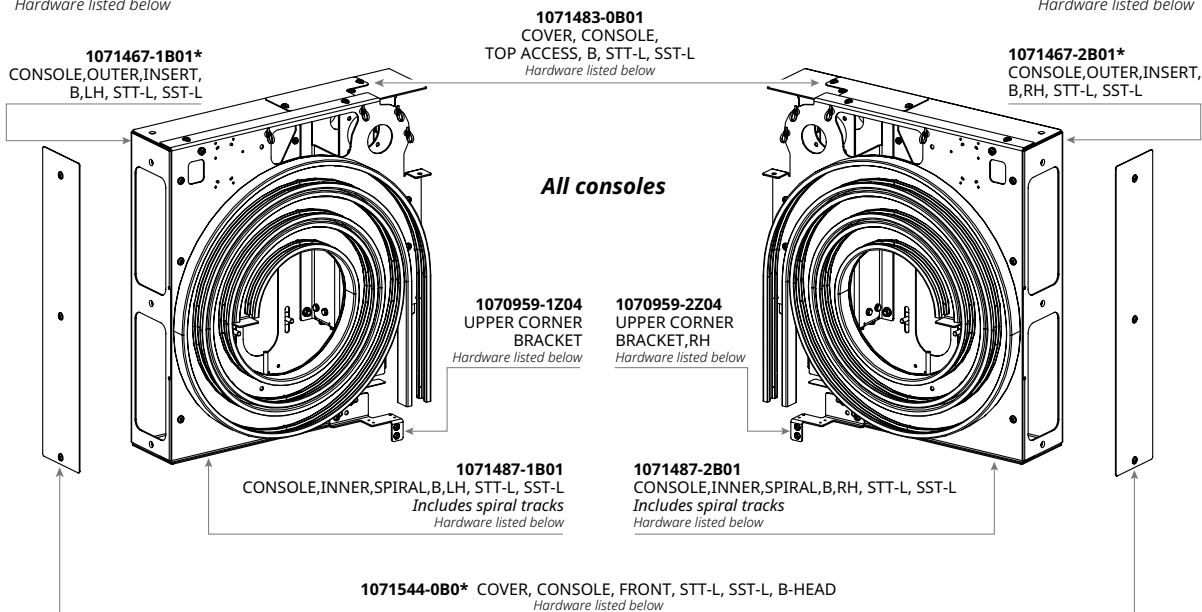

### Non-drive side consoles

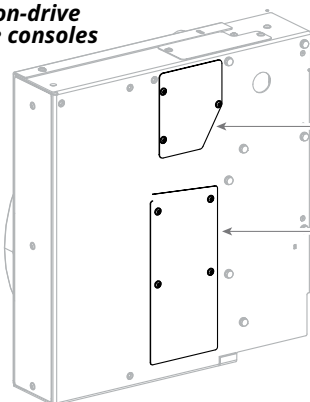


**1071497-0B01**  
COVER, CONSOLE, SIDE ACCESS, B, STT-L, SST-L  
*Hardware listed below*

**1071546-0Z01**  
COVER, CONSOLE, NON-DRIVE SIDE  
*Hardware listed below*

**1071482-1B01\***  
COVER, BELT GUARD, B, LH, STT-L, SST-L  
**1071482-2B01\***  
COVER, BELT GUARD, B, RH, STT-L, SST-L  
*Hardware listed below*

### Drive side consoles

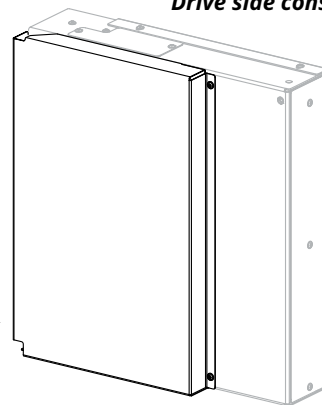


**All parts are configured parts:  
require door serial number to order**

\* = see page 29 for Prewire version of this part

### Hardware – Order Separately

Part Number	Hardware	Description	Qty
Consoles	01260310	HHCS, M10X20, DIN 933-8.8 ZN	5
	01060043	WASHER, 10.5mm FLAT, DIN 125A ZN	5
	5550304-0Z01	HWNSTP M8-1.25 STL	5
1070959-X	01900820	BSCSF, M8-1.25 X 20, T40, ZN	3
1071487-X	01900820	BSCSF, M8-1.25 X 20, T40, ZN	4
1071482-X	01900820	BSCSF, M8-1.25 X 20, T40, ZN	2
	01260274	HHCS, M8X20, DIN 933 - 8.8 ZN	
1071483-0B01	01900820	BSCSF, M8-1.25 X 20, T40, ZN	3
1071497-0B01	01900820	BSCSF, M8-1.25 X 20, T40, ZN	3
1071546-0Z01	01900820	BSCSF, M8-1.25 X 20, T40, ZN	4
	01901508	NUT, M8 FLANGED	4
1071544-0B0	01900820	BSCSF, M8-1.25 X 20, T40, ZN	3

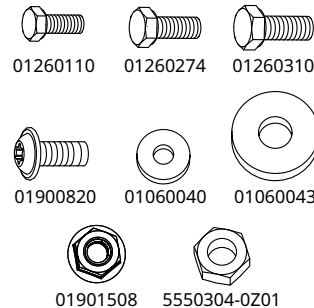


## Head Assembly Consoles SST-L (solid slats, small size) doors

**1072397-1A**  
ASSY, HEAD, B, SST-L, LH DRIVE


**1071464-1X**  
ASSEMBLY, CONSOLE, B, LH, STT-L, SST-L  
Hardware listed below

**1072397-2A**  
ASSY, HEAD, B, SST-L, RH DRIVE


**1071464-2X**  
ASSEMBLY, CONSOLE, B, RH, STT-L, SST-L  
Hardware listed below

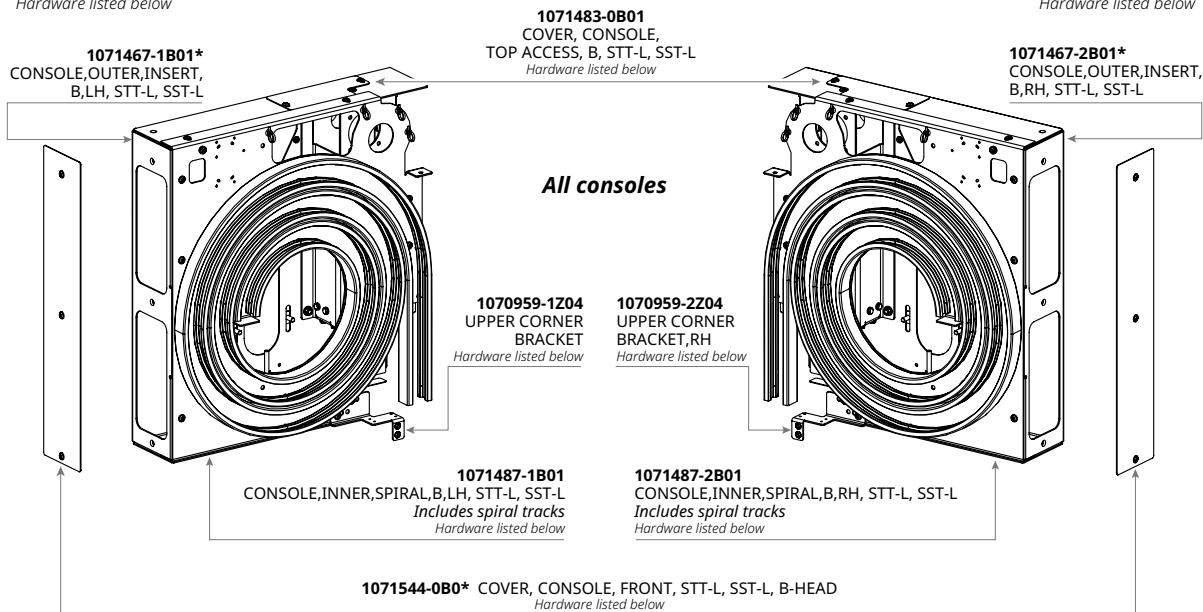

### Non-drive side consoles

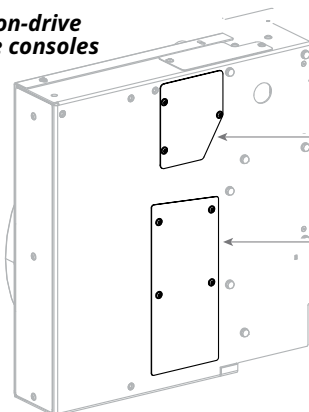

### Drive side consoles

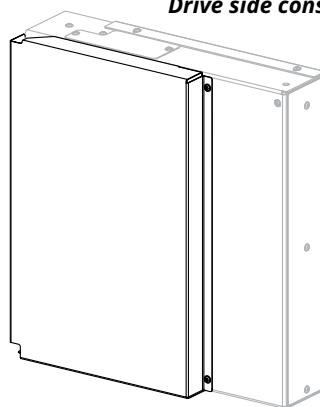

**All parts are configured parts:  
require door serial number to order**


\* = see page 29 for Prewire version of this part

### Hardware – Order Separately

Part Number	Hardware	Description	Qty
Consoles	01260310	HHCS, M10X20, DIN 933-8.8 ZN	5
	01060043	WASHER, 10.5mm FLAT, DIN 125A ZN	5
	5550304-0Z01	HWNSTP M8-1.25 STL	5
1070959-X	01900820	BSCSF, M8-1.25 X 20, T40, ZN	3
1071487-X	01900820	BSCSF, M8-1.25 X 20, T40, ZN	4
1071482-X	01900820	BSCSF, M8-1.25 X 20, T40, ZN	2
	01260274	HHCS, M8X20, DIN 933 - 8.8 ZN	
1071483-0B01	01900820	BSCSF, M8-1.25 X 20, T40, ZN	3
1071497-0B01	01900820	BSCSF, M8-1.25 X 20, T40, ZN	3
1071546-0Z01	01900820	BSCSF, M8-1.25 X 20, T40, ZN	4
	01901508	NUT, M8 FLANGED	4
1071544-0B0	01900820	BSCSF, M8-1.25 X 20, T40, ZN	3




## Head Assembly Consoles STT-S (full vision slats, large size) doors

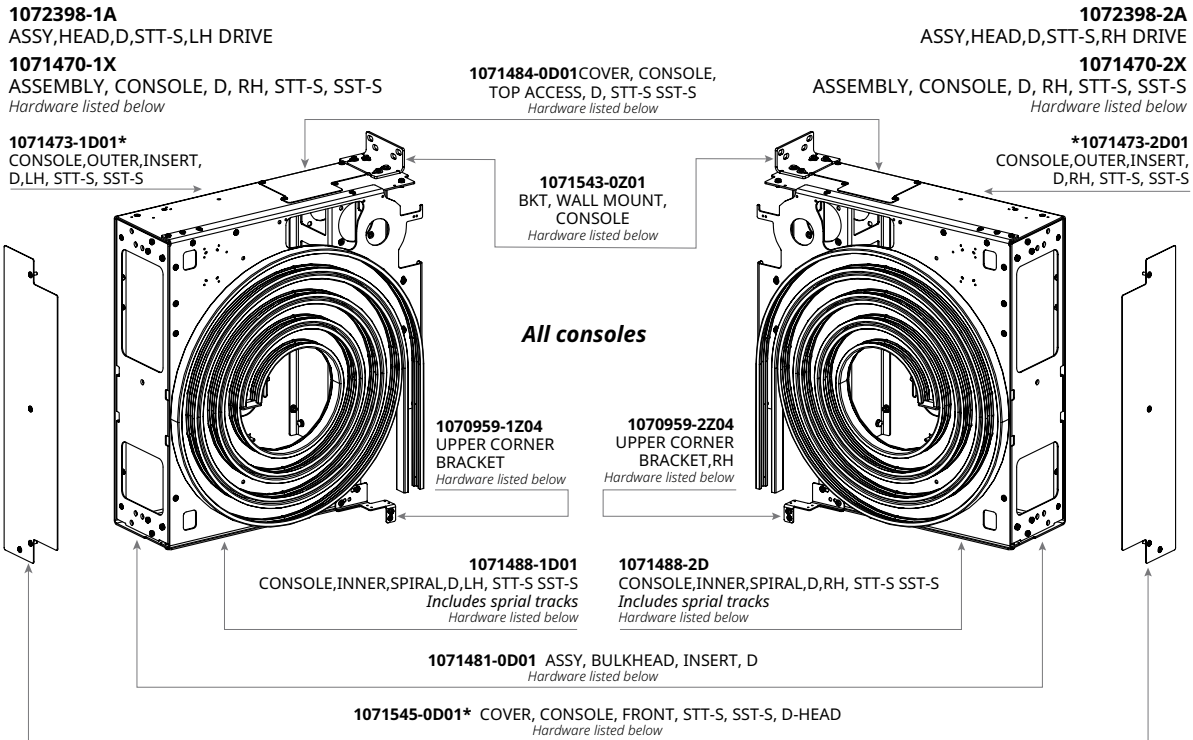


**All parts are  
configured parts:  
require door serial  
number to order**

\* = see page 30 for  
Prewire version of this part

**Drive side consoles**

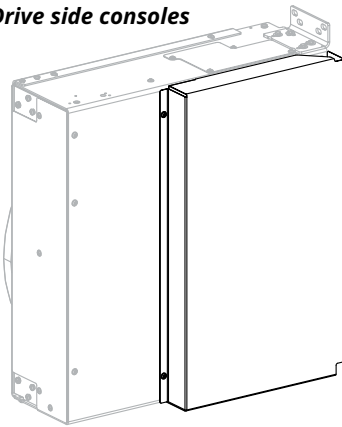

**Non-drive side  
consoles**

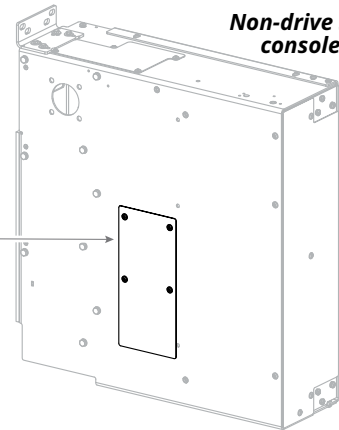


**1071546-0Z01**  
COVER, CONSOLE, NON-DRIVE SIDE  
*Hardware listed below*

**1071482-1D01\***  
COVER, BELT GUARD, D, LH, STT-S, SST-S  
**1071482-2D01\***  
COVER, BELT GUARD, D, RH, STT-S, SST-S  
*Hardware listed below*

### Hardware – Order Separately

Part Number	Hardware	Description	Qty
Consoles	01260310	HHCS, M10X20, DIN 933-8.8 ZN	5
	01060043	WASHER, 10.5mm FLAT, DIN 125A ZN	5
	5550304-0Z01	HWNSTP M8-1.25 STL	5
1071571-X	01900820	BSCSF, M8-1.25 X 20, T40, ZN	4
231352D-X	01900820	BSCSF, M8-1.25 X 20, T40, ZN	4
	01901508	NUT, M8 FLANGED	4
1071543-0Z01	01260282	HHCS, M8X30, DIN 933 - 8.8 ZN	4
	01800060	WASHER, 8.4MM, DIN 9021A ZN	4
	01901508	NUT, M8 FLANGED	2
1071484-0D01	01900820	BSCSF, M8-1.25 X 20, T40, ZN	3
1071488-X	01900820	BSCSF, M8-1.25 X 20, T40, ZN	7
1071482-X	01900820	BSCSF, M8-1.25 X 20, T40, ZN	4
1071545-0D01	01900820	BSCSF, M8-1.25 X 20, T40, ZN	4
1071546-0Z01	01900820	BSCSF, M8-1.25 X 20, T40, ZN	4
	01901508	NUT, M8 FLANGED	4
1070959-X	01900820	BSCSF, M8-1.25 X 20, T40, ZN	3

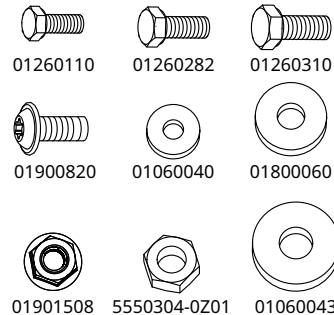

## Head Assembly Consoles SST-S (solid slats, large size) doors

**1072399-1A**  
ASSY, HEAD, D, SST-S, LH DRIVE

**1071470-1X**  
ASSEMBLY, CONSOLE, D, RH, STT-S, SST-S  
*Hardware listed below*

**1071473-2D01\***  
CONSOLE, OUTER, INSERT,  
D, RH, STT-S, SST-S


**1071484-0D01** COVER, CONSOLE,  
TOP ACCESS, D, STT-S SST-S  
*Hardware listed below*

**1071543-0Z01**  
BKT, WALL MOUNT,  
CONSOLE  
*Hardware listed below*


**1072399-2A**  
ASSY, HEAD, D, SST-S, RH DRIVE

**1071470-2X**  
ASSEMBLY, CONSOLE, D, RH, STT-S, SST-S  
*Hardware listed below*

**1071473-2D01\***  
CONSOLE, OUTER, INSERT,  
D, RH, STT-S, SST-S

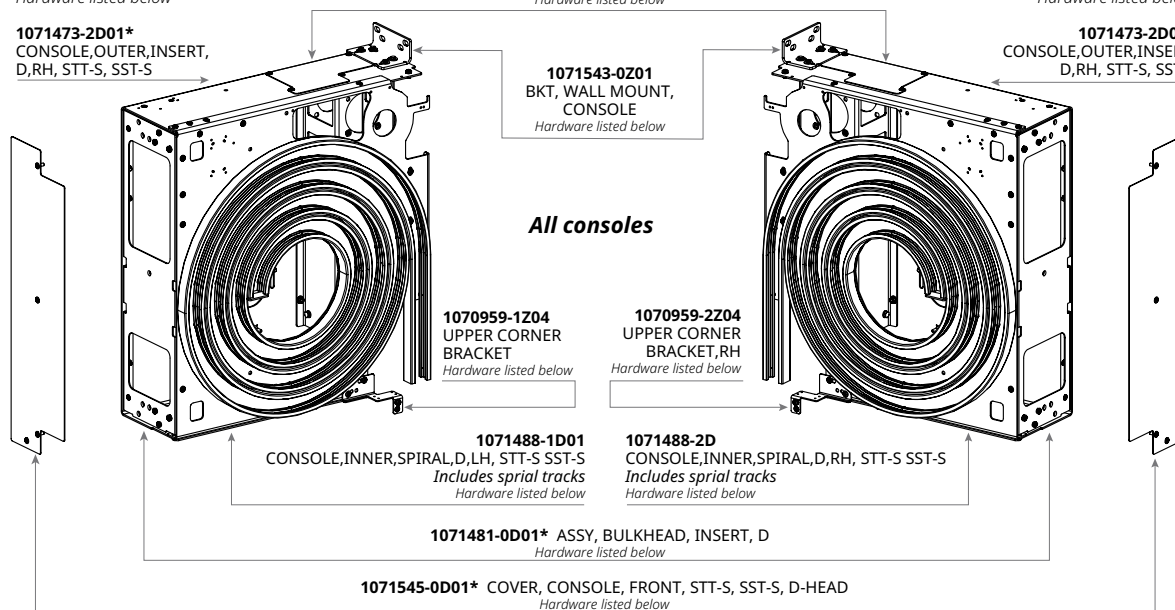

**Drive side consoles**

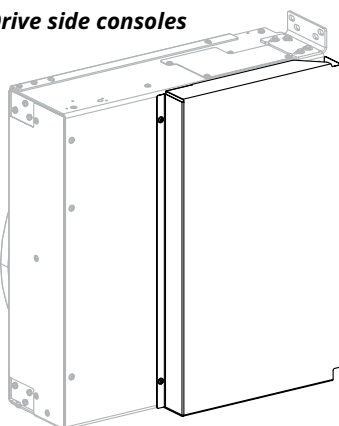


**All parts are  
configured parts:  
require door serial  
number to order**

\* = see page 30 for  
Prewire version of this part

**1071546-0Z01**  
COVER, CONSOLE, NON-DRIVE SIDE  
*Hardware listed below*


**1071482-1D01\***  
COVER, BELT GUARD, D, LH, STT-S, SST-S  
**1071482-2D01\***  
COVER, BELT GUARD, D, RH, STT-S, SST-S  
*Hardware listed below*

**Non-drive side consoles**

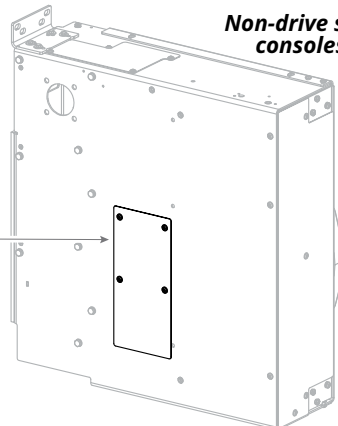


### Hardware – Order Separately

Part Number	Hardware	Description	Qty
Consoles	01260310	HHCS, M10X20, DIN 933-8.8 ZN	5
	01060043	WASHER, 10.5mm FLAT, DIN 125A ZN	5
	5550304-0Z01	HWNSTP M8-1.25 STL	5
1071571-X	01900820	BSCSF, M8-1.25 X 20, T40, ZN	4
231352D-X	01900820	BSCSF, M8-1.25 X 20, T40, ZN	4
	01901508	NUT, M8 FLANGED	4
1071543-0Z01	01260282	HHCS, M8X30, DIN 933 - 8.8 ZN	4
	01800060	WASHER, 8.4MM, DIN 9021A ZN	4
	01901508	NUT, M8 FLANGED	2
1071484-0D01	01900820	BSCSF, M8-1.25 X 20, T40, ZN	3
1071488-X	01900820	BSCSF, M8-1.25 X 20, T40, ZN	7
1071482-X	01900820	BSCSF, M8-1.25 X 20, T40, ZN	4
1071545-0D01	01900820	BSCSF, M8-1.25 X 20, T40, ZN	4
1071546-0Z01	01900820	BSCSF, M8-1.25 X 20, T40, ZN	4
	01901508	NUT, M8 FLANGED	4
1070959-X	01900820	BSCSF, M8-1.25 X 20, T40, ZN	3

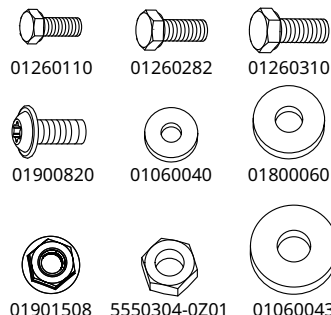


## Head Assembly Consoles -US size doors

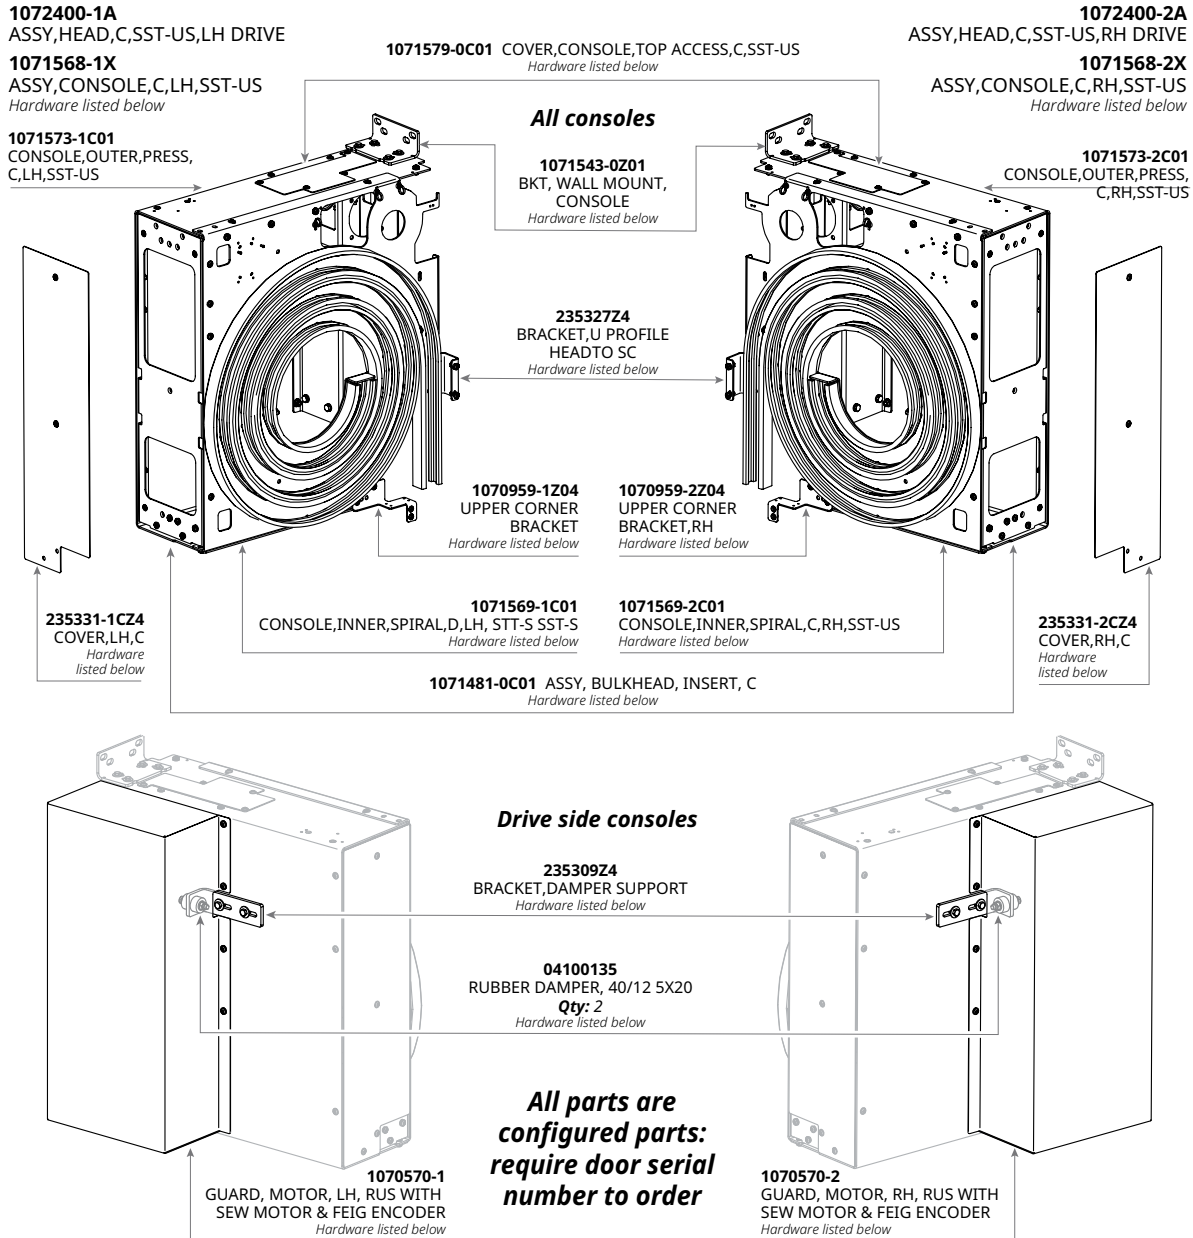

### Hardware – Order Separately


Part Number	Hardware	Description	Qty
Consoles	01260310	HHCS, M10X20, DIN 933-8.8 ZN	5
	01060043	WASHER, 10.5mm FLAT, DIN 125A ZN	5
	5550304-0Z01	HWNSTP M8-1.25 STL	5
231352C-X	01260110	HHCS, M6-1.0X14, DIN 933-8.8 ZN, S593 PATCH	19
	01060040	WASHER, 6.4MM FLAT, 125A ZN	19
1071569-X	01900820	BSCSF, M8-1.25 X 20, T40, ZN	4
1071543-0Z01	01260282	HHCS, M8X30, DIN 933 - 8.8 ZN	4
	01800060	WASHER, 8.4MM, DIN 9021A ZN	4
	01901508	NUT, M8 FLANGED	2
	01900820	BSCSF, M8-1.25 X 20, T40, ZN	3
1071579-0C01	01900820	BSCSF, M8-1.25 X 20, T40, ZN	7
1071481-0C01	01900820	BSCSF, M8-1.25 X 20, T40, ZN	6
1070570-X	01900820	NUT, NYLOC, M12-1.75, ZN	2
235309Z4	0021670	WASHER, 10.5MM, DIN 9021A ZN	2
	01800080	HWNSTP M10-1.5 STL	2
	01260428	HHCS, M12-1.75X80, DIN 933-8.8 ZN	1
04100135	01060044	WASHER, 13mm FLAT, DIN 125A ZN	2
	01335102	NUT, NYLOC, M12-1.75, ZN	2
	01900820	BSCSF, M8-1.25 X 20, T40, ZN	2
235331-X	01900820	BSCSF, M8-1.25 X 20, T40, ZN	3
1070959-X	01900820	BSCSF, M8-1.25 X 20, T40, ZN	3

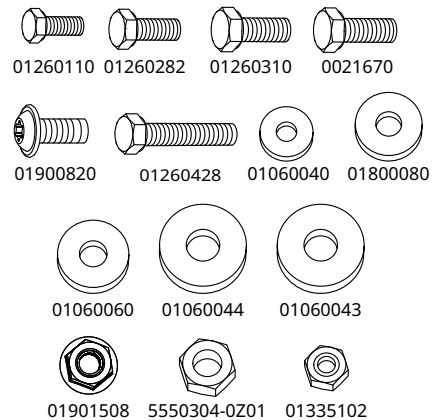




# Head Assembly Console Brackets -L and -S size doors

## All consoles -L size doors

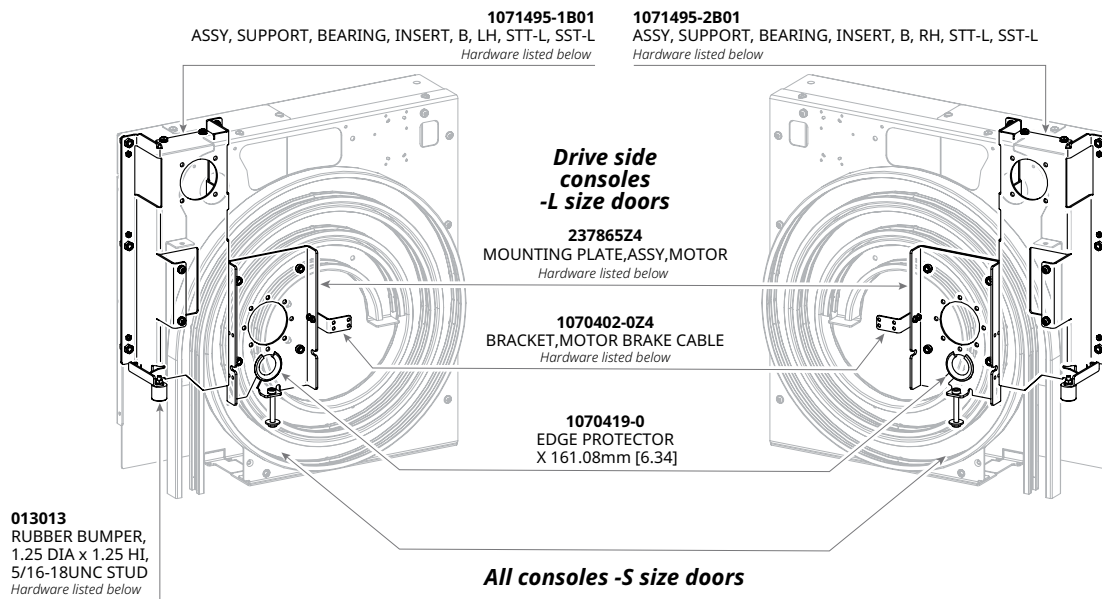


## All consoles -S size doors

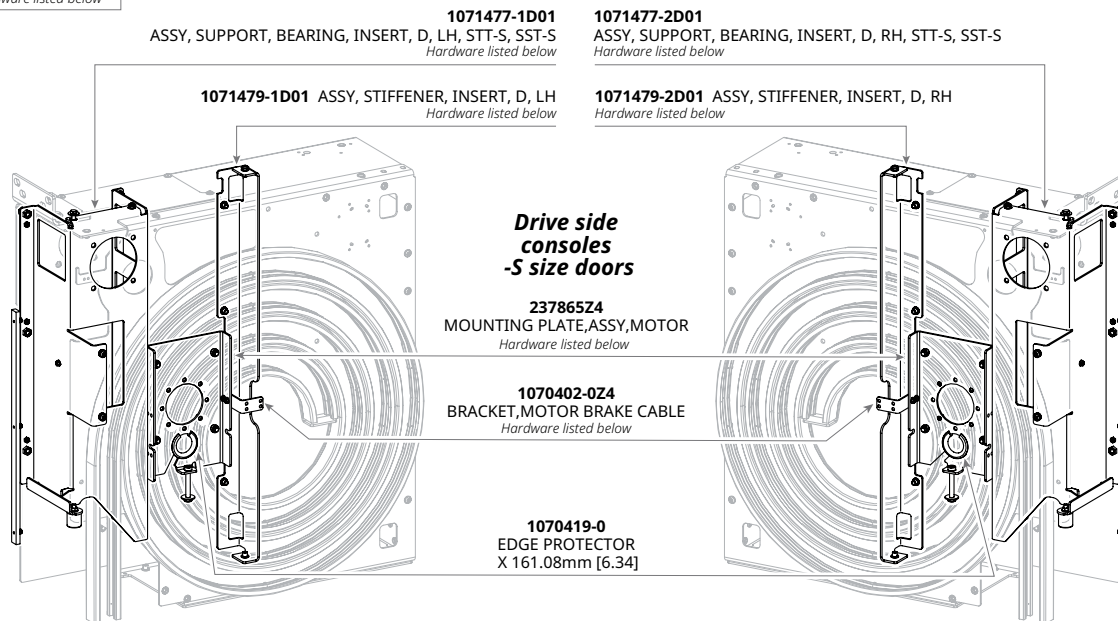


## Hardware - Order Separately


 
 
 

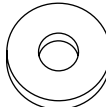


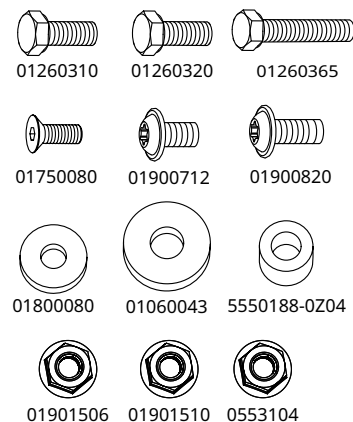

Part Number	Hardware	Description	Qty
1070402-0Z4	01900712	BSCSF, M6X12, T30, ZN, PRECOTE 80-8	2
	01901506	NUT, M6 HEX FLANGE, DIN 6923-8ZN	2
237865Z4	01260320	HHCS, M10 X 25, DIN 933.8-8 ZN	4
	01800080	WASHER, 10.5MM, DIN 9021A ZN	4
	5550188-0Z04	SELF-CLINCHING NUT, M10 X 1.5, CLS-M10-2	4
	01260365	HHCS, M10X75, 933-8.8 ZN	1
	01800080	WASHER, 10.5MM, DIN 9021A ZN	1
1071495-X, 1071477-X	01260310	HHCS, M10X20, DIN 933-8.8 ZN	6
	01060043	WASHER, 10.5mm FLAT, DIN 125A ZN	6
	01901510	NUT, M10 HEX FLANGE, DIN 6923-8ZN	6
	01900820	BSCSF, M8-1.25 X 20, T40, ZN	4
	01750080	FHSCS, M6X16, DIN 7991 10.9	2
1071479-X	01900820	BSCSF, M8-1.25 X 20, T40, ZN	5
0013013	0553104	HLNSF, 5/16-18, STL ZN	1

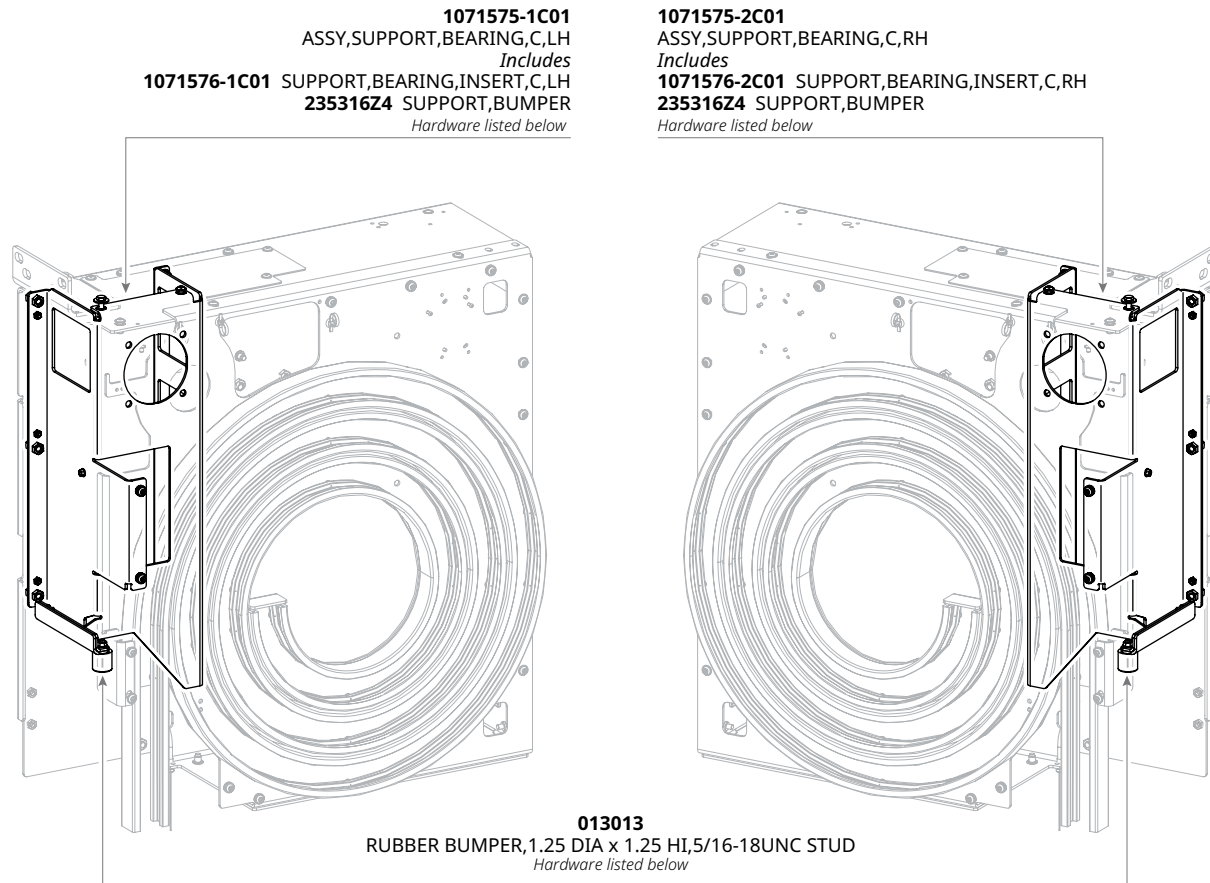

# Head Assembly Console Brackets -US size doors

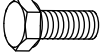

## Hardware – Order Separately

Part Number	Hardware	Description	Qty			
1071575-X	01260310	HHCS,M10X20,DIN 933-8.8 ZN	6			
	01060043	WASHER, 10.5mm FLAT, DIN 125A ZN	6	01260310	01260274	
	01901510	NUT,M10 HEX FLANGE,DIN6923-8ZN	6			
	01900820	BSCSF,M8-1.25 X 20,T40,ZN	4			
	01750080	FHSCS,M6X16,DIN 7991 10.9	2	01750080	01900820	
	5550302-0Z01	HWNSTP M6-1.0 STL	2			
235316Z4	01260274	HHCS,M8X20,DIN 933 - 8.8 ZN	1			
	01901508	NUT, M8 FLANGED	1			
0013013	0553104	HLNSF, 5/16-18, STL ZN	1			
				01800080	01060043	5550302-0Z01
						
				01901508	01901510	0553104



# PREWIRE Variations to Console Covers and Brackets -L size doors

**1072401-1A** ASSY,HEAD,D,PREWIRE,STT-L,LH DRIVE  
**1072402-1A** ASSY,HEAD,D,PREWIRE,SST-L,LH DRIVE

**1072401-2A** ASSY,HEAD,D,PREWIRE,STT-L,RH DRIVE  
**1072402-2A** ASSY,HEAD,D,PREWIRE,SST-L,RH DRIVE

**1071653-1B01**  
 ASSY,CONSOLE,B,PREWIRE,  
 STT-L,SST-L,LH,LH DRIVE  
 Hardware listed below

## LH doors

**All parts are configured parts:  
 require door serial number to order**

**1071653-2B01**  
 ASSY,CONSOLE,B,PREWIRE,  
 STT-L,SST-L,RH,LH DRIVE  
 Hardware listed below

**1071654-1B01**  
 COVER,DRIVE BELT,B, PREWIRE,STT-L,SST-L,LH  
 Hardware listed below

**1071652-2B01**  
 CONSOLE,OUTER,INSERT,B,PREWIRE,STT-L,SST-L,RH

**1071654-2B01**  
 COVER,DRIVE BELT,B,  
 PREWIRE,STT-L,SST-L,RH  
 Hardware listed below

**1071649-1A**  
 COVER,CONSOLE,  
 FRONT,B,  
 PREWIRE,STT-L,  
 SST-L,LH,LH DRIVE  
 Hardware listed below

**1210649-0**  
 RECTANGULAR  
 HOLE, PREWIRE

**1071675-0D01**  
 ASSY,C-BOX BKT,DAMPERS,D  
 Includes:  
 1071674-0C  
 BKT,C-BOX MOUNTING,PREWIRE,D  
 1210600-0  
 RUBBER BUMPER, M4X0.7X10  
 THREADED STUD (4)  
 1071647-0Z01  
 ASSY,DAMPER BKT,INSERT  
 Hardware listed below

Drive side  
 console

Non-drive side  
 console

**1071649-2B** COVER,CONSOLE,FRONT,B,PREWIRE,STT-L,SST-L,RH,LH DRIVE  
 Hardware listed below

**1071653-1BR01**  
 ASSY,CONSOLE,B,PREWIRE,  
 STT-L,SST-L,LH,RH DRIVE  
 Hardware listed below

## RH doors


**All parts are configured parts:  
 require door serial number to order**

**1071653-2BR01**  
 ASSY,CONSOLE,B,PREWIRE,  
 STT-L,SST-L,RH,RH DRIVE  
 Hardware listed below

**1071652-2B01**  
 CONSOLE,OUTER,INSERT,B,PREWIRE,STT-L,SST-L,RH

**1071654-1B01**  
 COVER,DRIVE BELT,B,PREWIRE,  
 STT-L,SST-L,LH  
 Hardware listed below

**1071654-2B01**  
 COVER,DRIVE BELT,B,  
 PREWIRE,STT-L,SST-L,RH  
 Hardware listed below

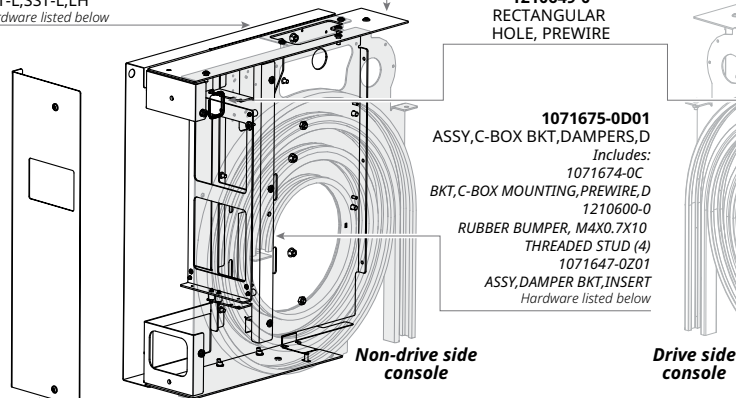


Non-drive side  
 console

Drive side  
 console

**1071649-1B** COVER,CONSOLE,FRONT,B,PREWIRE,STT-L,SST-L,LH,RH DRIVE  
 Hardware listed below

## Hardware – Order Separately

Part Number	Hardware	Description	Qty
Consoles	01260310	HHCS,M10X20,DIN 933-8.8 ZN	5
	01060043	WASHER, 10.5mm FLAT, DIN 125A ZN	5
	5550304-0Z01	HWNSTP M8-1.25 STL	5
1071649-1A	01900820	BSCSF,M8-1.25 X 20,T40,ZN	3
1071649-2B	01900820	BSCSF,M8-1.25 X 20,T40,ZN	2
1071654-XB01	01900820	BSCSF,M8-1.25 X 20,T40,ZN	2
	01260274	HHCS,M8X20,DIN 933 - 8.8 ZN	2
	01800060	WASHER,8.4MM,DIN 9021A ZN	1
1071703-0D01	01900820	BSCSF,M8-1.25 X 20,T40,ZN	6
	01900705	BSCSF,M5X20,T25,ZN,PRECOTE 80-8	4
	5550057-0Z01	HLNNI M4-0.7 GR8 ZN	12
	5550195-0Z00	WF 0.25ID 0.75OD 0.06T NYL BLACK	12

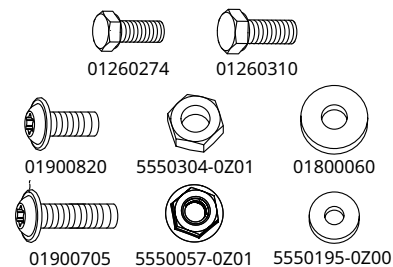

# PREWIRE Variations to Console Covers and Brackets -S size doors


**1072403-1A** ASSY,HEAD,D,PREWIRE,STT-S,LH DRIVE  
**1072404-1A** ASSY,HEAD,D,PREWIRE,SST-S,LH DRIVE

**1072403-2A** ASSY,HEAD,D,PREWIRE,STT-S,RH DRIVE  
**1072404-2A** ASSY,HEAD,D,PREWIRE,SST-S,RH DRIVE

**1071663-2D01**  
 ASSY,CONSOLE,D,PREWIRE,  
 STT-S,SST-S,RH,LH DRIVE  
*Hardware listed below*

**All parts are configured parts:  
 require door serial number to order**

**LH doors**  
**Non-drive side (right) console**

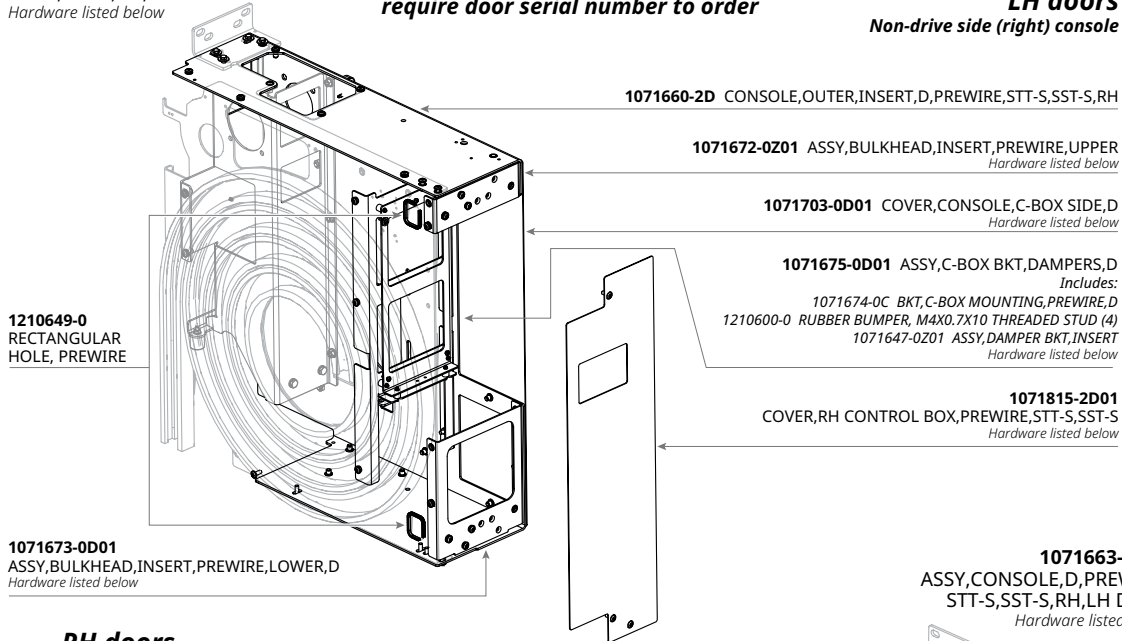

**RH doors**  
**Non-drive side (left) console**


**1071660-1D** CONSOLE, OUTER, INSERT, D, PREWIRE, STT-S, SST-S, LH

**1071672-0Z01** ASSY, BULKHEAD, INSERT, PREWIRE, UPPER  
*Hardware listed below*

**1071703-0D01** COVER, CONSOLE, C-BOX SIDE, D  
*Hardware listed below*


**1071675-0D01** ASSY, C-BOX BKT, DAMPERS, D  
*Includes:*  
 1071674-0C BKT, C-BOX MOUNTING, PREWIRE, D  
 1210600-0 RUBBER BUMPER, M4X0.7X10 THREADED STUD (6)  
 1071647-0Z01 ASSY, DAMPER BKT, INSERT  
*Hardware listed below*

**1071815-1D01**  
 COVER, LH CONTROL BOX, PREWIRE, STT-S, SST-S  
*Hardware listed below*

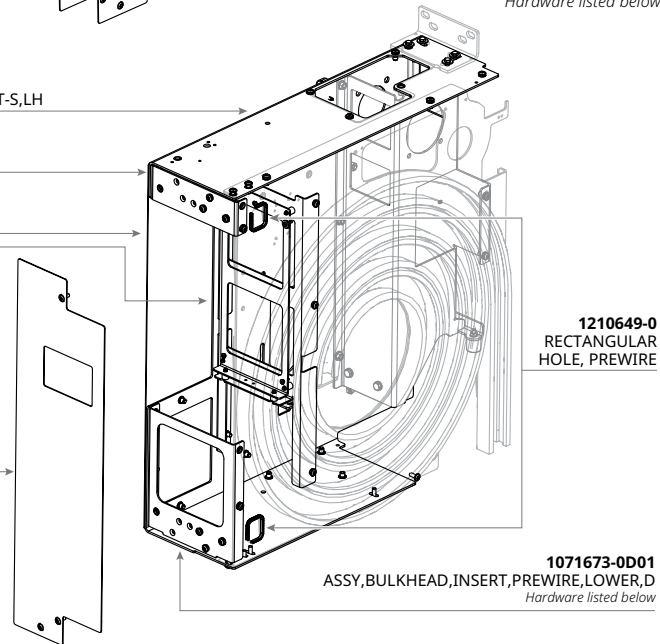


## Hardware – Order Separately

Part Number	Hardware	Description	Qty
Consoles	01260310	HHCS, M10X20, DIN 933-8.8 ZN	5
	01060043	WASHER, 10.5mm FLAT, DIN 125A ZN	5
	5550304-0Z01	HWNSTP M8-1.25 STL	5
1071815-X	01900820	BSCSF, M8-1.25 X 20, T40, ZN	3
1071672-0Z01	01900820	BSCSF, M8-1.25 X 20, T40, ZN	4
1071673-0D01	01900820	BSCSF, M8-1.25 X 20, T40, ZN	4
1071703-0D01	01900820	BSCSF, M8-1.25 X 20, T40, ZN	6
	01900705	BSCSF, M5X20, T25, ZN, PRECOTE 80-8	4
	5550057-0Z01	HLNNI M4-0.7 GR8 ZN	12
	5550195-0Z00	WF 0.25ID 0.75OD 0.06T NYL BLACK	12

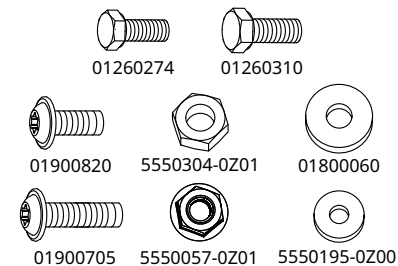


# Vertical Tracks *all doors*

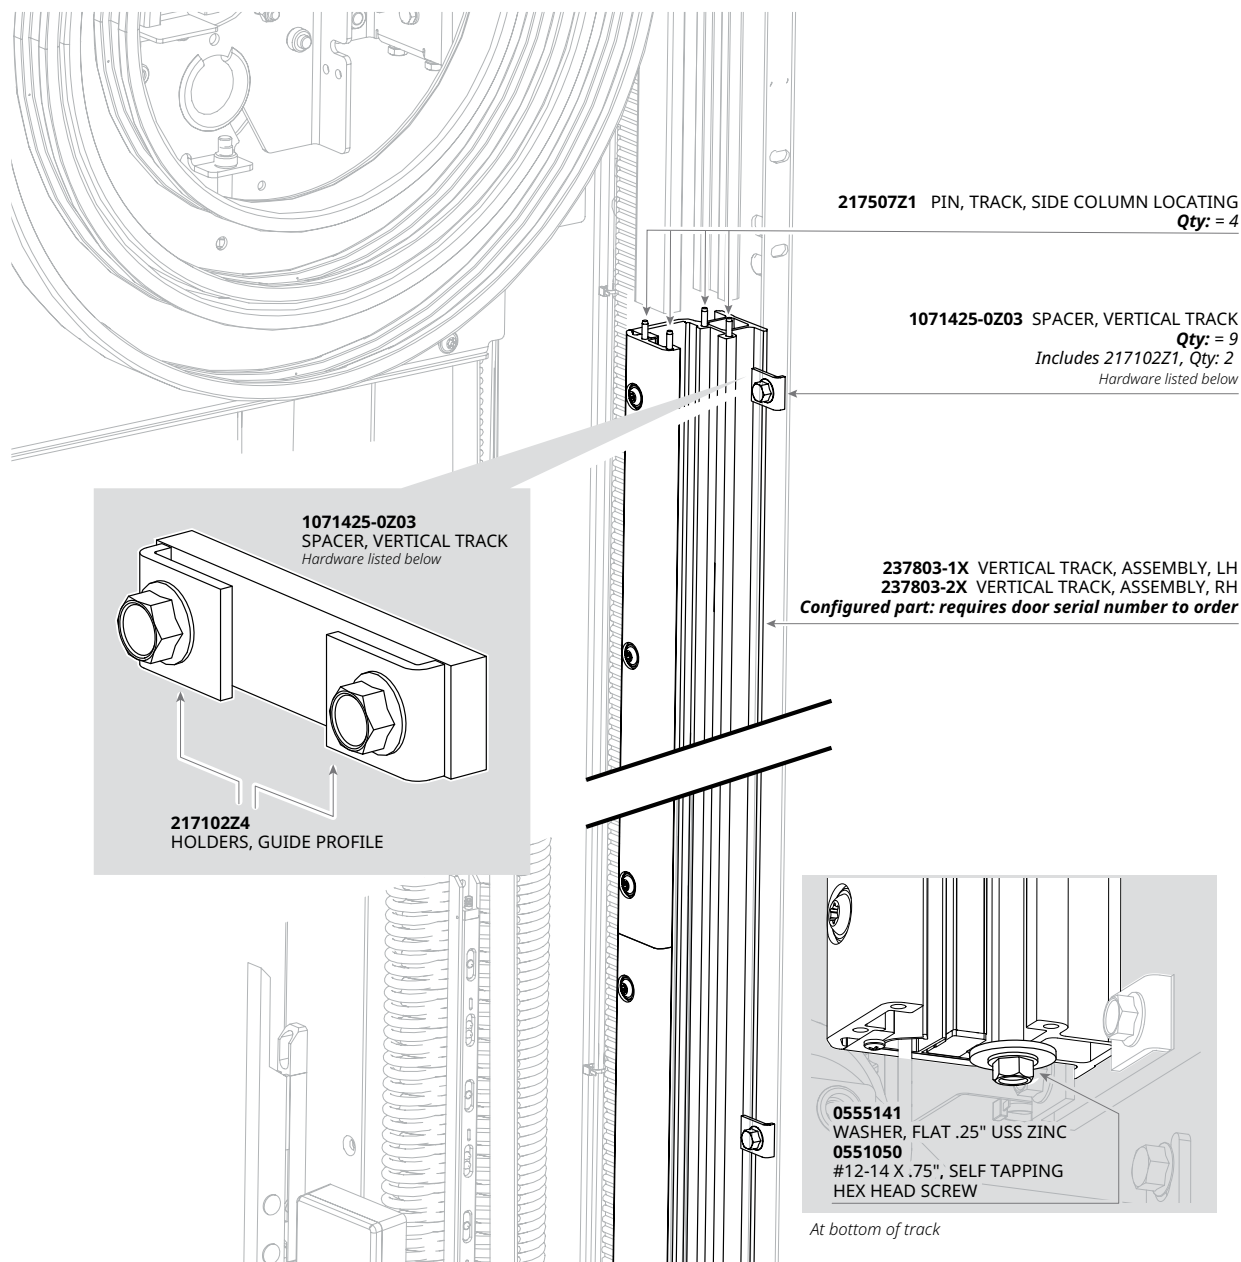

## Hardware – Order Separately

 Part Number	Hardware	Description	Qty
1071425-0Z03	5550286-0Z01	HFSMS, M8-1.25X20 CL8.8 ZN	2



5550286-0Z01

## Drive Shaft, Non-Drive Side *all doors*

**01531036** KEY,10X8X36,DIN 6885 A C45K  
Qty: non-drive side = 1, drive side = 2

**237503-2-01Z1** DRIVE SHAFT, NON DRIVE  
Hardware listed below

 
**01531420** KEY,14X9X56,DIN 6885 A C45K  
Qty: non-drive side = 1, drive side = 2

**235503-2Z1** DRIVE SHAFT, NON-DRIVE SIDE, S/R  
Hardware listed below

-L size doors



-S, -US size doors



**NOTE:** part numbers vary based on door model

**STT-L** Transpaent door slats, small  
**SST-L** Solid door slats, small  
**STT-S** Transpaent door slats, large  
**SST-S** Solid door slats, large  
**SST-US** Solid door slats, extra large

**205533** PULLEY,HTD P64-8M-30,FLGD,D168 (-L size doors)

**206513** PULLEY,HTD P77-8M-50 (-S size doors)

**206513A** PULLEY,HTD P44-14M-50,FLGD (-US size doors)

Qty: non-drive side = 1, drive side = 1

**01340150** SHIM RING,35X45X2, DIN 988 PS (-L size doors)

**01340230** SHIM RING,50X62X2,DIN 988 PS (-S, -US size doors)

Qty: non-drive side = 1, drive side = 1

**237859Z1**



CASE,BEARING WITH BEARING (-L size doors)

**238856Z1**

CASE,BEARING WITH BEARING (-S, -US size doors)

Bearing included

Hardware listed below

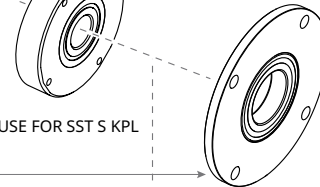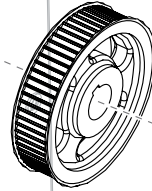

-S size doors

**238879Z1** BEARING HOUSE FOR SST S KPL

Bearing included

 
Hardware listed below

-US size doors

**235824Z1** CASE,BEARING WITH BEARING

Bearing included

Hardware listed below




**217706Z1** LINE SHAFT WELDMENT,"L"  
**218704Z1** LINE SHAFT WELDMENT,"S"  
**247701Z1** ASSY,CONNECTING SHAFT,US/R  
Configured part: requires door serial number to order

**NOTE:** drive side may be LH or RH. LH drive shown.

### Hardware – Order Separately

 
Part Number	Hardware	Description	Qty
237503-2-01Z1	01180525	M8-1.25 X 25 Socket Head Cap Screw	6
	01080030	WASHER,M8,LOCK,HIGH COLLAR,DIN 7980,STL ZN	6
235503-2Z1	01180525	M8-1.25 X 25 Socket Head Cap Screw	8
	01080030	WASHER,M8,LOCK,HIGH COLLAR,DIN 7980,STL ZN	8
237859Z1	01260272	HHCS,M8X16,DIN 933 - 8.8 ZN	4
	01080040	WASHER,10MM,LOCK,SPLIT,ZN	4
238856Z1	01260310	HHCS,M10X20,DIN 933-8.8 ZN	4
	01080040	WASHER,10MM,LOCK,SPLIT,ZN	4
	5550304-0Z01	HWNSTP M10-1.5 STL	4
238879Z1	0021670	HHCS, M10-1.5 x 30mm, STL ZN, DIN 933.8-8	4
	01080040	WASHER,10MM,LOCK,SPLIT,ZN	4
236824Z1	01260282	HHCS,M8X30,DIN 933 - 8.8 ZN	4
	5550303-0Z01	HWNSTP M8-1.25 STL	4



01180525



 
01080030



01260272



 
01080040



01260282



 
5550304-0Z01



01260310



 5550303-0Z01



0021670

# Drive Shaft, Drive Side *all doors*

**01531036** KEY,10X8X36,DIN 6885 A C45K

**Qty:** non-drive side = 1, drive side = 2

**237503-1-01Z1** DRIVE SHAFT, DRIVE SIDE

Hardware listed below

**01531420** KEY,14X9X56,DIN 6885 A C45K

**Qty:** non-drive side = 1, drive side = 2

**238503-1-01Z1** DRIVE SHAFT, DRIVE SIDE

Hardware listed below

**01531420** KEY,14X9X56,DIN 6885 A C45K

**Qty:** non-drive side = 1, drive side = 2

**01531080** KEY,10X8X80,DIN 6885 A C45K

**235503-1-03Z1** DRIVE SHAFT, DRIVE SIDE

Hardware listed below

**1070611-0** PLUG, LENZE DRIVE SHAFT

Hardware listed below

-L size doors

-S size doors

-US size doors

**NOTE:** part numbers vary based on door model

**STT-L** Transpaent door slats, small

**SST-L** Solid door slats, small

**STT-S** Transpaent door slats, large

**SST-S** Solid door slats, large

**SST-US** Solid door slats, extra large

**205533** PULLEY,HTD P64-8M-30,FLGD,D168 (-L size doors)

**206513** PULLEY,HTD P77-8M-50 (-S size doors)

**206513A** PULLEY,HTD P44-14M-50,FLGD (-US size doors)

**Qty:** non-drive side = 1, drive side = 1

**01340150** SHIM RING,35X45X2, DIN 988 PS (-L size doors)

**01340230** SHIM RING,50X62X2,DIN 988 PS (-S, -US size doors)

**Qty:** non-drive side = 1, drive side = 1

**237859Z1**

CASE,BEARING WITH BEARING

(-L size doors)

**238856Z1**

CASE,BEARING WITH BEARING

(-S, -US size doors)

Bearing included

Hardware listed below

**-S size doors**

**238879Z1** BEARING

HOUSE FOR SST S KPL

Bearing included

Hardware listed below

**-US size doors**

**235824Z1** CASE,BEARING

WITH BEARING

Bearing included

Hardware listed below

**NOTE:** drive side may be LH or RH. LH drive shown.

**217706Z1** LINE SHAFT WELDMENT,"L"

**218704Z1** LINE SHAFT WELDMENT,"S"

 
 
 
 
 
**247701Z1** ASSY,CONNECTING SHAFT,US/R

Configured part: requires

door serial number to order

## Hardware – Order Separately

Part Number	Hardware	Description	Qty
237503	01180525	M8-1.25 X 25 Socket Head Cap Screw	6
	01080030	WASHER,M8,LOCK,HIGH COLLAR,DIN 7980,STL ZN	6
235503, 238503	01180525	M8-1.25 X 25 Socket Head Cap Screw	8
	01080030	WASHER,M8,LOCK,HIGH COLLAR,DIN 7980,STL ZN	8
237859Z1	01260272	HHCS,M8X16,DIN 933 - 8.8 ZN	4
	01080040	WASHER,10MM,LOCK,SPLIT,ZN	4
238856Z1	01260310	HHCS,M10X20,DIN 933-8.8 ZN	4
	01080040	WASHER,10MM,LOCK,SPLIT,ZN	4
	5550304-0Z01	HWNSTP M10-1.5 STL	4
238879Z1	0021670	HHCS, M10-1.5 x 30mm, STL ZN, DIN 933.8-8	4
	01080040	WASHER,10MM,LOCK,SPLIT,ZN	4
236824Z1	01260282	HHCS,M8X30,DIN 933 - 8.8 ZN	4
	5550303-0Z01	HWNSTP M8-1.25 STL	4
1070611-0	01260286	HHCS M8-1.25X40 GR8.8 ZN	1
	5550349-0A01	WASHER,THRUST,Ø1.367	1





## Drive Belt *all doors*

**205533** PULLEY,HTD P64-8M-30,FLGD,D168  
(-L size doors)

**206513** PULLEY,HTD P77-8M-50  
(-S size doors)

**206513A** PULLEY,HTD P44-14M-50,FLGD  
(-US size doors)

**Qty:** non-drive side = 1, drive side = 1

**205532Z1** PULLEY,HTD P64-8M-30 (-L size doors)

Secured by WN018-A SPACER, THRUST and  
5550286-0Z01 HFSMS, M8-1.25X20 CL8.8 ZN

**206514** PULLEY,HTD P77-8M-50 (-S size doors)  
Secured by WN018-C FLAT WASHER,D60X9X5 THK and  
5550286-0Z01 HFSMS, M8-1.25X20 CL8.8 ZN

**08310434** DRV BELT,HTD 1280-8M-30,L/R  
(-L size doors)

**083104317** DRV BELT,HTD 1440-8M-50,S/R,D  
(-S size doors)

**1071039-0** PULLEY, HTD P24-8M-30, FLGD (STT-L doors)

**1071040-0** PULLEY, HTD P30-8M-30 (SST-L doors)  
Secured by WN018-A SPACER, THRUST and  
01260320 HHCS, M10 X 25, DIN 933-8.8 ZN

**1071041-0** PULLEY, HTD P24-8M-50, FLGD (-S size doors)  
Secured by WN018-A SPACER, THRUST and  
01250595 HHCS,M10X50,DIN 933-8.8 ZN

**1072214-0A** TOOTH BELT,8M-30,PRE-CUT  
(-L size doors)

**1072215-0A** TOOTH BELT,8M-50,PRE-CUT  
(-S size doors)

**1072216-0A** TOOTH BELT,14M-50,PRE-CUT  
(-US size doors)

**Configured part: requires door serial number to order**

**NOTE:** part numbers vary  
based on door model

**STT-L** Transpaent door slats, small

**SST-L** Solid door slats, small

**STT-S** Transpaent door slats, large

**SST-S** Solid door slats, large

**SST-US** Solid door slats, extra large

**237804Z4**

PULLEY ASSY,TOOTH BELT,SST-L/R  
(-L size doors)

**238803Z4**

PULLEY ASSY,TOOTH BELT,SST-S/R  
(-S size doors)

**235856Z4**

PULLEY ASSY,TOOTH BELT,SST-USR  
(-US size doors)



Hardware:

01260286 HHCS M8-1.25X40 GR8.8 ZN 2

01270050 HN DIN 934 M8-1.25 GR8 ZF 4

01300518 SCREW, M10 X 50, DIN 963-4.8 2

01270060 NUT, M10 HEX, DIN 934-8 ZN 4

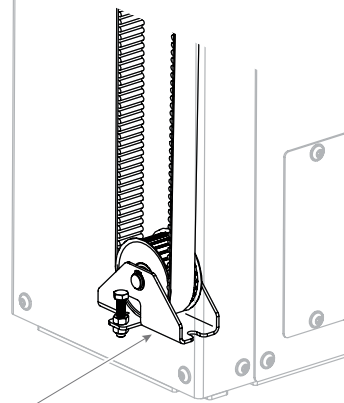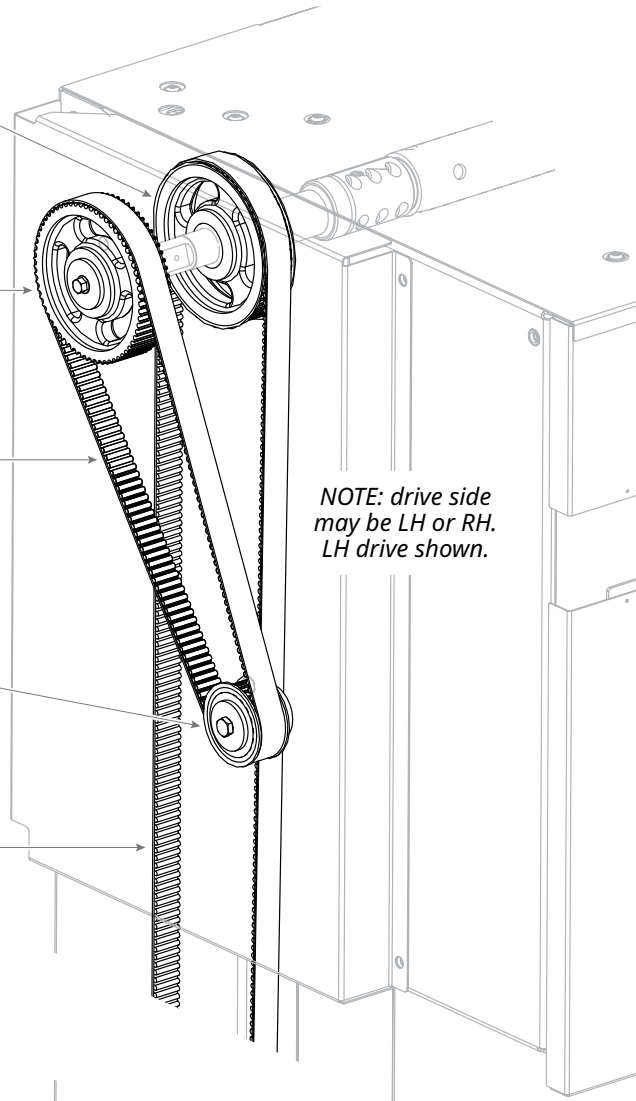

## Door Panels -L size doors with Full Vision panels (1072406 STT-L)

231851 PANEL/HINGE ASSY,STT-L

*Configured part: requires door serial number to order*

231844 TTOP PNL ASSY, 30MM, STT-L

*Configured part: requires door serial number to order*

04010085-04 SEAL,PANEL HINGE

1071022-0A FINAL ASSY,PRESSED WINDOW,w/SEALS,30MMx151MM,STT-L

*Configured part: requires door serial number to order*

1071283-0A VENT ASSY, 30mmX151mm,STT-L

*Configured part: requires door serial number to order*

1070991-0A ASSY, WINDOW, PRESSED LEXAN, STT-L, 30mmx225mm






*Configured part: requires door serial number to order*

1071285-0 VENT ASSY,W/SPACERS, 30mm X 225mm,STT-L

*Configured part: requires door serial number to order*

1070841-0 WINDOW ASSY,HPG, 30MMX225MM COMPLETE

*Configured part: requires door serial number to order*

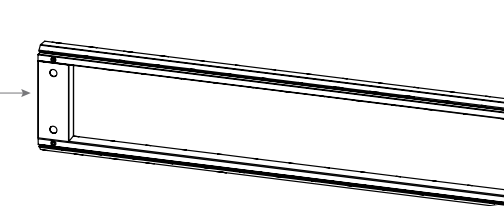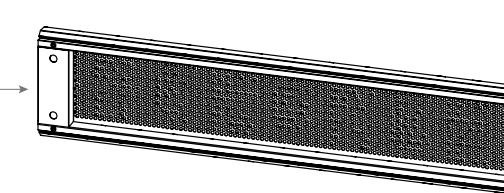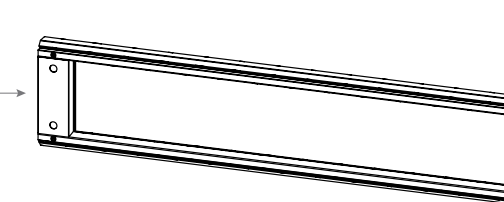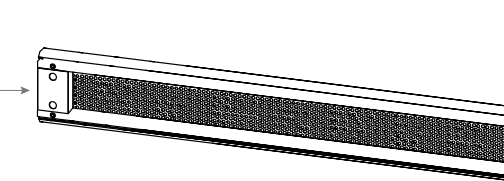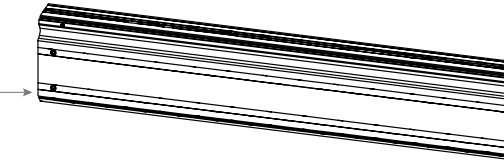


231853-1 HINGE CHAIN ASSY,225X65,LH, STT-L

*Configured part: requires door serial number to order*

231853-2 HINGE CHAIN ASSY,225X65,RH, STT-L

*Configured part: requires door serial number to order*

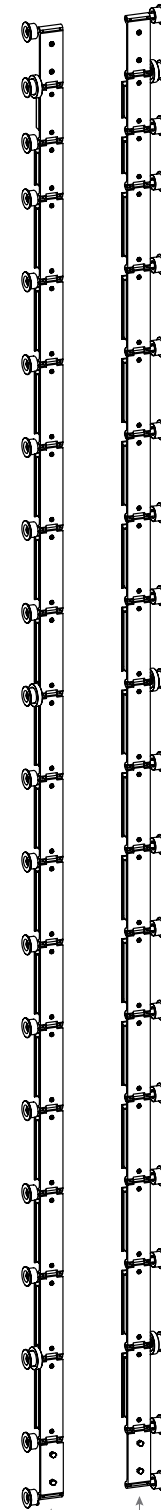

## Door Panels -L size doors with solid panels (1072407 SST-L)

**237830** PANEL/HINGE ASSY,SST-L

*Configured part: requires door serial number to order*

**04010170** SEAL,SPIRAL DOOR TOP

*Configured part: requires door serial number to order*

**237834** TOP PNL ASSY, 20MM, SST-L

*Configured part: requires door serial number to order*

**04010085-04** SEAL,PANEL HINGE

**237833** PANEL ASSY, 20MM, SST-L

*Configured part: requires door serial number to order*

**1071279-0**

VENT ASSY,W/SPACERS,  
20mm X 151mm, SST-L, SST-L/R,SSN-L

*Configured part: requires door serial number to order*

**1071006-0A**

ASSY, WINDOW, PRESSED LEXAN,  
STT-L/R,20mmX151mm

*Configured part: requires door serial number to order*


*See page 34 for hinge and roller components*

**231860-1** HINGE CHAIN ASSY,151X65MM,LH (SSN-L doors)

*Configured part: requires door serial number to order*

**231860-2** HINGE CHAIN ASSY,151X65MM,RH (SSN-L doors)

*Configured part: requires door serial number to order*

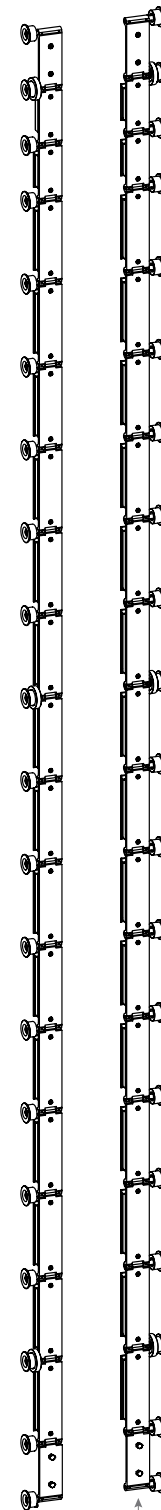



## Door Panels -S size doors with Full Vision panels (1072408 STT-S)

**232852-01** PANEL/HINGE ASSY,STT-S

*Configured part: requires door serial number to order*

**232831-01** TOP PNL ASSY, 40MM, STT-S

*Configured part: requires door serial number to order*

**04010085-04** SEAL,PANEL HINGE

**1071023-0A** FINAL ASSY,PRESSED WINDOW,  
w/SEALS,40MMX151MM,STT-S

*Configured part: requires door serial number to order*

**1071289-0** VENT ASSY,W/SPACERS,  
40mm X 151mm,STT-S

*Configured part: requires door serial number to order*

**1070992-0A**  
ASSY, WINDOW, PRESSED LEXAN  
40mmx225mm

*Configured part: requires door serial number to order*

**1071287-0** VENT ASSY,W/SPACERS,  
40mm X 225mm,STT-S


*Configured part: requires door serial number to order*

**1070838-0** WINDOW ASSY,  
40MMX225MM,HPG,COMPLETE

*Configured part: requires door serial number to order*

**231853-1** HINGE CHAIN ASSY,STT-L,225X65,LH  
*Configured part: requires door serial number to order*

**231853-2** HINGE CHAIN ASSY,STT-L,225X65,RH  
*Configured part: requires door serial number to order*

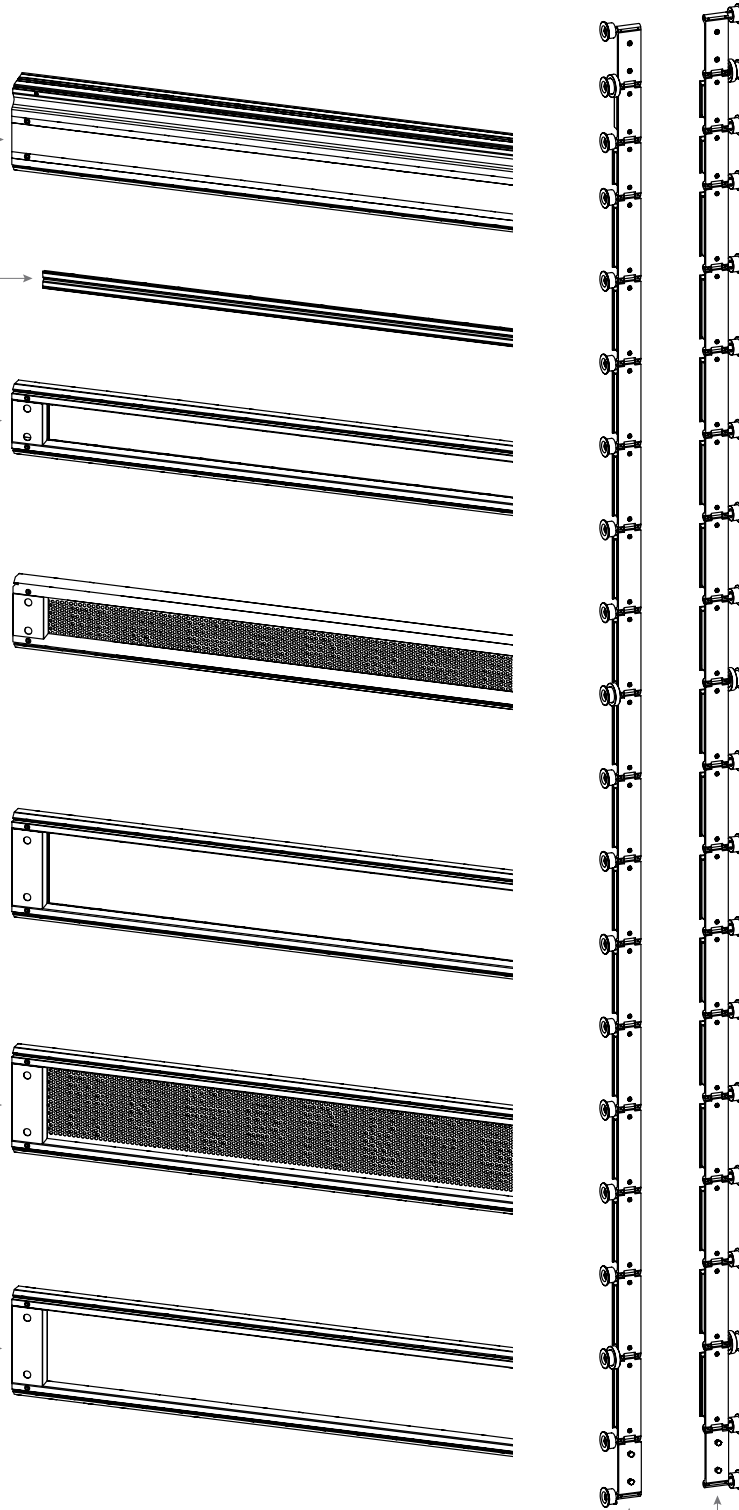

## Door Panels -S size doors with solid panels (1072409 SST-S)

**238830** PANEL/HINGE ASSY,SST-S

*Configured part: requires door serial number to order*

**04010170** SEAL,SPIRAL DOOR TOP

*Configured part: requires door serial number to order*

**238832** TOP PNL ASSY,30MM,SST-S

*Configured part: requires door serial number to order*

**04010085-04** SEAL,PANEL HINGE

**238833** PANEL ASSY,30MM,SST-S

*Configured part: requires door serial number to order*

**1071281-0**

VENT ASSY,W/SPACERS,  
30mm x 151mm,SST-S,SST-S/R,SSN-S

*Configured part: requires door serial number to order*

**1071021-0A**

FINAL ASSY,PRESSED WINDOW,  
w/SEALS,30MMx151MM,SST-S


*Configured part: requires door serial number to order*

**232826-1** HINGE CHAIN ASSY,151X100MM,LH

*Configured part: requires door serial number to order*

**232826-2** HINGE CHAIN ASSY,151X100MM,RH

*Configured part: requires door serial number to order*

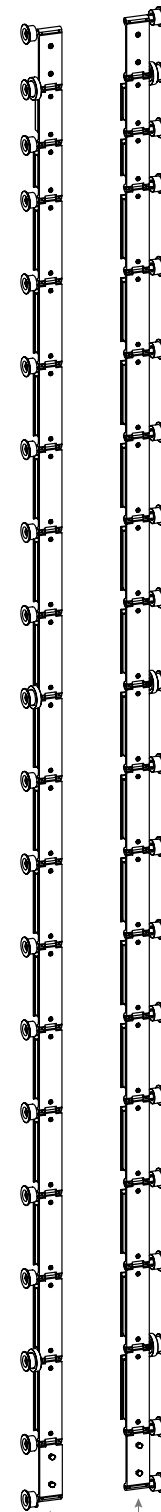

## Door Panels -US size doors with solid panels (1072412 SST-US)

235806 PANEL/HINGE ASSY,SST-US

*Configured part: requires door serial number to order*

04010170 SEAL,SPIRAL DOOR TOP

*Configured part: requires door serial number to order*

227857-01 TOP PNL ASSY, 40MM, SST-US

*Configured part: requires door serial number to order*

04010085-04 SEAL,PANEL HINGE

227856 PANEL ASSY, 40MM, SST-US


*Configured part: requires door serial number to order*

227858-03 WINDOW ASSY,W/SPACERS,40MM,US

*Configured part: requires door serial number to order*

227858-03-VENT VENT ASSY,W/SPACERS,40MMX151MM

*Configured part: requires door serial number to order*

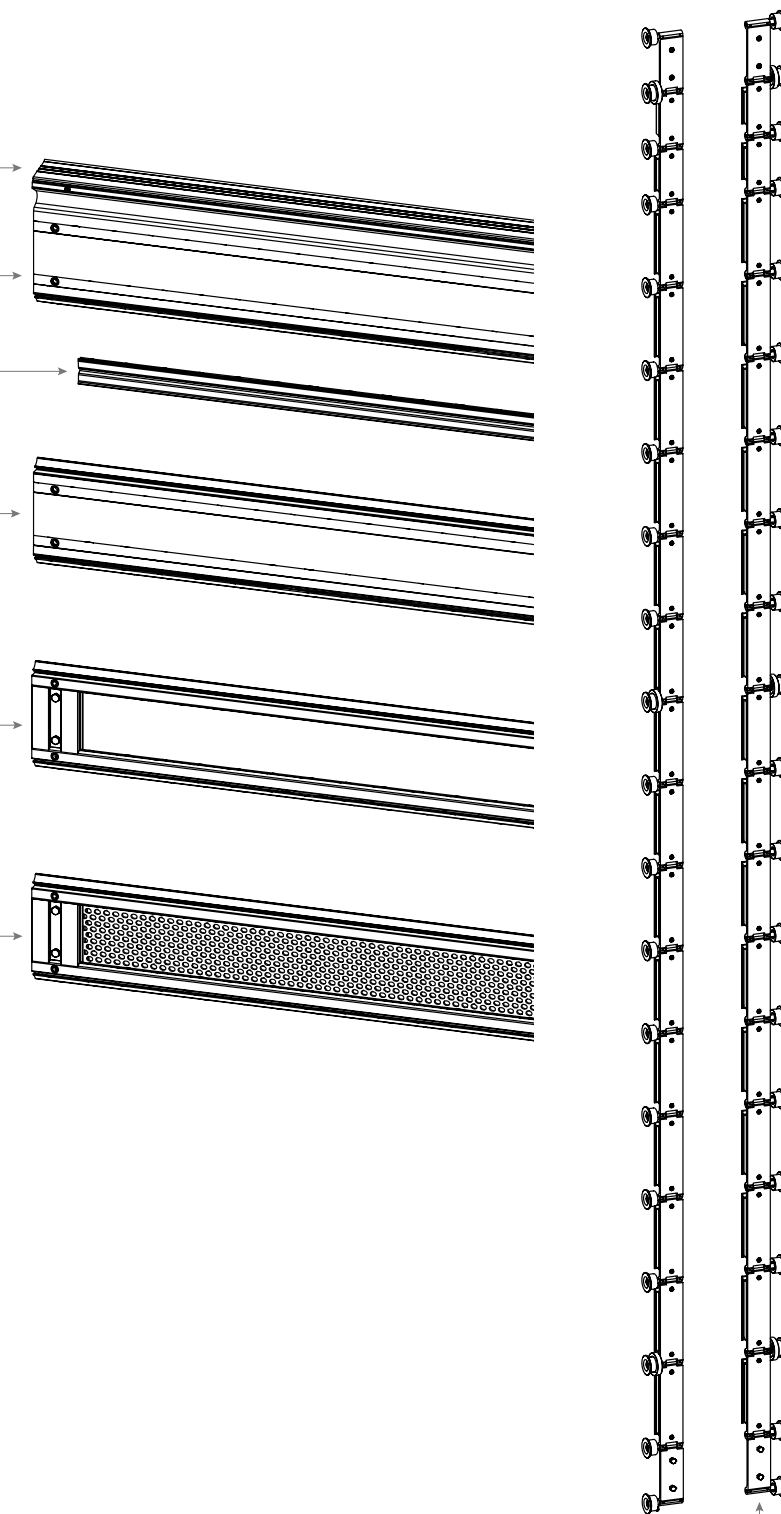

1071015-1 HINGE CHAIN ASSY, 151x100MM, SST-US, LH  
*Configured part: requires door serial number to order*

1071015-2 HINGE CHAIN ASSY, 151x100MM, SST-US, RH  
*Configured part: requires door serial number to order*

## Bottom Bar Assembly *all doors*

**1070664-** BOTTOM PANEL ASSEMBLY,40MM,SST-US

**1070665-** BOTTOM PANEL ASSEMBLY,40MM,STT-S

**1070666-** BOTTOM PANEL ASSEMBLY,40MM,SST-S

**1070667-** BOTTOM PANEL ASSEMBLY,40MM,STT-L

**1070668-** BOTTOM PANEL ASSEMBLY,40MM,SST-L

*Configurations:*



-0A = LH door, wireless

-0B = RN door, wireless

-0C = non-wireless door

**Configured part: requires door serial number to order**

**04010085-04** SEAL,PANEL HINGE

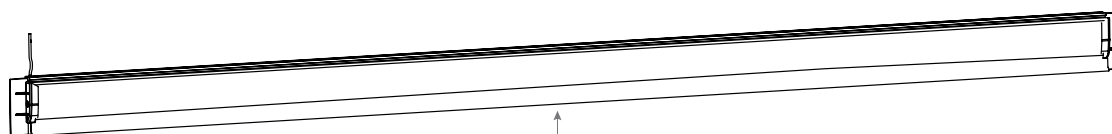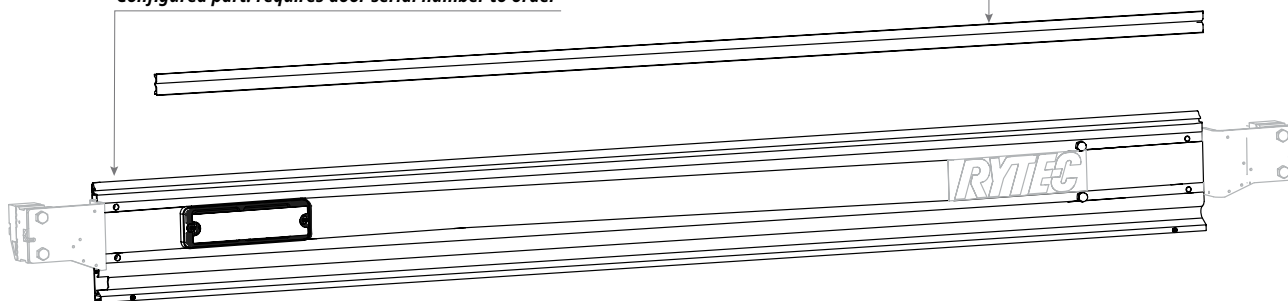

**1072189-1** ASSY,REVERSING EDGE,LH DRIVE

**1072189-2** ASSY,REVERSING EDGE,R H DRIVE

**1072440-2** ASSY,EDGE,BOTTOM BAR (non-active edge)


**Configured part: requires door serial number to order**

**1072191-1** ASSY,REVERSING EDGE,FLAP EXTN,LH DRIVE

**1072191-2** ASSY,REVERSING EDGE,FLAP EXTN,RH DRIVE

**1072441-0** ASSY,EDGE,BOTTOM BAR,EXT FLAP

**Configured part: requires door serial number to order**

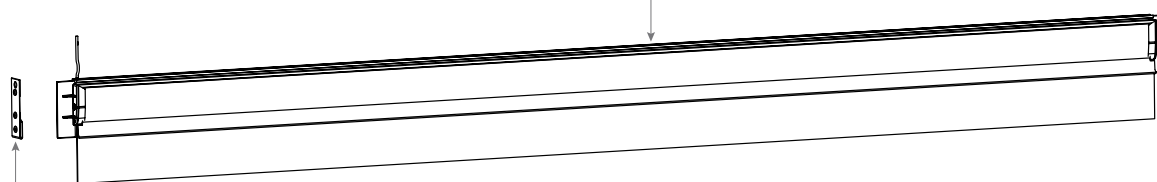

**1072017-0A** ASSY,TST BLOCKING STRIP

**Standard part**

**1072017-0B** ASSY,TST BLOCKING STRIP,EXTND FLAP

**Configured part: requires door serial number to order**

**NOTE: part numbers vary  
based on door model**

**STT-L** Transpaent door slats, small

**SST-L** Solid door slats, small

**STT-S** Transpaent door slats, large


**SST-S** Solid door slats, large

**SST-US** Solid door slats, extra large


## End brackets and splice blocks/clamps *all doors*

*NOTE: part numbers vary based on door model*


**SST-L**  
**237831-1Z1** END BRKT ASSY,SST-L,LH  
*Includes splice block and clamp*  
**237831-2Z1** END BRKT ASSY,SST-L,RH  
*Includes splice block and clamp*  
*Hardware listed below*

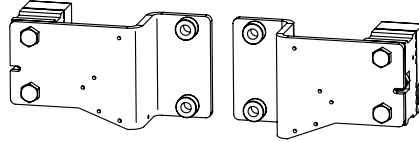


**STT-L**  
**231831-1Z1** END BRKT ASSY,STT-L,LH  
*Includes splice block and clamp*  
**231831-2Z1** END BRKT ASSY,STT-L,RH  
*Includes splice block and clamp*  
*Hardware listed below*

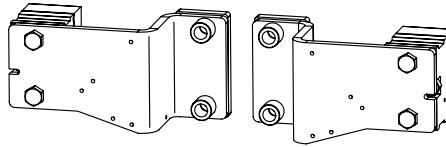


**SST-S**  
**238841-1Z1** END BRACKET ASSY,SST-S,LH  
*Includes splice block and clamp*  
**238841-2Z1** END BRACKET ASSY,SST-S,RH  
*Includes splice block and clamp*  
*Hardware listed below*

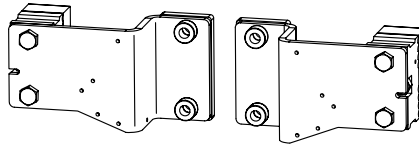

**STT-S**  
**1071000-1**  
 ASSY, WELDED SPACER, END BRKT, STT-S, LH  
**1071000-2**  
 ASSY, WELDED SPACER, END BRKT, STT-S, RH  
*Hardware listed below*



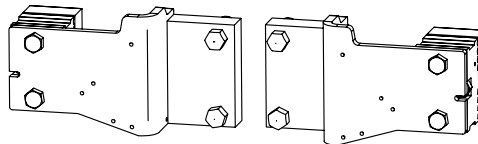


**SST-US**  
**235831-1Z1** END BRKT ASSY,SST-US,LH  
**235831-2Z1** END BRKT ASSY,SST-US,RH  
*Hardware listed below*

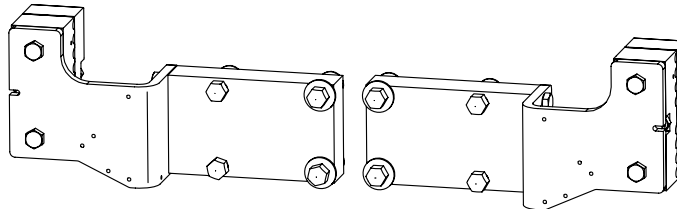

### Hardware – Order Separately

   Part Number	Hardware	Description	Qty
231831, 237831,	5550370-0Z01	NUT,M8-1.25,DIN 1587,ZN	2
1071000	0116505	CARRIAGE BOLT,M8X35,DIN 603MU	2
238841	01260282	HHCS,M8X30,DIN 933 - 8.8 ZN	3
	01230010	NUT,M10-1.5,HEX,CAP,DIN917,ZN	2
	01160600	CARRIAGE BOLT, M10 X 40mm	2
235831	01260320	HHCS, M10 X 25, DIN 933.8-8 ZN	2
	01800080	WASHER,10.5MM,DIN 9021A ZN	2
	01230010	NUT,M10-1.5,HEX,CAP,DIN917,ZN	4
	01160600	CARRIAGE BOLT, M10 X 40mm	4



# Door Panel Hinges *all doors*

**217505Z1** SPACER, HINGE ROLLER

**237602** GUIDE ROLLER

**205625** ROLLER, HINGE

**1335008** NUT, M8, NYLOCK

**217502-02Z1** AXLE, HINGE, 98mm, (SSN-L, STN-L, STN-S doors)

**218504Z1** AXLE, HINGE, 133mm, (SSN-S doors)

**Top Panel Only:**

**237506Z1** AXLE, HINGE, 99mm, TOP (SSN-L, STN-L, STN-S doors)

**238506Z1** AXLE, HINGE, 134mm, TOP (SSN-S doors)

**05250251** BUSHING, HINGE, 8 X 10 X 16 X 15  
**Qty: 2 per axle**

**1070525-0**  
GROOVED DOWEL PIN, SOLID, 3x18

**NOTE: part numbers vary based on door model**

**STT-L** Transpaent door slats, small  
**SST-L** Solid door slats, small  
**STT-S** Transpaent door slats, large  
**SST-S** Solid door slats, large  
**SST-US** Solid door slats, extra large

**Painted panels are configured parts, and require door serial number to order**

## Top panel

(SSN-L, STN-L, STN-S doors)


**231828-1** UNPAINTED HINGE ASSY, ALUM, TOP, 151X65, LH

**231828-2** UNPAINTED HINGE ASSY, ALUM, TOP, 151X65, RH

(SSN-S doors)

**232817-1** UNPAINTED HINGE ASSY, ALUM, TOP, 151X100, LH

**232817-2** UNPAINTED HINGE ASSY, ALUM, TOP, 151X100, RH

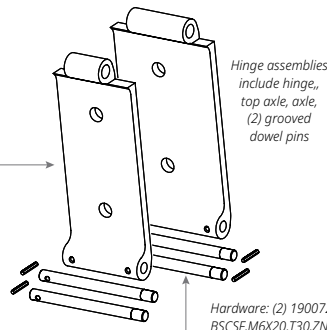

## Middle panels

(SSN-L, STN-L, STN-S doors)

**231847-1** UNPAINTED HINGE ASSY, ALUM, WIN, 151X65, LH

**231847-2** UNPAINTED HINGE ASSY, ALUM, WIN, 151X65, RH

(SSN-S doors)

**231859-1** UNPAINTED HINGE ASSY, ALUM, MID, 151X65, LH

**231859-2** UNPAINTED HINGE ASSY, ALUM, MID, 151X65, RH

(SSN-S doors)

**232815-1** UNPAINTED HINGE ASSY, ALUM, WIN, 151X100, LH

**232815-2** UNPAINTED HINGE ASSY, ALUM, WIN, 151X100, RH

**232827-1** UNPAINTED HINGE ASSY, ALUM, MID, 151X100, LH

**232827-2** UNPAINTED HINGE ASSY, ALUM, MID, 151X100, RH

(STN-L, STN-S doors)


**231854-1** UNPAINTED HINGE ASSY, ALUM, WIN, 225X65, LH

**231854-2** UNPAINTED HINGE ASSY, ALUM, WIN, 225X65, RH

(-S doors)

**232824/1** HINGE ASSY, MID/WIN, 225X100, LH

**232824/2** HINGE ASSY, MID/WIN, 225X100, RH

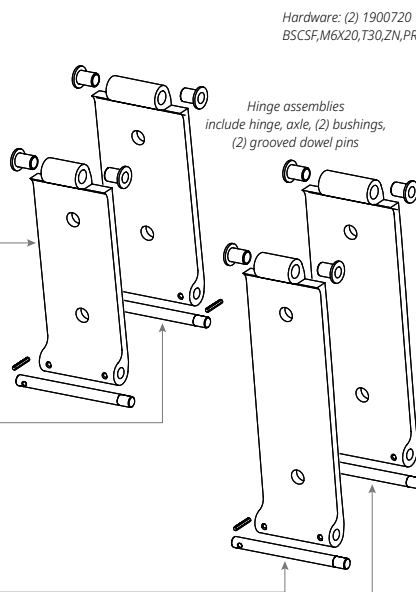

## Bottom panel

(SSN-L doors)

**1070995-1** UNPAINTED HINGE ASSY, ALUM, BOT, 151X65, LH

**1070995-2** UNPAINTED HINGE ASSY, ALUM, BOT, 151X65, RH

(STN-S doors)


**231827-1** UNPAINTED HINGE ASSY, ALUM, BOT, 151X65, LH

**231827-2** UNPAINTED HINGE ASSY, ALUM, BOT, 151X65, RH


(SSN-S doors)

**232816-1** UNPAINTED HINGE ASSY, ALUM, BOT, 151X100, LH

**232816-2** UNPAINTED HINGE ASSY, ALUM, BOT, 151X100, RH

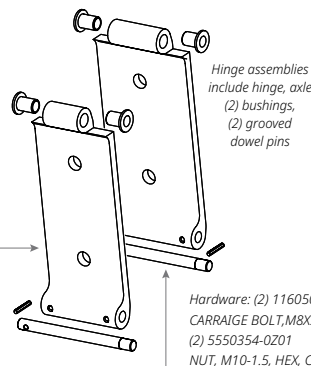

## Front and Bottom Hood Covers -L size doors

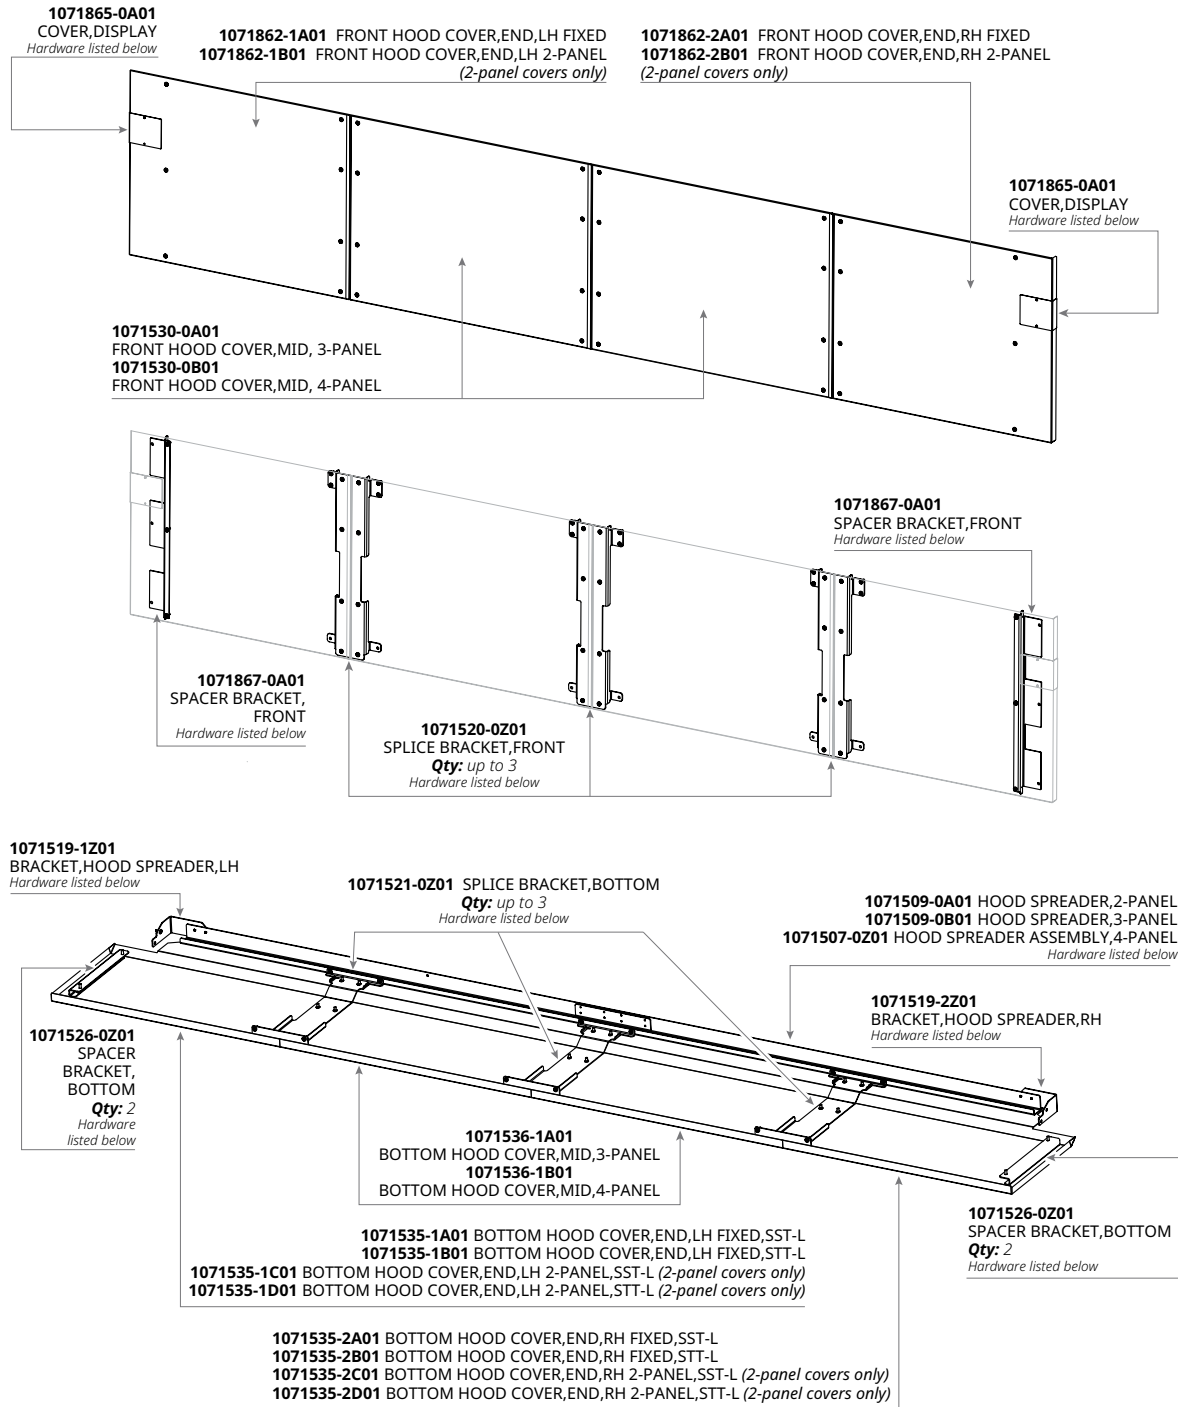


### Hardware – Order Separately

Part Number	Hardware	Description	Qty
1071509-X	01901508	NUT, M8 FLANGED	4
1071519-0Z01	01900820	BSCSF,M8-1.25 X 20,T40,ZN	2
1071520-0Z01	01900820	BSCSF,M8-1.25 X 20,T40,ZN	12
	01901508	NUT, M8 FLANGED	4
1071521-0Z01	01900820	BSCSF,M8-1.25 X 20,T40,ZN	10
	01901508	NUT, M8 FLANGED	2
1071526-0Z01	01900820	BSCSF,M8-1.25 X 20,T40,ZN	4
1071867-0A01	01900820	BSCSF,M8-1.25 X 20,T40,ZN	3
1071865-0Z01	01700100	TAP SCREW,3.9X16,DIN 7981HC ZN	2




**All panels are configured parts: require door serial number to order**

## Top Hood Covers, Flat and Slanted -L size doors

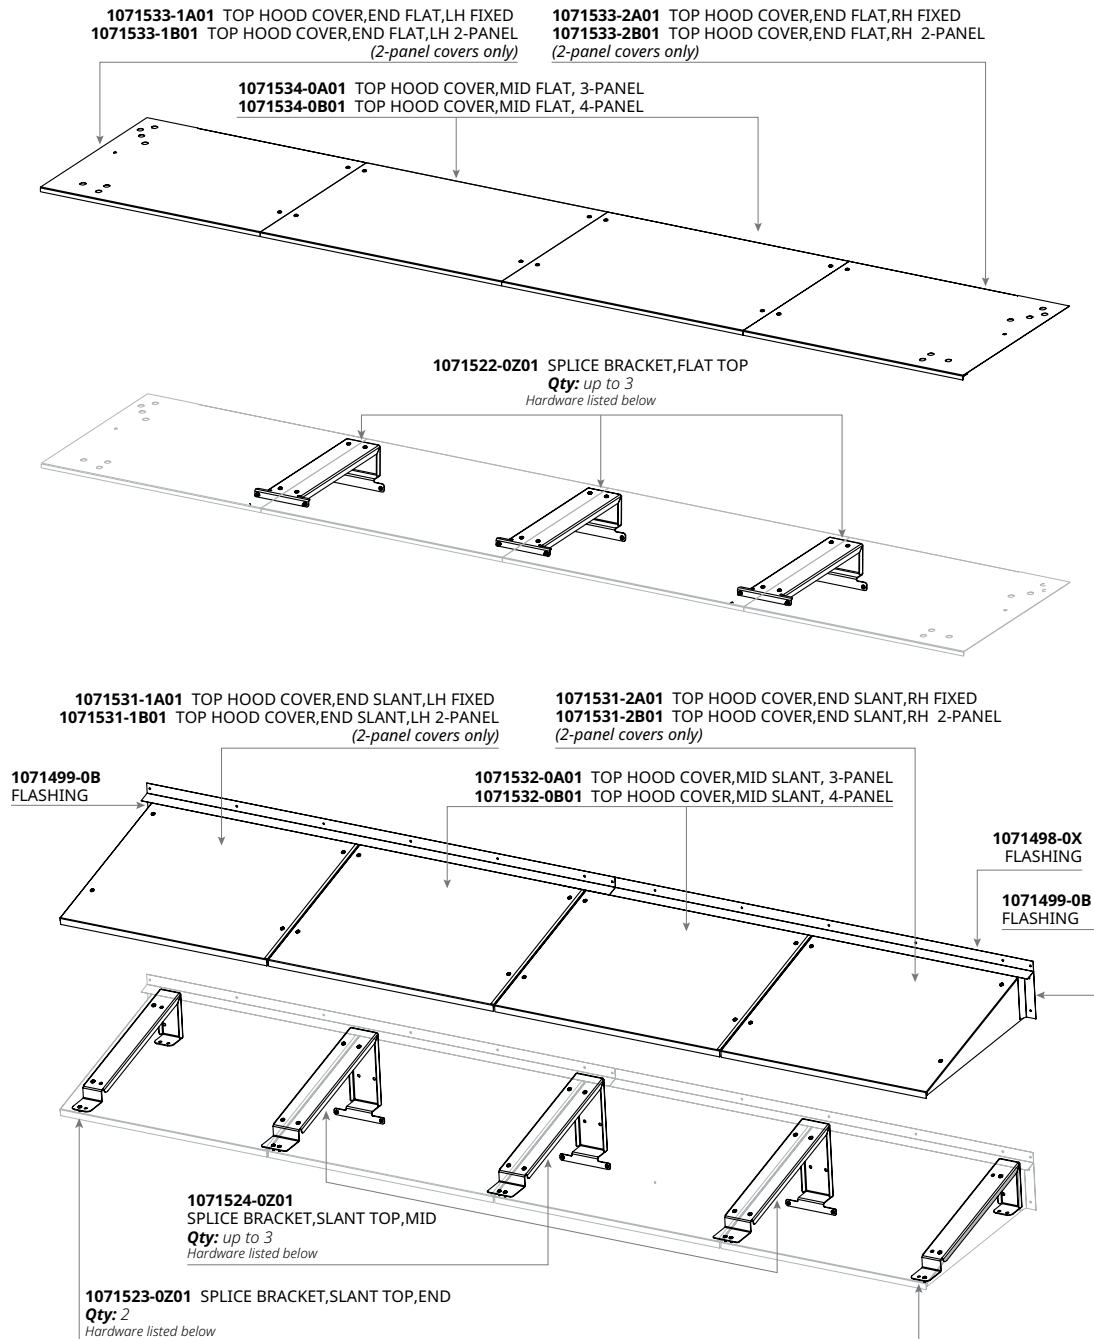

### Hardware – Order Separately

 
Part Number	Hardware	Description	Qty
1071522-0Z01	01900820	BSCSF,M8-1.25 X 20,T40,ZN	8
1071523-0Z01	01900820	BSCSF,M8-1.25 X 20,T40,ZN	8
1071524-0Z01	01900820	BSCSF,M8-1.25 X 20,T40,ZN	8
	01901508	NUT, M8 FLANGED	2



**All panels and flashing are configured parts: require door serial number to order**



## Front and Bottom Hood Covers -S size doors

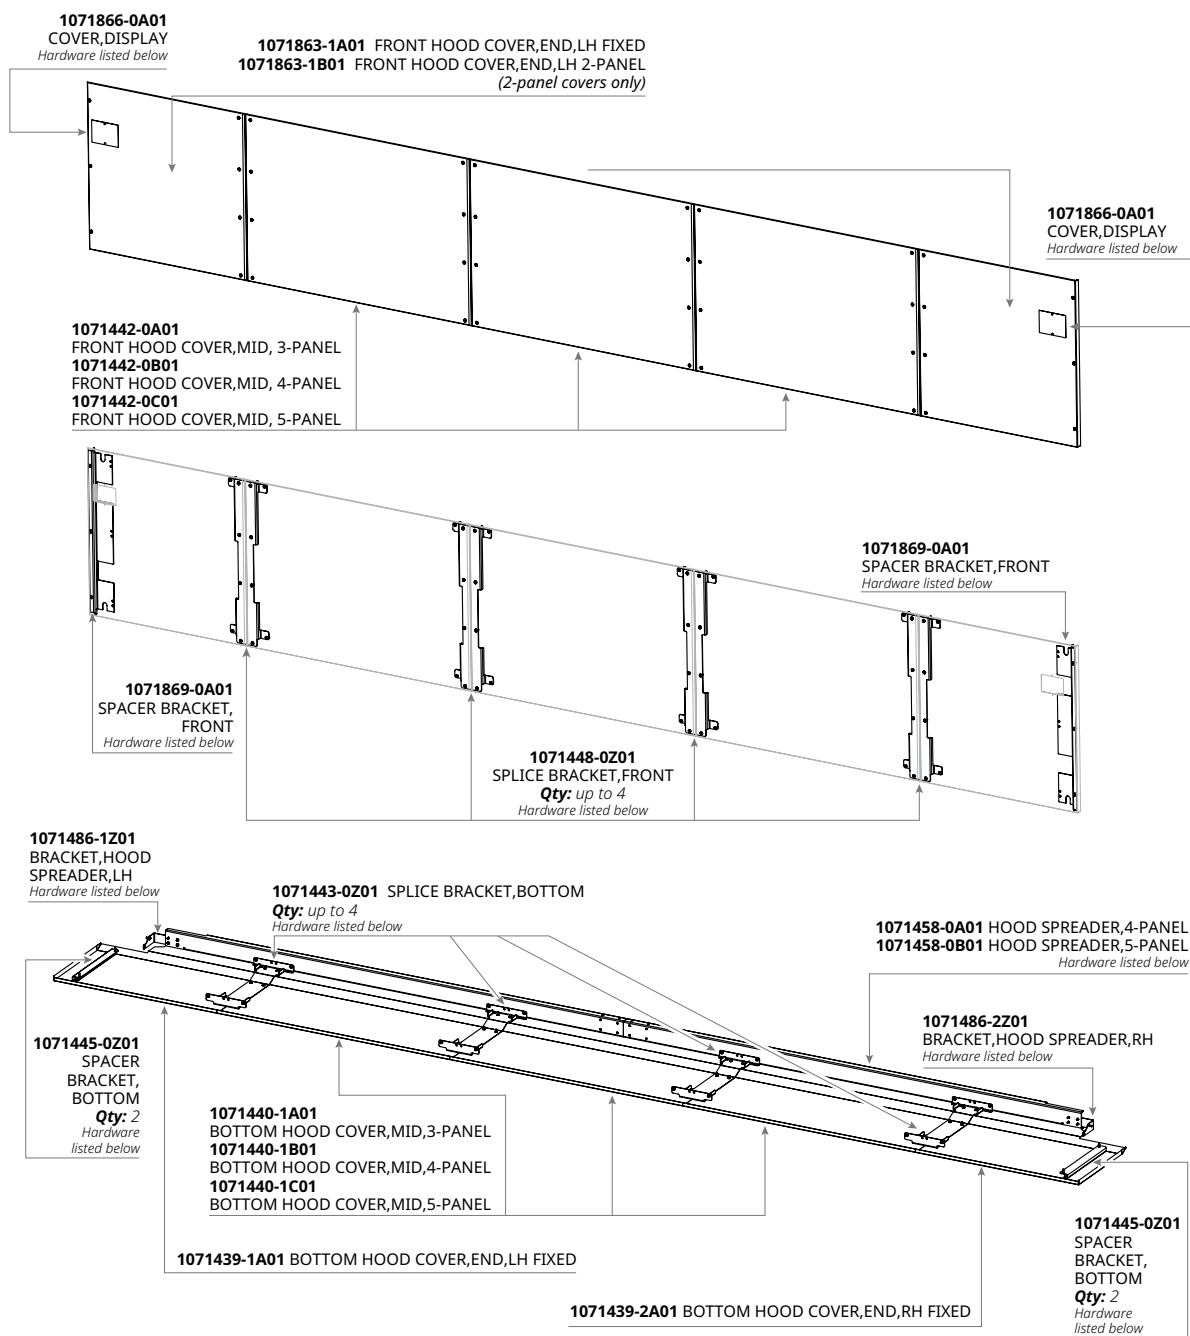


### Hardware – Order Separately

Part Number	Hardware	Description	Qty
1071443-0Z01	01900820	BSCSF,M8-1.25 X 20,T40,ZN	8
	01901508	NUT, M8 FLANGED	2
1071445-0Z01	01900820	BSCSF,M8-1.25 X 20,T40,ZN	4
1071448-0Z01	01900820	BSCSF,M8-1.25 X 20,T40,ZN	12
	01901508	NUT, M8 FLANGED	4
1071458-X	01900820	BSCSF,M8-1.25 X 20,T40,ZN	4
	01901508	NUT, M8 FLANGED	4
1071866-0Z01	01700100	TAP SCREW,3.9X16,DIN 7981HC ZN	2
1071869-0A01	01900820	BSCSF,M8-1.25 X 20,T40,ZN	3
1071486-0Z01	01900820	BSCSF,M8-1.25 X 20,T40,ZN	2



**All panels and flashing are configured parts: require door serial number to order**

## Top Hood Covers, Flat and Slanted -S size doors

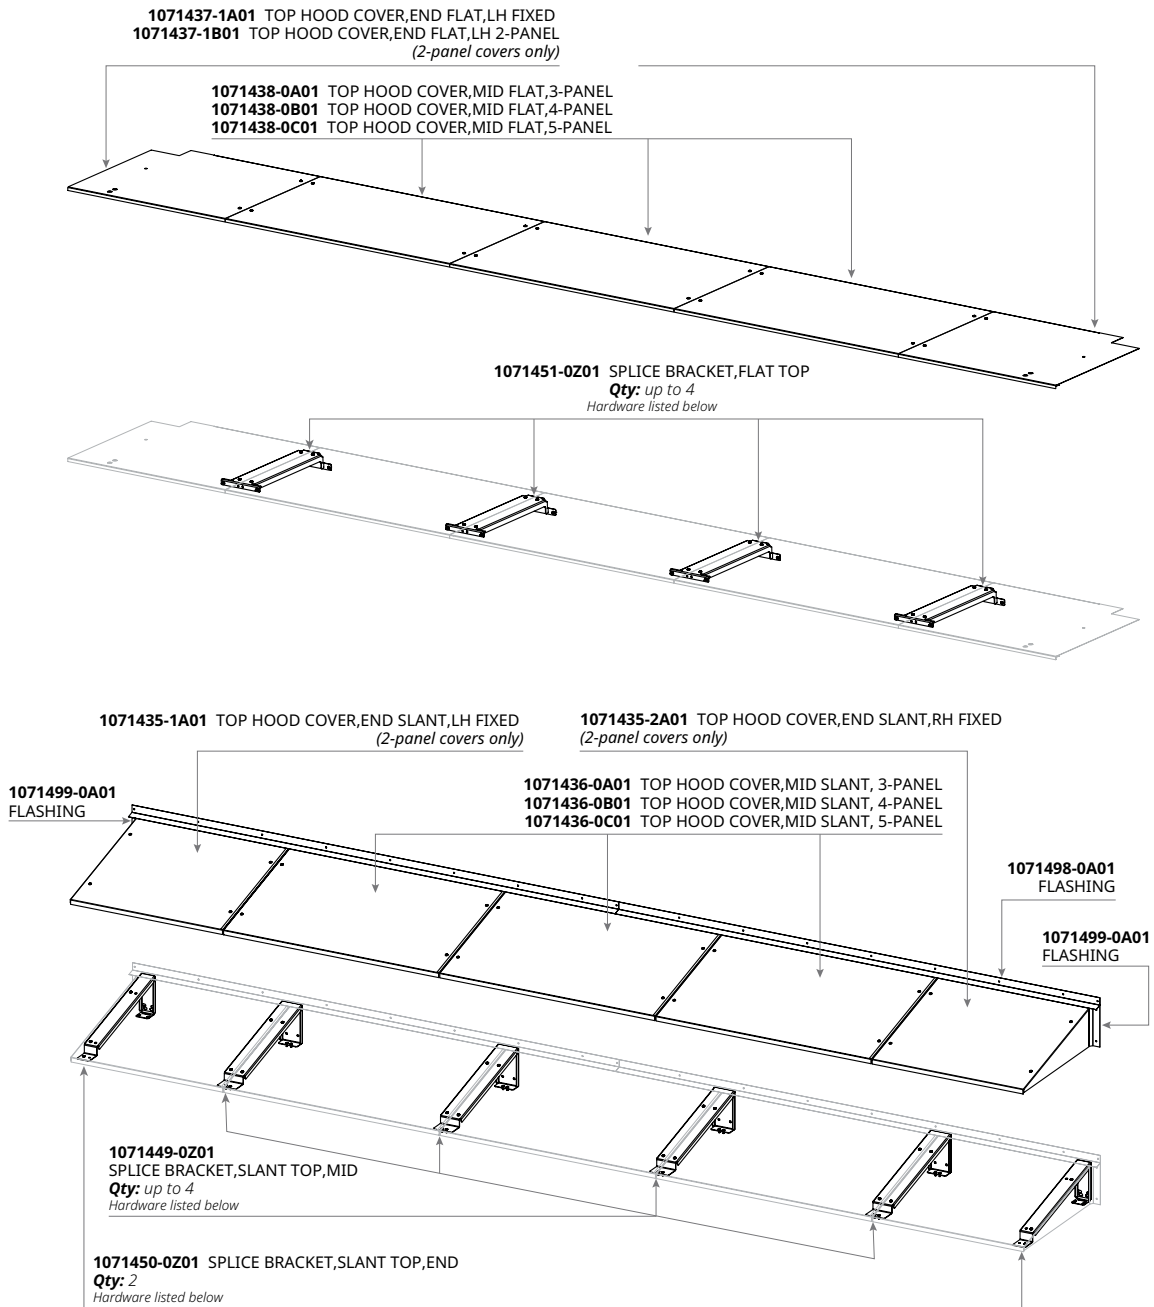


### Hardware – Order Separately

Part Number	Hardware	Description	Qty
1071449-0Z01	01900820	BSCSF,M8-1.25 X 20,T40,ZN	10
	01901508	NUT, M8 FLANGED	4
1071450-0Z01	01900820	BSCSF,M8-1.25 X 20,T40,ZN	8
1071451-0Z01	01900820	BSCSF,M8-1.25 X 20,T40,ZN	8
	01901508	NUT, M8 FLANGED	4



**All panels and flashing are configured parts: require door serial number to order**

## Front and Bottom Hood Covers -US size doors

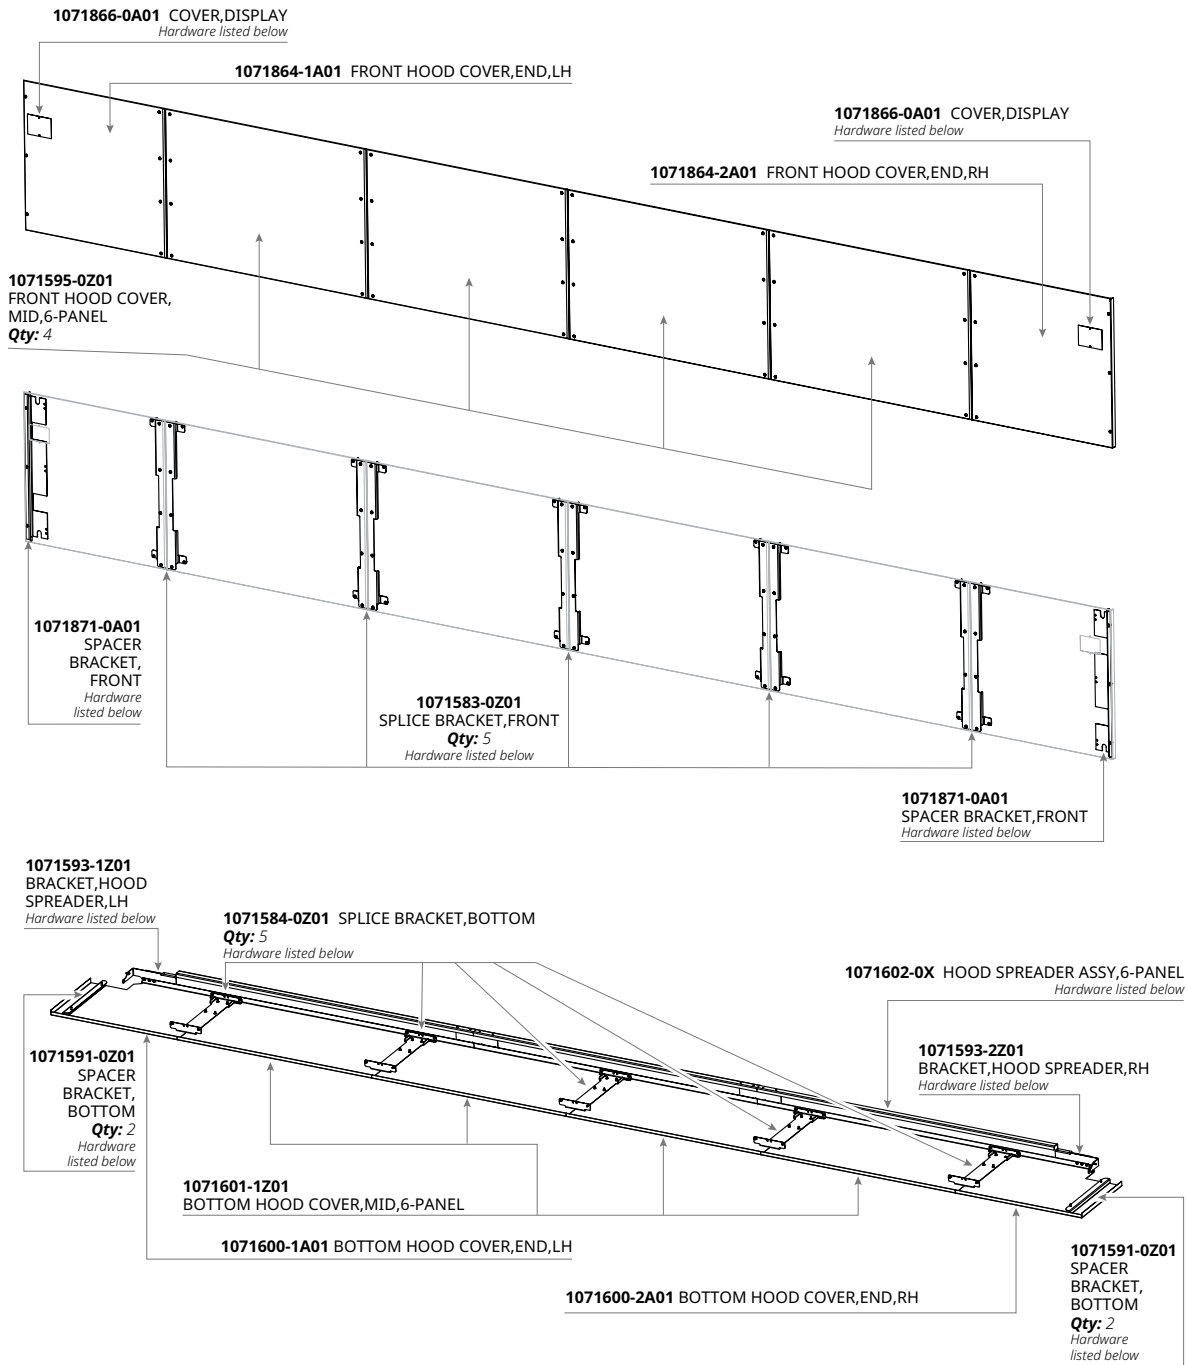


### Hardware – Order Separately

Part Number	Hardware	Description	Qty
1071583-0Z01	01900820	BSCSF,M8-1.25 X 20,T40,ZN	12
	01901508	NUT, M8 FLANGED	4
1071584-0Z01	01900820	BSCSF,M8-1.25 X 20,T40,ZN	10
	01901508	NUT, M8 FLANGED	4
1071591-0Z01	01900820	BSCSF,M8-1.25 X 20,T40,ZN	4
1071593-0Z01	01900820	BSCSF,M8-1.25 X 20,T40,ZN	5
1071602-X	01900820	BSCSF,M8-1.25 X 20,T40,ZN	6
1071871-0A01	01900820	BSCSF,M8-1.25 X 20,T40,ZN	3
1071866-0Z01	01700100	TAP SCREW,3.9X16,DIN 7981HC ZN	2



**All panels and flashing are configured parts: require door serial number to order**

## Top Hood Covers, Flat and Slanted -US size doors

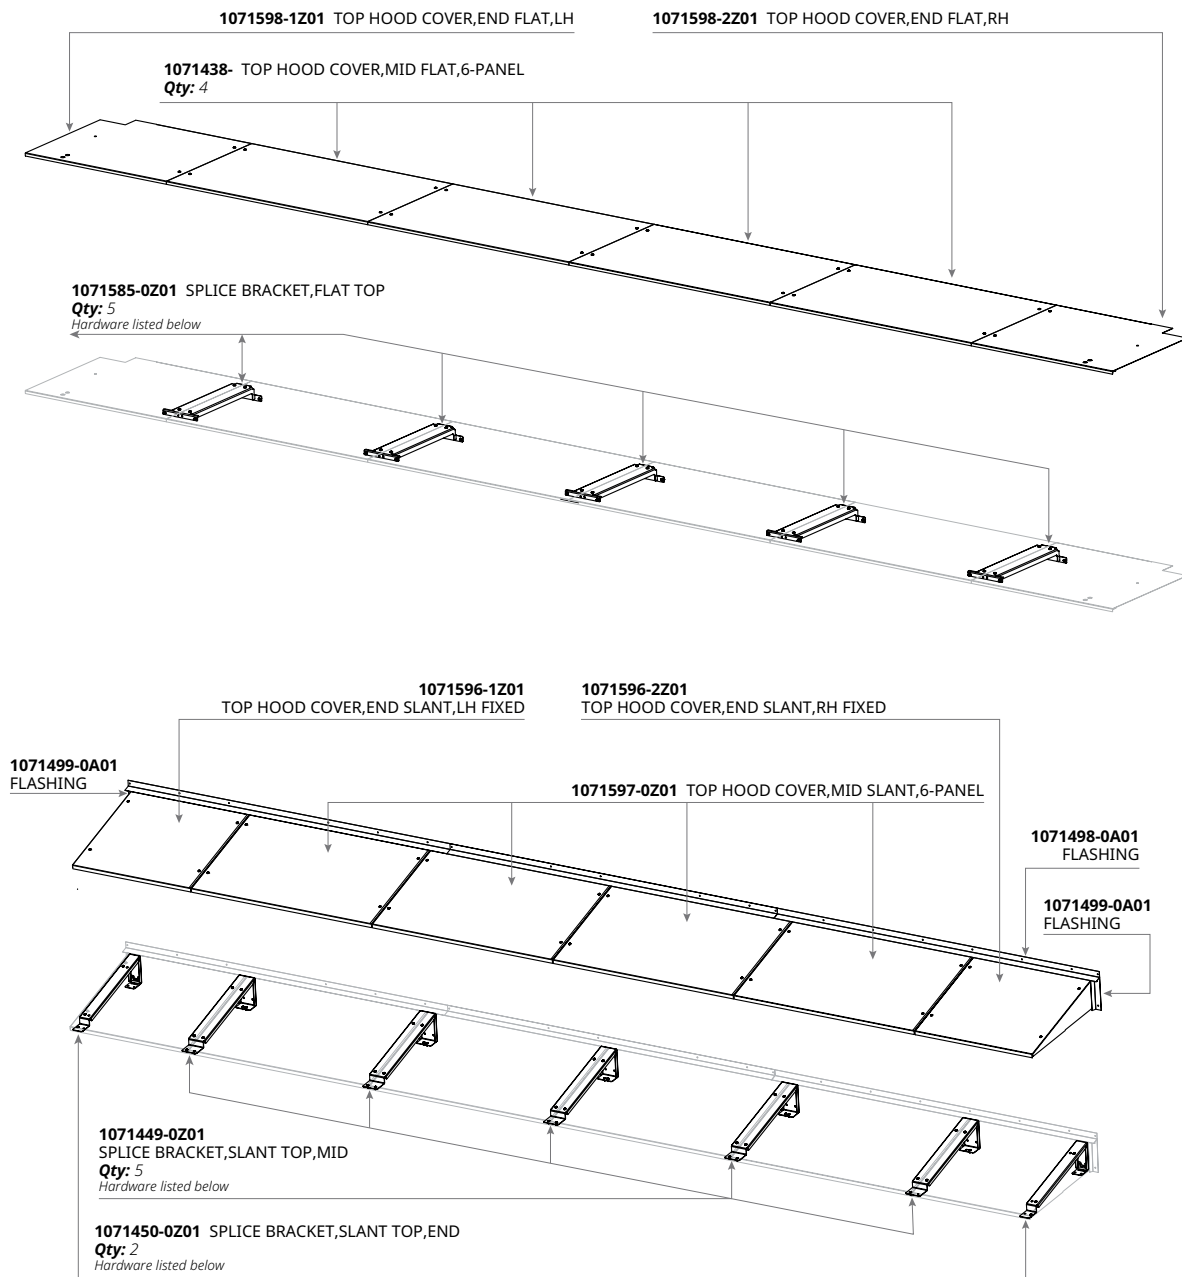


### Hardware - Order Separately

Part Number	Hardware	Description	Qty
1071449-0Z01	01900820	BSCSF,M8-1.25 X 20,T40,ZN	8
	01901508	NUT, M8 FLANGED	4
1071450-0Z01	01900820	BSCSF,M8-1.25 X 20,T40,ZN	8
1071585-0Z01	01900820	BSCSF,M8-1.25 X 20,T40,ZN	8
	01901508	NUT, M8 FLANGED	4



**All panels and flashing are configured parts: require door serial number to order**

# Motor and Encoder -L and -S size doors

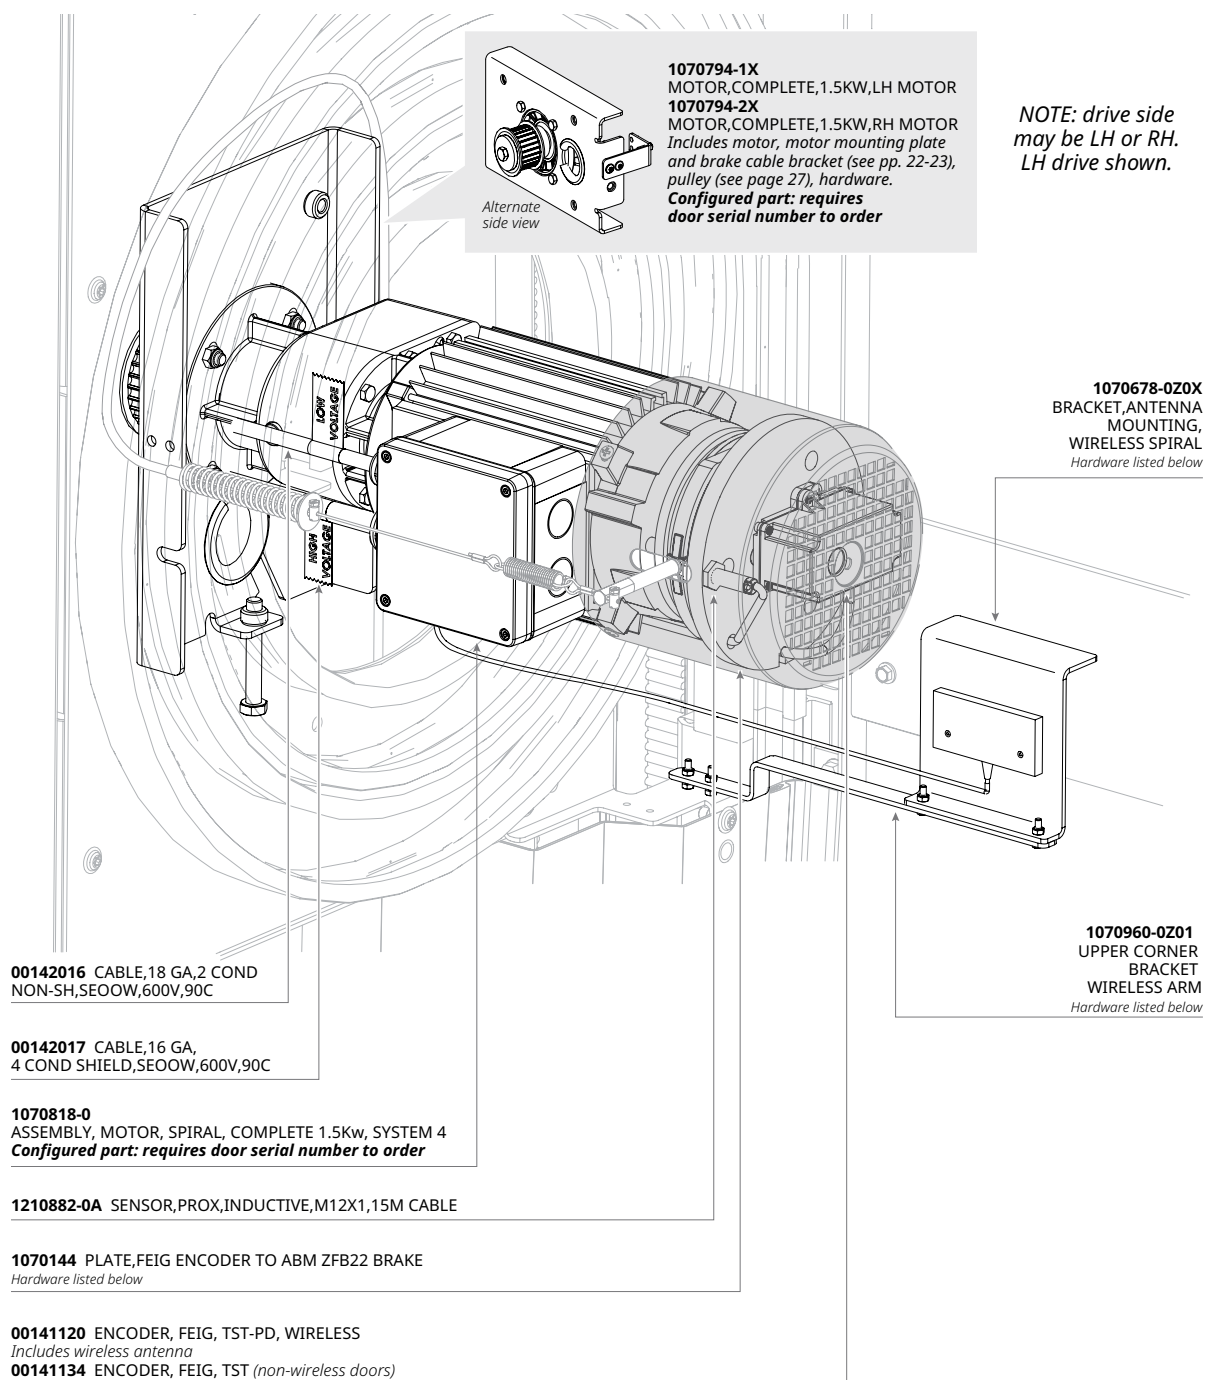


## Hardware - Order Separately

Part Number	Hardware	Description	Qty
1070144	01750080	FHSCS, M6X16, DIN 7991 10.9	3
1070960-0Z01	5550246-0Z01	HHCS M4-0.7X16 GR5 ZN	4
	5550057-0Z01	NUT, M4-0.7, HEX HEAD, ZINC, NYLOCK	4
1070678-0Z0X	5550264-0	RATCHET FASTENER, .16 X .04-.25, BLK NYLON	2



 01750080



5550246-0Z01




5550057-0Z01



5550264-0

## Brake Components -L and -S size doors

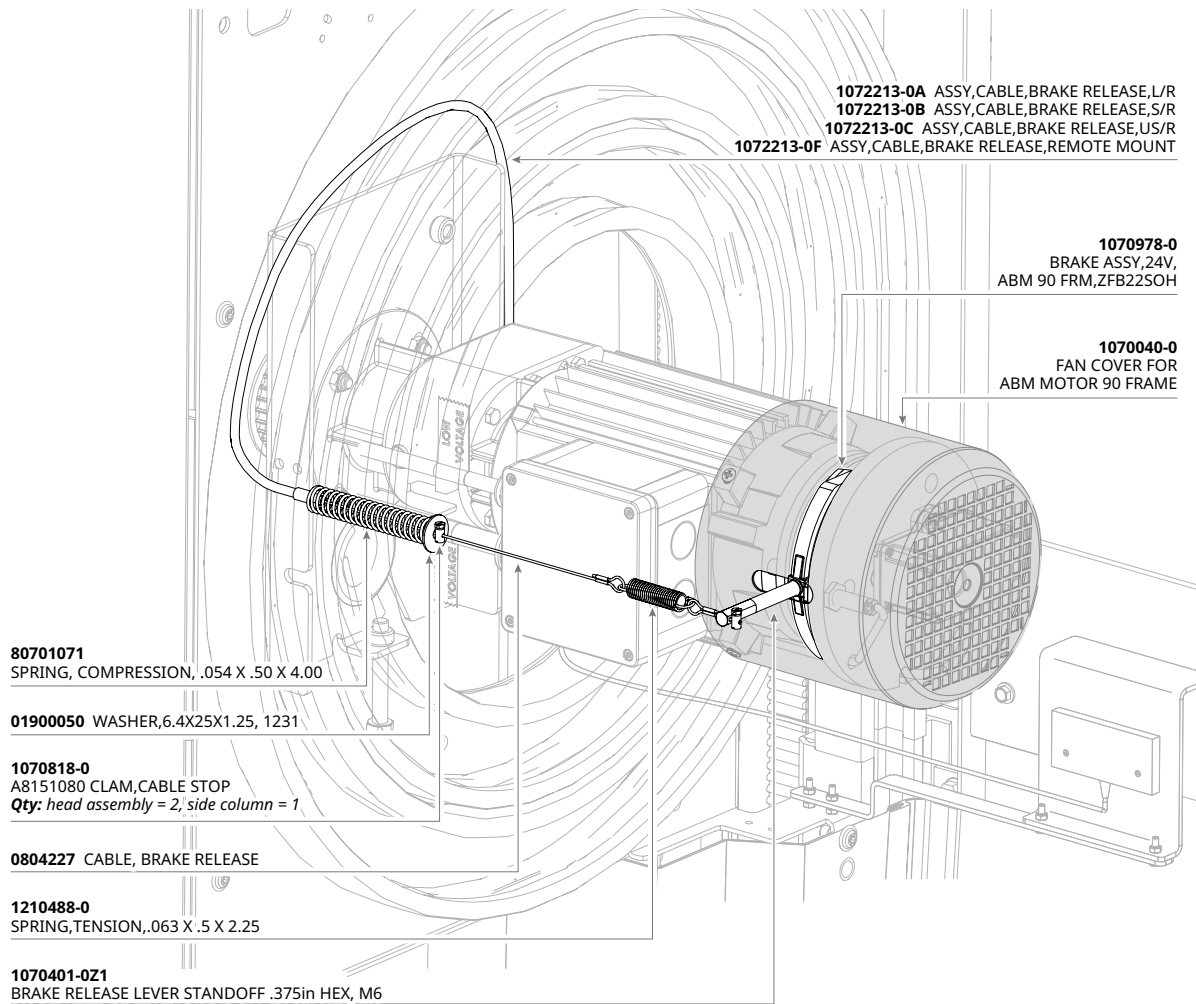


*NOTE: drive side  
 may be LH or RH.  
 LH drive shown.*

**1210775-0A** ASSY,RELEASE LEVER,DECAL,UNLOCK  
*Secured by 08151080 CLAMP,CABLE STOP  
 Hardware listed below*

**1071407-0**  
 COVER, BRAKE RELEASE  
 HANDLE CUTOUT  
*Hardware listed below*

### Hardware - Order Separately

 Part Number	Hardware	Description	
1210775-0A	5550054-0Z01	PFMS, M4 X 0.70 X 12MM LG, ZINC	2
	5550057-0Z01	HLNNI M4-0.7 GR8 ZN	2
1071407-0	5550054-0Z01	PFMS, M4 X 0.70 X 12MM LG, ZINC	2
	5550057-0Z01	HLNNI M4-0.7 GR8 ZN	2



5550054-0Z01



5550057-0Z01

## Motor and Encoder -US size doors

### 1070819-0

ASSEMBLY, SEW MOTOR & MOUNTING BRACKETS,  
RUS SPIRAL DOOR, SYS 4  
Includes motor, bracket, encoder, wireless antenna, hardware.  
**Configured part: requires door serial number to order**

### 1070568-0

BRACKET, MOTOR MOUNT, RUS WITH  
SEW MOTOR & FEIG ENCODER  
Hardware listed below

00142016 CABLE,18 GA,2 COND  
NON-SH,SEOWW,600V,90C

00142017 CABLE,16 GA,  
4 COND SHIELD,SEOWW,600V,90C

### 1070657-0

MOTOR/GEARBOX, EURODRIVE  
DRS SERIES, PRODUCTION MOTOR CHART,  
24V BRAKE, RUS SPIRAL  
**Configured part: requires  
door serial number to order**

00141120 ENCODER, FEIG, TST-PD, WIRELESS  
Includes wireless antenna

00141134 ENCODER, FEIG, TST

NOTE: drive side  
may be LH or RH.  
LH drive shown.

### 1070960-0Z01

UPPER CORNER BRACKET WIRELESS ARM  
Hardware listed below

### 1070678-0Z0X

 
BRACKET,ANTENNA MOUNTING, WIRELESS SPIRAL  
Hardware listed below

### Hardware - Order Separately

Part Number	Hardware	Description	Qty
1070144	01750080	FHSCS,M6X16,DIN 7991 10.9	3
1070960-0Z01	5550246-0Z01	HHCS M4-0.7X16 GR5 ZN	4
	5550057-0Z01	NUT, M4-0.7, HEX HEAD,ZINC,NYLOCK	4
1070678-0Z0X	5550264-0	RATCHET FASTENER,.16 X .04-.25,BLK NYLON	2



01750080



5550246-0Z01



5550264-0



5550057-0Z01



## Brake and Proximity Sensor Components -US size doors

**1210567-0D**  
BRAKE ASSEMBLY KIT, SEW 24V DR MOTOR

**0703338**  
SENSOR BRACKET, CR, BRAKE SWITCH  
*Hardware listed below*

**1210883-0A**  
SENSOR,PROX,INDUCTIVE,M18X1,15M CABLE

**0550278**  
BRAKE RELEASE EYE BOLT, EURODRIVE, M8-1.25 x 40, STL Zn

**1210490-0** SPRING,TENSION,.085 X .75 X 2.50

**0804227** CABLE, BRAKE RELEASE

**08151080** CLAMP, CABLE STOP  
*Qty: head assembly = 1, side column = 1*

**01900050** WASHER,6.4X25X1.25, 1231

**1210491-0** SPRING,COMPRESSION,.055 X .72 X 2.0

**0804228** CASING, CABLE, BRAKE RELEASE

**1071074-0**  
BRKT,BRAKE RELEASE,SEW MTR w\_FEIG ENCDR

 
*NOTE: drive side  
may be LH or RH.  
LH drive shown.*

**1210775-0A** ASSY,RELEASE LEVER,DECAL,UNLOCK  
*Secured by 08151080 CLAMP,CABLE STOP  
Hardware listed below*

**1071407-0**  
COVER,  
BRAKE RELEASE  
HANDLE CUTOUT  
*Hardware listed below*

### Hardware – Order Separately


Part #	Hardware	Description	Qty
0703338	S021018	HEX NUT, #10-24UNC, SS	2
	S021649	SCREW, #10-24UNC X 3/8 LG, PHIL FLAT HD, 18-8 SS	2
1210775-0A,	5550054-0Z01	PFMS, M4 X 0.70 X 12MM LG, ZINC	2
1071407-0	5550057-0Z01	HLNNI M4-0.7 GR8 ZN	2



S021649



 S021018






5550054-0Z01



5550057-0Z01

# Spring Assemblies - Part 1 *all doors*

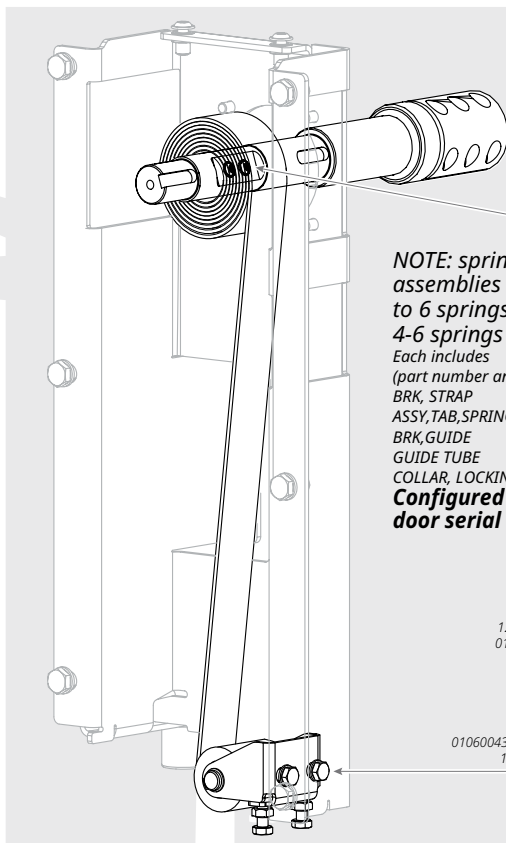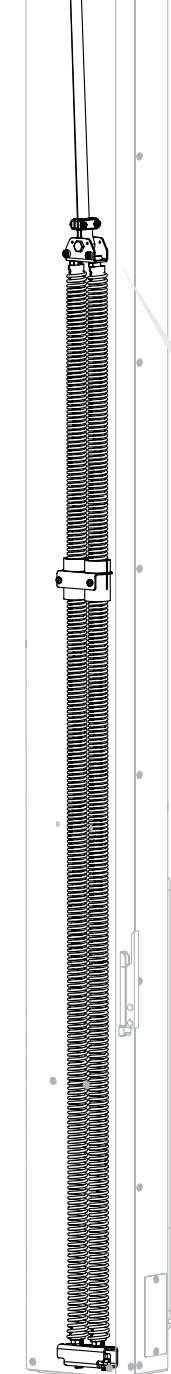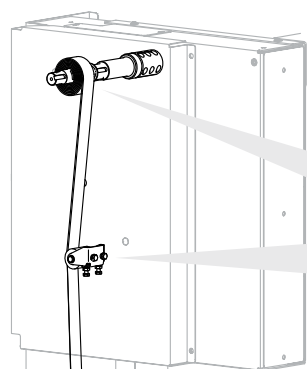

**01900708**  
BSCSF,M6X8,T30,ZN  
**Qty: 2**  
Secure strap to drive shaft


**NOTE:** springs are installed in assemblies of 1-3 springs, with up to 6 springs per side column; 4-6 springs have 2 assemblies.

Each includes  
(part number and qty. vary by configuration):  
BRK, STRAP  
ASSY,TAB,SPRING  
BRK,GUIDE  
GUIDE TUBE  
COLLAR, LOCKING

**Configured part: requires door serial number to order**

**1071539-0Z01**  
ASSY, GUIDE PULLEY, SINGLE

Hardware:  
1260272 HHCS,M8X16,DIN 933 - 8.8 ZN (4),  
01060042 WASHER,8.4mm,DIN 125A ZN (2),  
5550303-0Z01 HWNSTP M8-1.25 STL (4)  
**1071541-0Z01**  
ASSY, GUIDE PULLEY, DOUBLE  
Hardware:  
5550304-0Z01 HWNSTP M10-1.5 STL (2),  
01060043 WASHER, 10.5mm FLAT, DIN 125A ZN (2),  
1260310 HHCS,M10X20,DIN 933-8.8 ZN (2)

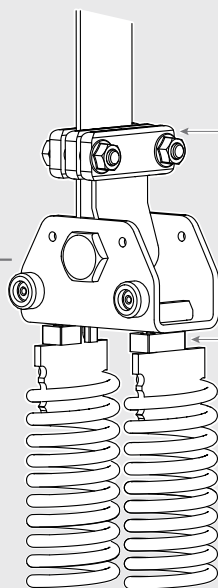


**1071794-0**  
ASSY,STRAP,SPRING,40BLUE  
Includes 1071989-0 STRAP,SPRING,CUT LGTH/HOLES  
1210724-0Z01 PLATE,CLAMP,40mm WIDE STRAP (3)  
1260286 HHCS M8-1.25X40 GR8.8 ZN (2)  
1901608 M8-1.25 HEX PRESS NUT (2)


**1071985-0A** BRKT,STRAP,1 SPRING  
**1071985-0B** BRKT,STRAP,2 SPRING  
**1071985-0C** BRKT,STRAP,3 SPRING

**1071781-0** COLLAR,LOCKING


**1071776-0Z01** ASSY,TAB,SPRING

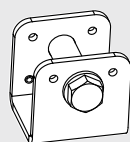

**1071985-0A**  
BRKT,STRAP,1 SPRING

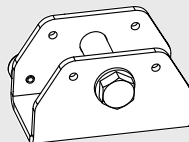


**1071985-0B**  
BRKT,STRAP,2 SPRING

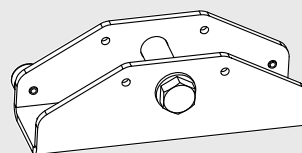

**1071985-0C**  
BRKT,STRAP,3 SPRING


## Spring Assemblies - Part 2 *all doors*

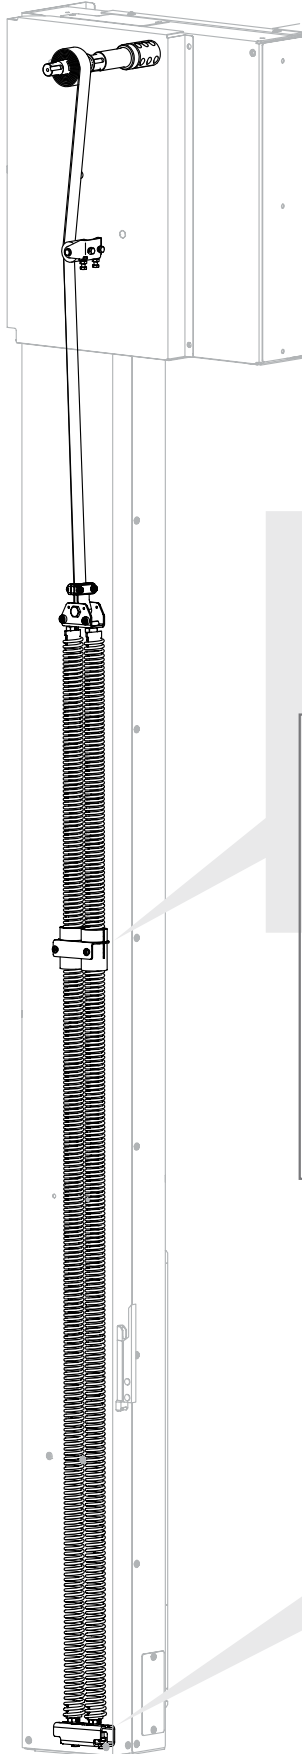

**NOTE:** springs are installed in assemblies of 1-3 springs, with up to 6 springs per side column; 4-6 springs have 2 assemblies.  
Each includes (part number and qty. vary by configuration:)

BRK, STRAP  
ASSY,TAB,SPRING  
BRK,GUIDE  
GUIDE TUBE  
COLLAR, LOCKING

**Configured part: requires door serial number to order**

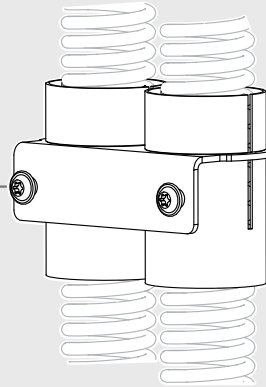

**GUIDE BRACKET ASSEMBLY**  
Hardware: 1900812 BSCSF,M8-1.25 X 12,T40,ZN(2)

 
**217605**  
GUIDE TUBE, SPRING PACK HARD PVC  
Qty: 1-6 based on spring pack assembly




**1071987-0Z01**  
ASSY,GUIDE BRKT,OUTER,1 SPRING




**217902Z4**  
GUIDE BRKT ASSY,OUTER,2 SPRING



 
**218104Z4**  
GUIDE BRKT,INNER,2 SPRING



 
**218895Z4**  
GUIDE BRACKET ASSY, OUTER, 2 SPRING



 **218103Z4**  
GUIDE BRKT,INNER,3 SPRING



**217901Z4**  
GUIDE BRKT ASSY,OUTER,3 SPRING

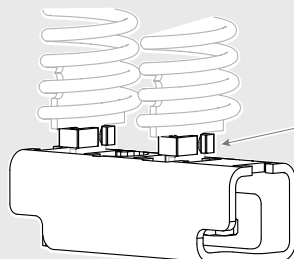


**1071781-0** COLLAR,LOCKING

**1071777-0A01**  
TUBE,BASEPLATE,SPRING MOUNT,SHORT (STT-L)  
**1071777-0B01**  
TUBE,BASEPLATE,SPRING MOUNT,LONG  
Hardware:  
1300530 SCREW, M10 X 30, DIN 963-4.8 (2)  
1270060 NUT, M10 HEX, DIN 934-8 ZN (4)

## Remote Mobile Unit *all doors*

**1210110-0** LABEL, WIRELESS COVER, RY-WI

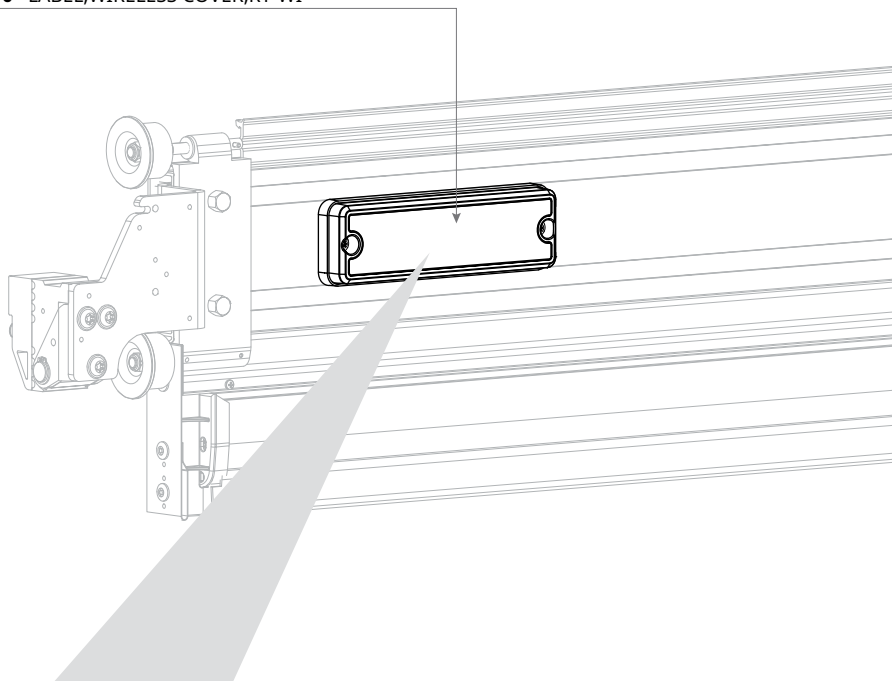


**1180001-0B** ASSY, MOBILE UNIT, POTTED, SPIRAL (*includes Service Bulletin 234*)

**1060116-0**  
COVER, WIRELESS

**00111193**  
BATTERY WIRELESS "D" W/TABS


**1070625-0**  
GASKET, WIRELESS COVER

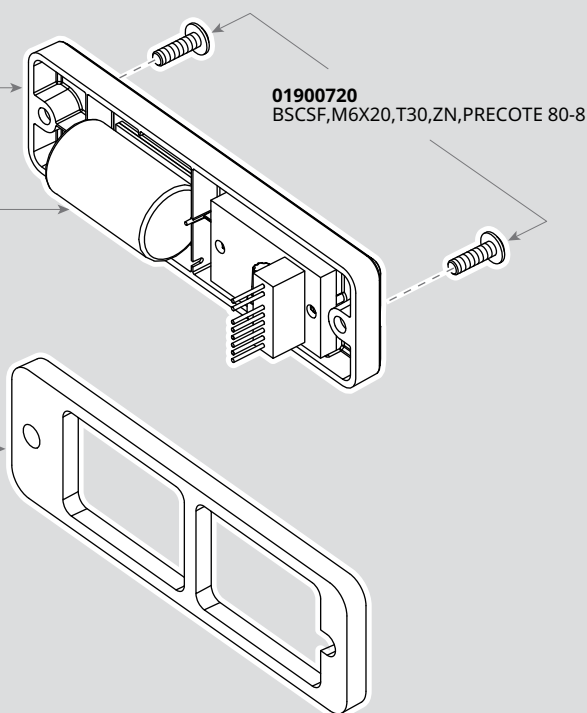

# SmartSurround™ and Advanced<sup>3</sup> Light Curtains *all doors*

**1210852-0A**  
LIGHT CURTAIN,LGD,TRANS,2105mm  
**1210852-0B**  
LIGHT CURTAIN,LGD,REC,2105mm  
**1210852-0C**  
LIGHT CURTAIN,LGD,TRANS,1565mm  
**1210852-0D**  
LIGHT CURTAIN,LGD,REC,1565mm

 **Requires door serial number:  
part number based on height of door**



LGD (Advanced<sup>3</sup>) light curtain labels


**1071846-0C**  
TRACK CLIP,WIRE CHASE,LIGHT CURTAIN,2077mm  
**1071846-0D**  
TRACK CLIP,WIRE CHASE,LIGHT CURTAIN,1527mm  
**1071846-0E**  
TRACK CLIP,WIRE CHASE,LIGHT CURTAIN,977mm

**Requires door serial number:  
part number based on height of door**

## Hardware - Order Separately

 Part Number	Hardware	Description
1210865-0X	0551050	#12-14 X 3/4", SELF TAPPING HEX HEAD SCREW
	1210877-0A	P-CLIP,.313"
	5550350-0A04	PFSMS #8X1.25 SS
	5550353-0	CONCRETE ANCHOR,#8 X1.00

Qty				
4				
2	0551050	1210877-0A	5550350-0A04	5550353-0
4				
4				



**1210865-0A**  
ASSY,LED LIGHT CURTAIN,LGCA,TRANS  
includes 1210851-0A LED LIGHT CURTAIN,LGCA,TRANS and  
1210854-0A MOUNTING CHANNEL, LGCA

 
 
**1210865-0B**  
ASSY,LED LIGHT CURTAIN,LGCA,REC  
includes 1210851-0B LED LIGHT CURTAIN,LGCA,REC and  
1210854-0A MOUNTING CHANNEL, LGCA

**1210865-0C**  
ASSY,LED LIGHT CURTAIN,LGCA,TRANS (labeled)  
includes 1210851-0A LED LIGHT CURTAIN,LGCA,TRANS,  
1210854-0A MOUNTING CHANNEL, LGCA  
and 1210869-0A LABEL,IDENTIFICATION,01


**1210865-0D**  
ASSY,LED LIGHT CURTAIN,LGCA,REC (labeled)  
includes 1210851-0B LED LIGHT CURTAIN,LGCA,REC,  
1210854-0A MOUNTING CHANNEL, LGCA  
and 1210869-0A LABEL,IDENTIFICATION,01

Hardware listed below

**NOTE: light curtain transmitter  
and receiver may be LH or RH.  
Check label on module.**



LGCA (SmartSurround™) light curtain labels

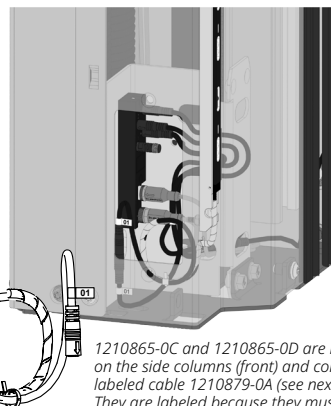


1210865-0C and 1210865-0D are mounted  
on the side columns (front) and connect to  
labeled cable 1210879-0A (see next page).  
They are labeled because they must be  
disconnected before the side column is removed,  
then reconnected when the panel is reinstalled.

# CAN Cables, Connectors and Components *all doors*

NOTE: drive side may be LH or RH.

\* = multiple variations of part number: use wildcard to search (Rytec parts representative)

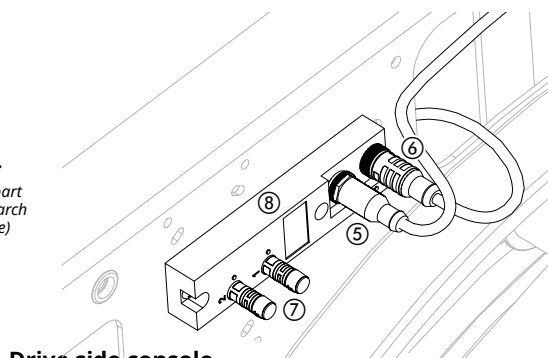


Drive side console

NOTE: part numbers vary based on door model


- STT-L Transpaent door slats, small
- SST-L Solid door slats, small
- STT-S Transpaent door slats, large
- SST-S Solid door slats, large
- SST-US Solid door slats, extra large

- ① **1072422-** BRACKET ASSY,CAN BOX,SPIRAL,REPEATER BOX  
Includes 1210858-0B CAN BOX,REPEATER,4-CHANNEL and 1210861 HOLDER,MULTITUBE,.25" OD,5CHANNEL  
**To order: requires door serial number and location of side column (left side or right side when viewed from front of door)**  
Hardware listed below
- ② **1072422-** BRACKET ASSY,CAN BOX,SPIRAL,DISTRIBUTION BOX  
Includes 1210857-0B CAN BOX,DISTRIBUTION,4-CHANNEL and 1210861 HOLDER,MULTITUBE,.25" OD,5CHANNEL  
**To order: requires door serial number and location of side column (left side or right side when viewed from front of door)**  
Hardware listed below
- ③ **1210800-0A** CABLE,6 COND,M8 SOCKET TO M8 PLUG,9M  
Connects to (optional) remote mounted BTA4 user terminal  
**1210800-0B** CABLE,6 COND,M8 SOCKET TO M8 PLUG,0.3M  
Connects to wall mounted (rear) SmartSurround™  
**1210800-0C** CABLE,6 COND,M8 SOCKET TO M8 PLUG,1.5M  
Connects to CAN bus-enabled encoder (not yet in use)  
**1210800-0D** CABLE,6 COND,M8 SOCKET TO M8 PLUG,2M  
Connects to (optional) side column mounted BTA4 user terminal  
**1210800-0E** CABLE,6 COND,M8 SOCKET TO M8 PLUG,2.7M  
Connects to Advanced<sup>2</sup> light curtain  
**1210800-0F** CABLE,6 COND,M8 SOCKET TO M8 PLUG,15M  
Connects to (optional) remote mounted BTA4 user terminal
- ④ **1210879-0A** CABLE ASSY,LABELED,M8,0.3M,01  
Connects to side column mounted (front) SmartSurround™
- ⑤ **1210855-** CABLE,4 COND,M12 SOCKET TO M12 PLUG  
**Multiple lengths: requires door serial number to order**
- ⑥ **1210856-** CABLE,4 COND,M12 SOCKET TO FLY LEAD  
**Multiple lengths: requires door serial number to order**
- ⑦ **1210860-0A** JUMPER,0 OHM,M8 PLUG,6-PIN
- ⑧ **1210858-0A** CAN BOX,REPEATER,2-CHANNEL (standard, shown above)  
**1210858-0B** CAN BOX,REPEATER,4-CHANNEL

**1210855**  
these cables connect CAN boxes and screw together

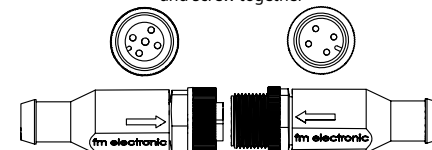

**1210856**  
Cable to controller

 


**1210800, 1210879-0A**  
these cables connect devices to CAN boxes and snap together

Arrows embossed on side of connectors line up when contacts are properly aligned.  
Connectors will only connect completely when arrows are lined up.




**1210859-0A** RESISTOR,120 Ω,M8 PLUG,6-PIN  
Used for troubleshooting CAN bus

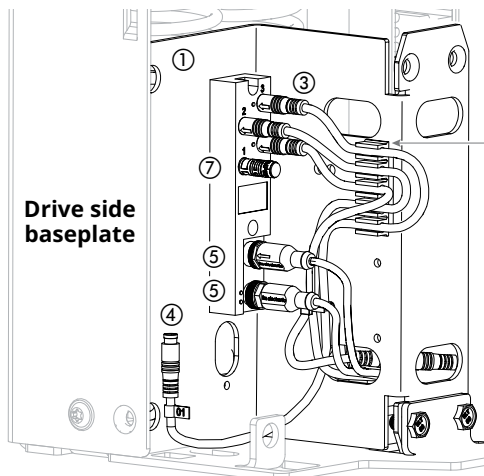

Drive side baseplate


**1210681-0**  
HOLDER,MULTITUBE,.25" OD, 5-CHANNEL

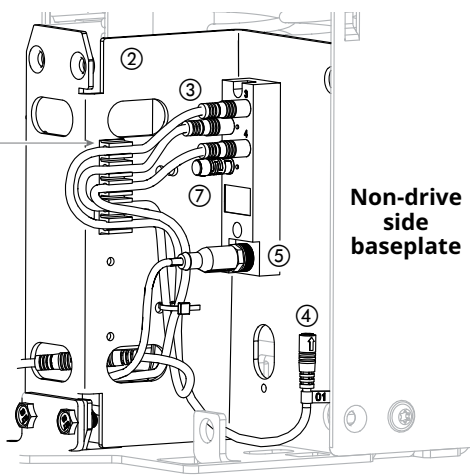

Non-drive side baseplate


## Hardware – Order Separately

 PN/Description	Hardware	Description	Qty
1072422-XX	5550300-0Z01	HFSMS, M8-1.25X12 CL 10.9 ZH	2



5550300-0Z01

# System 4® Controller and Accessories *all doors*

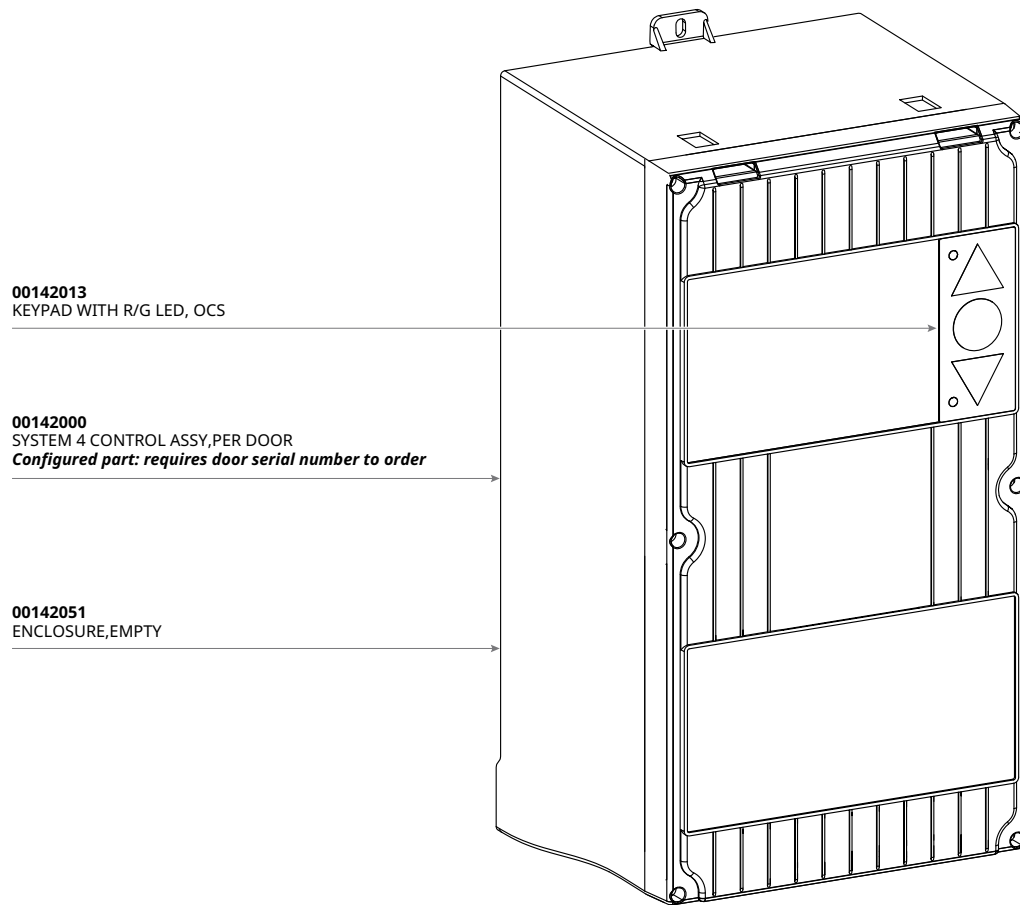

00142020 USB DRIVE



00142015 BATTERY, BUTTON CELL, CR2032, 3V LITHIUM




00112023 MAGNETIC FILTER, 14.2 MM FERRITE CORE  
*Qty: 3*


00112001 MAGNETIC FILTER, 26 MM FERRITE CORE  
*Qty: 2*



1210590-0  
AEROSOL SPRAY CAN, 12 OZ, RC004 (SILVER)

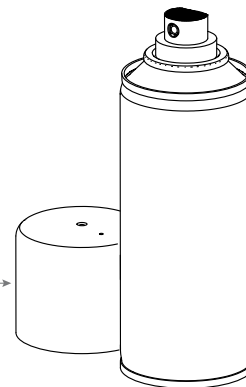


 1070360-0Z1 DOOR SERVICE PLATE, L/R, S/R, US/R






## User Terminals *all doors*

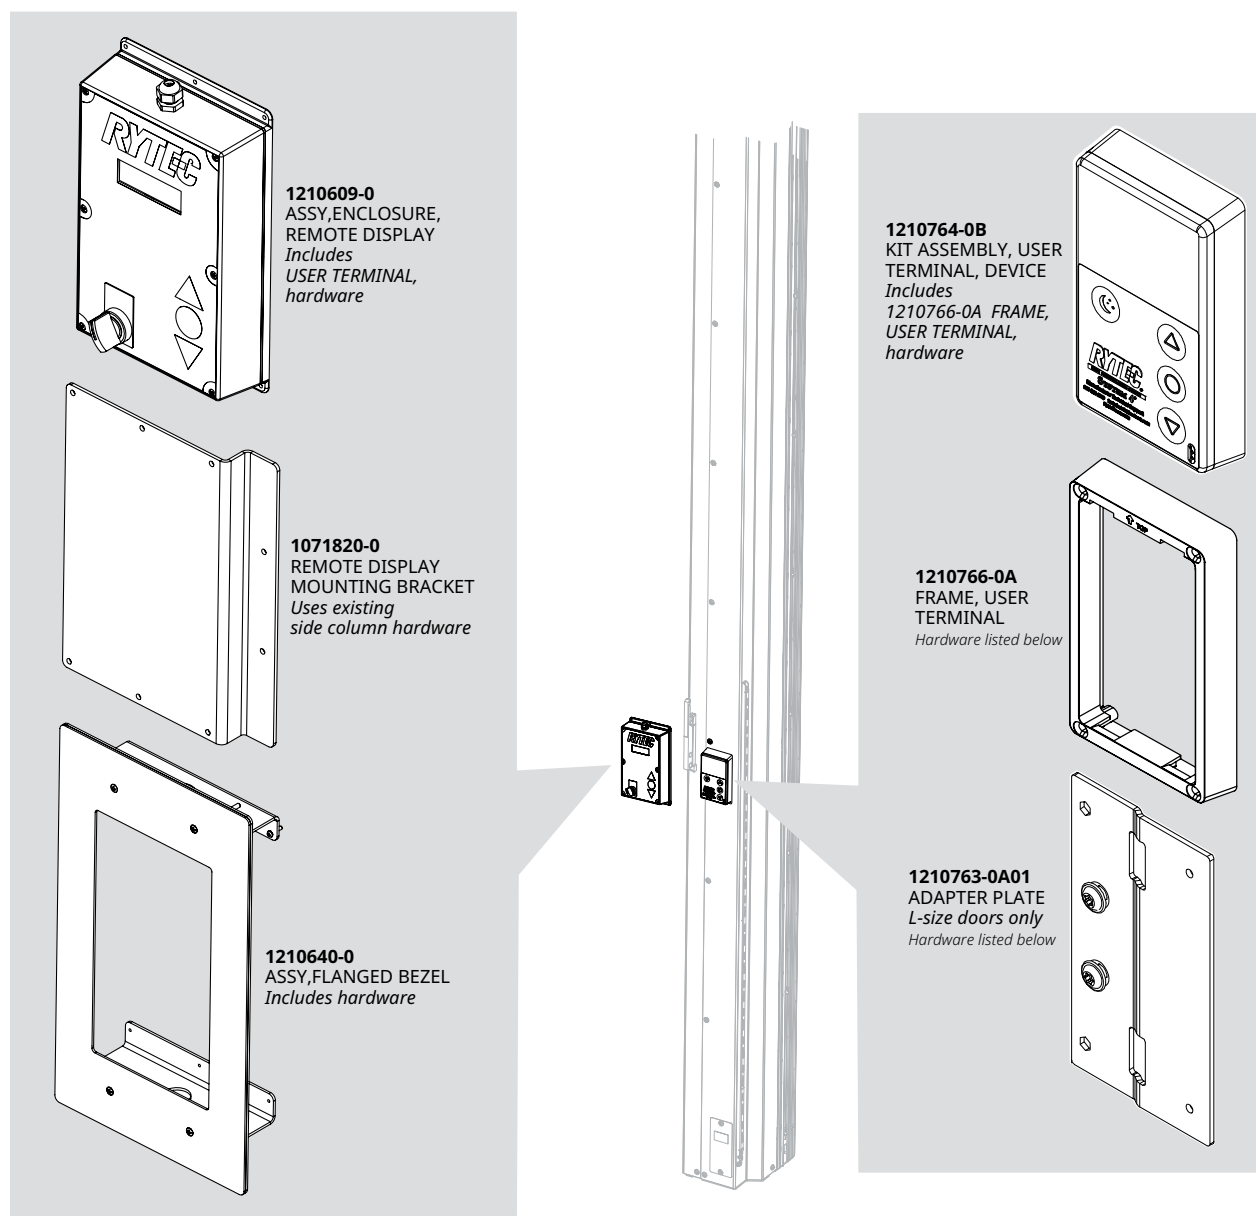


### Hardware – Order Separately

 Part Number	Hardware	Description	Qty
1210763-0A01	01900820	BSCSF, M8-1.25 X 20, T40, ZN	2
1210766-0A	5550351-0A01	PFMS M4-0.7x30 STL ZN	4
	5550057-0Z01	NUT, M4-0.7, HEX HEAD, LOCKING, NYLON INSERT, ZINC	4





## Expansion Boards *all doors*


**00142225** EXTENSION BOARD,  
COMMUNICATION

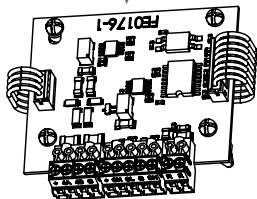


**00142014** EXPANSION CARD  
WITH I/O & 2 CH LOOP

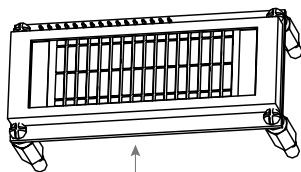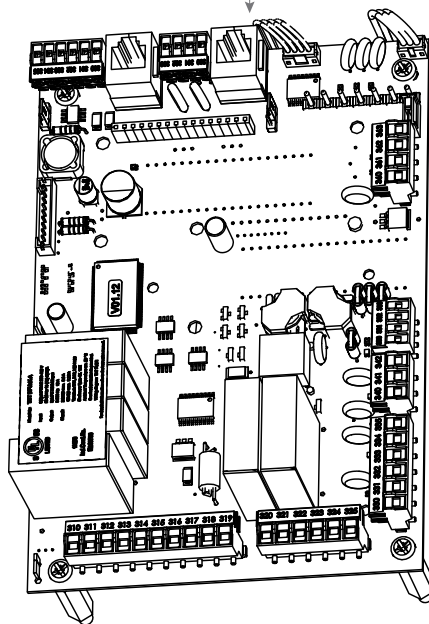

**00142008**  
DISPLAY ONLY, SYS4

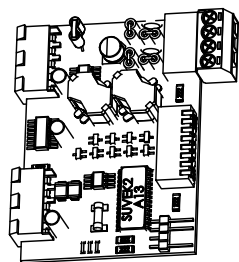

**00122000** LOOP DETECTOR  
MODULE, 2 CHANNEL, SYS4

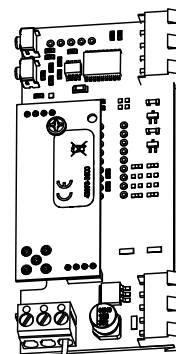

**00121045** RC RECEIVER,  
24VDC AM, 2 CHANNEL





## SPIRAL® AND SPIRAL® PREWIRE LIMITED WARRANTY

Rytec Corporation ("Seller"), an Illinois corporation with its principal place of business at One Cedar Parkway, PO Box 403, Jackson, WI 53037, warrants to the original registered end-user commercial purchaser ("Buyer") that the **Spiral® Door Series** ("Product") sold to the Buyer will be free of defects in materials and workmanship (ordinary wear and tear excepted) for the time periods set forth below:

- **Mechanical components** for a period of Five (5) Years from the date of shipment of the Product from the Seller's plant ("Shipment"). Note: Motor assembly is a mechanical component.
- **Electrical components** for a period of Two (2) Years from Shipment.
- **Standard door panel assemblies, including panel slats, hinge rollers, and hinges** for a period of Two (2) Years from Shipment.
- **Drive pulleys, side column brush/vinyl seals, spring straps, lower tooth pulley assembly, drive & timing belts, wireless mobile unit battery**, are considered wear items and are not covered under this Limited Warranty.
- **Aftermarket parts, accessories and assemblies** for a period of ninety (90) days from the date of Shipment.

<b>Remedies</b>	Seller's obligation under this Limited Warranty is limited to repairing or replacing, at Seller's option, any part which is determined by Seller to be defective during the applicable warranty period. Such repair or replacement shall be the Seller's sole obligation and the Buyer's exclusive remedy under this Limited Warranty.
<b>Labor</b>	Except in the case of aftermarket parts, accessories and assemblies, labor is warranted for one year. This means that Seller will provide warranty service without charge for labor in the first year of the warranty period. Thereafter, a charge will apply in to any repair or replacement under this Limited Warranty. In the case of aftermarket parts, accessories and assemblies, Seller will provide replacement parts only.
<b>Claims</b>	Claims under this Limited Warranty must be made (i) within 30 (thirty) days after discovery and (ii) prior to expiration of the applicable warranty period. Claims shall be made in writing delivered to the Seller at the address provided in the first paragraph of this warranty. Buyer must allow Seller and Dealer, or their agents, a reasonable opportunity to inspect any Product claimed to be defective and shall, at Seller's option, either (x) grant Seller and Dealer or their agents access to Buyer's premises for the purpose of repairing or replacing the Product or (y) return of the Product to the Seller, f.o.b. Seller's factory.
<b>Original Buyer</b>	This Limited Warranty is made to the original Buyer of the Product and is not assignable or transferable. This Limited Warranty shall not be altered or amended except in a written instrument signed by Buyer and Seller.
<b>Not Warranted</b>	Seller does not warrant against and is not responsible for, and no implied warranty shall be deemed to cover, damages that result directly or indirectly from: (i) the unauthorized modification or repair of the Product, (ii) damage due to misuse, neglect, accident, failure to provide necessary maintenance, or normal wear and tear of the Product, (iii) failure to follow Seller's instructions for installation, operation or maintenance of the Product, (iv) use of the Product in a manner that is inconsistent with Seller's guidelines or local building codes, (v) movement, settling, distortion, or collapse of the ground, or of improvements to which the Products are affixed, (vi) fire, flood, earthquake, elements of nature or acts of God, riots, civil disorder, war, or any other cause beyond the reasonable control of Seller, (vii) improper handling, storage, abuse, or neglect of the Product by Buyer or by any third party.
<b>DISCLAIMERS</b>	THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER REPRESENTATIONS AND WARRANTIES, EXPRESS OR IMPLIED, AND THE SELLER EXPRESSLY DISCLAIMS AND EXCLUDES ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR PURPOSE. SELLER SHALL NOT BE SUBJECT TO ANY OTHER OBLIGATIONS OR LIABILITIES, WHETHER ARISING OUT OF BREACH OF CONTRACT, WARRANTY, TORT (INCLUDING NEGLIGENCE AND STRICT LIABILITY) OR OTHER THEORIES OF LAW, WITH RESPECT TO THE PRODUCTS SOLD OR SERVICES RENDERED BY THE SELLER, OR ANY UNDERTAKINGS, ACTS, OR OMISSIONS RELATING THERETO.
<b>LIMITATION OF LIABILITY</b>	IN NO EVENT WILL SELLER BE RESPONSIBLE FOR, OR LIABLE TO ANYONE FOR, SPECIAL, INDIRECT, COLLATERAL, PUNITIVE, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF SELLER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Such excluded damages include, but are not limited to, personal injury, damage to property, loss of goodwill, loss of profits, loss of use, cost of cover with any substitute product, interruption of business, or other similar indirect financial loss.
<b>Product Descriptions</b>	Any description of the Products, whether in writing or made orally by the Seller or the Seller's agents, including specifications, samples, models, bulletins, drawings, diagrams, engineering or similar materials used in connection with the Buyer's order, are for the sole purpose of identifying the Product and shall not be construed as an express warranty. Any suggestions by the Seller or the Seller's agents regarding the use, application, or suitability of the Product shall not be construed as an express warranty unless confirmed to be such in writing by the Seller.
<b>Limited Warranty Void</b>	This Limited Warranty shall be void in its entirety if: <ul style="list-style-type: none"> <li>(a) The Product is modified in a manner not approved in writing by Seller; or</li> <li>(b) Buyer fails to maintain the Product in accordance with instructions contained in the Owner's Manual for the Product.</li> </ul> © Rytec Corporation 2022

# Owner's Manual

## Spiral® and Spiral® Prewire Doors



P.O. Box 403  
One Cedar Parkway  
Jackson, WI 53037

Ph: 262-677-9046  
Fx: 262-677-2058

**[www.rytecdoors.com](http://www.rytecdoors.com)**  
**[helpdesk@rytecdoors.com](mailto:helpdesk@rytecdoors.com)**

*For original Rytec parts*

**[www.rytecparts.com](http://www.rytecparts.com)**  
**[Parts@rytecdoors.com](mailto:Parts@rytecdoors.com)**