



Summary	Supplemental Hand Crank Usage				
Products Affected	All vertical motor mount fabric doors				
Key Word Tags					
Tools/Equipment (If Required)					
Parts/Materials (If Required)					
Related Media					
Author	Mike Burzlaff	Issue Date	9/22/17	Status	Active

Please Read The Entire Bulletin Before Proceeding

In order for the hand crank to manually operate the door, the fan cover must be removed before inserting on the motor shaft onto the crank.

Refer to the door type owner's manual for locating the motor and fan cover.

If you have any questions please contact Rytec Customer Support at 1-800-628-1909.