


Summary	Mounting hardware for the Rytec Plexline Door				
Products Affected	Plexline				
Key Word Tags	Hardware Location, Mounting, Counterweight, Plexline				
Tools/Equipment (If Required)					
Parts/Materials (If Required)					
Related Media					
Author	Randy Meyer, RevA M. Burzlaff	Issue Date	8/17/2010	Status	Active

Please Read The Entire Bulletin Before Proceeding

The Rytec Plexline Door comes with pre-drilled mounting holes in each side column. The side columns will contain at least 3 holes. Two holes will be located near the top of the side column and one near the bottom. Doors taller than 120 inches (10 Feet) will have an additional mounting hole in the middle of the side column. It is very important to use all the anchor holes and proper anchors. The Plexline door may be equipped with a manually assisted egress feature. This feature relies on counterweights to open the door during a power outage. During a power outage the brake can be manually released and the counterweights will open the door. The travel of the counterweights cannot be interfered by the mounting hardware. The mounting hardware should be a carriage bolt style. The picture below illustrates the clearance necessary for proper operation. If standard bolts are used for the mounting of the side columns they could interfere with the counterweight travel preventing door operation or affecting the manually assisted egress feature. See the diagrams below.

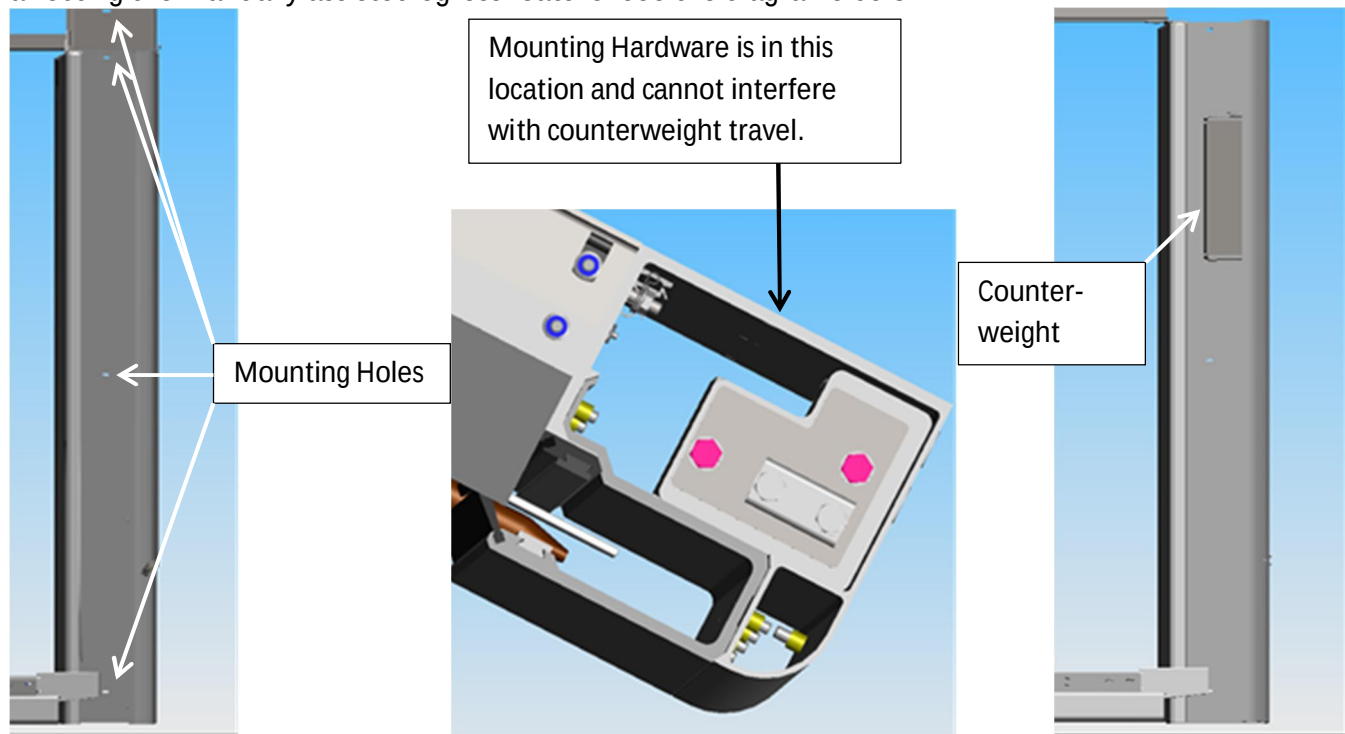

Any questions or concerns please contact Rytec Customer Support at 1-800-628-1909