

Summary	Add Blue loctite to motor mounting bolt on Wyndstar MT			
Products Affected	Wyndstar MT, Carwash			
Key Word Tags	Wyndstar MT, MT, Motor, Bolt			
Tools/Equipment (If Required)	Wrench, Loctite blue 242			
Parts/Materials (If Required)				
Related Media				
Author	Randy Meyer	Issue Date	4-10-13	Status Active

Please Read The Entire Bulletin Before Proceeding

The Wyndstar MT carwash model door has experienced some motor bolts loosening after installation. See figure 1.

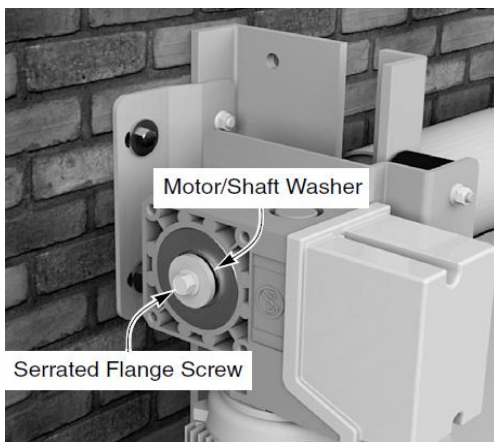


Figure 1

Remove the Serrated flange screw and place Loctite Blue 242 on the threads and replace the bolt. See figure 2.

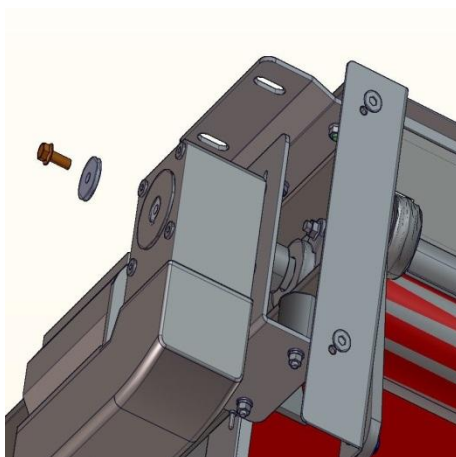


Figure 2



Any questions ,contact Rytec Technical Support, 1-800-628-1909

