

How to install the Rytec Connect™ device



WARNING: Do not open the System 4 control box until the power disconnect is in the OFF position, a lockout/tagout is complete, and at least five (5) minutes have elapsed.

Components in the control box hold a charge when the door is not in operation, which can cause shock, burns, or death.




NOTICE

Contract Rytec Technical support at 800-628-1909 if you have questions about these instructions.

Before you begin

1 Make sure that you have all supplies and tools.

Supplies that you provide




Mounting hardware (4) for the enclosure



Computer with internet connection

Tools you will need



Power drill and step drill bit (if additional hole needed in System 4 control box)



#2 Phillips head screwdriver



Precision screwdriver



Wire tool





Cement drill (if needed to mount Comlink box)

NOTICE


Maximum torque for all System 4 control box screws is 2 in-lb.

How to install the Rytec Connect comlink

1 Open the Rytec Connect enclosure and use the mounting hardware to secure it to the wall.

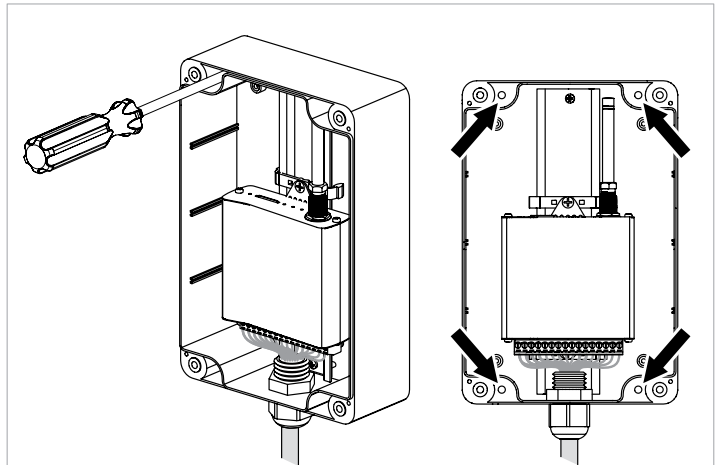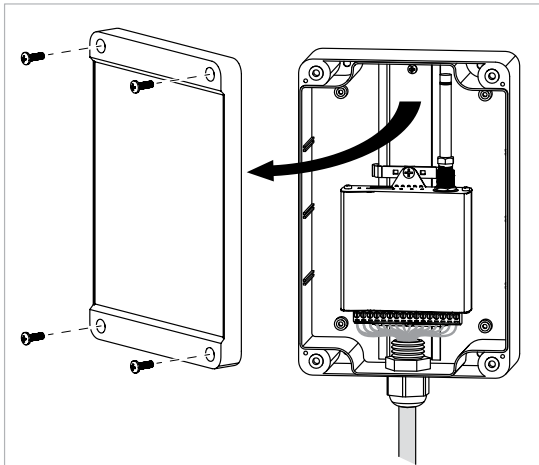

2 Loosen the six capture screws on the System 4 control box. **Flip open** the hinged cover panel.

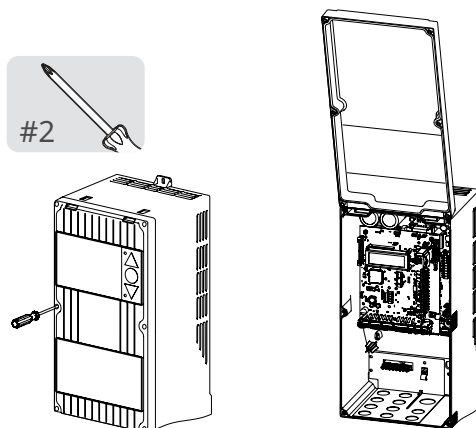


NOTICE


If necessary, drill a hole in the control box for the comlink cable:

- **The cable must enter through the bottom of the box.** Drilling through the top or side of the box voids the warranty for the door.
- Low voltage cables must enter **through the right side** of the box bottom.
- **Holes must be drilled.** The indentations on the control box bottom are not knockouts.

3 Connect the wiring to the System 4 control box (6-wire configuration).

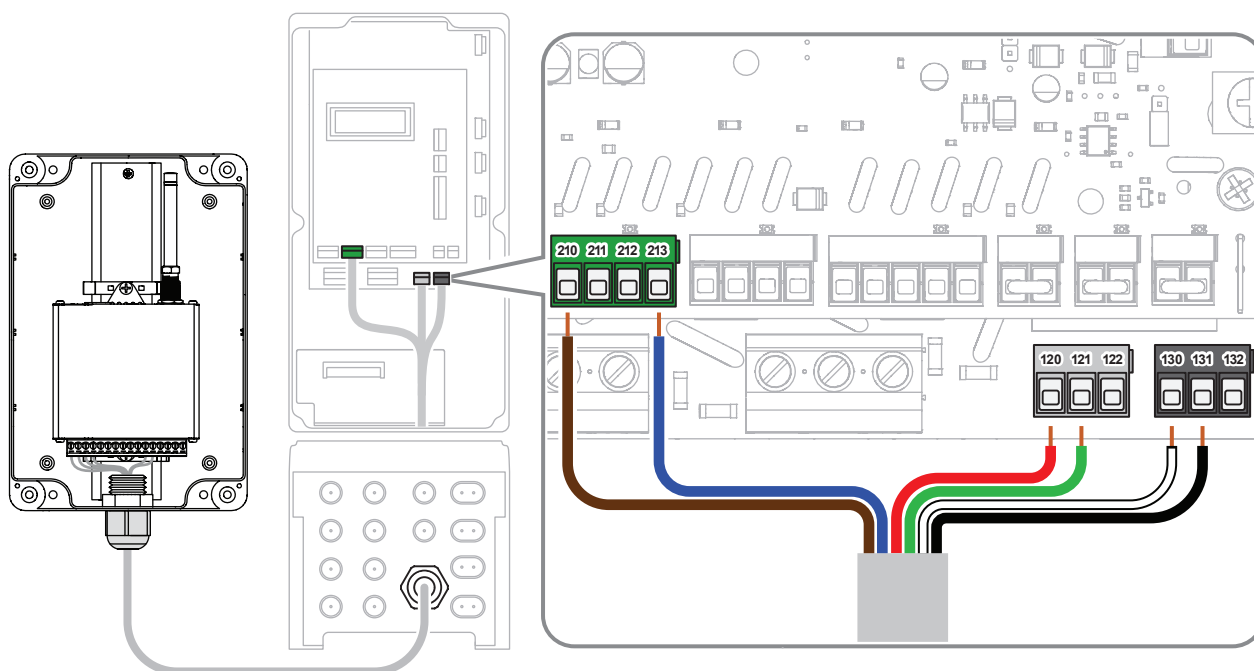


4 **ALTERNATE Connect** the wiring to the System 4 control box (16-wire configuration).

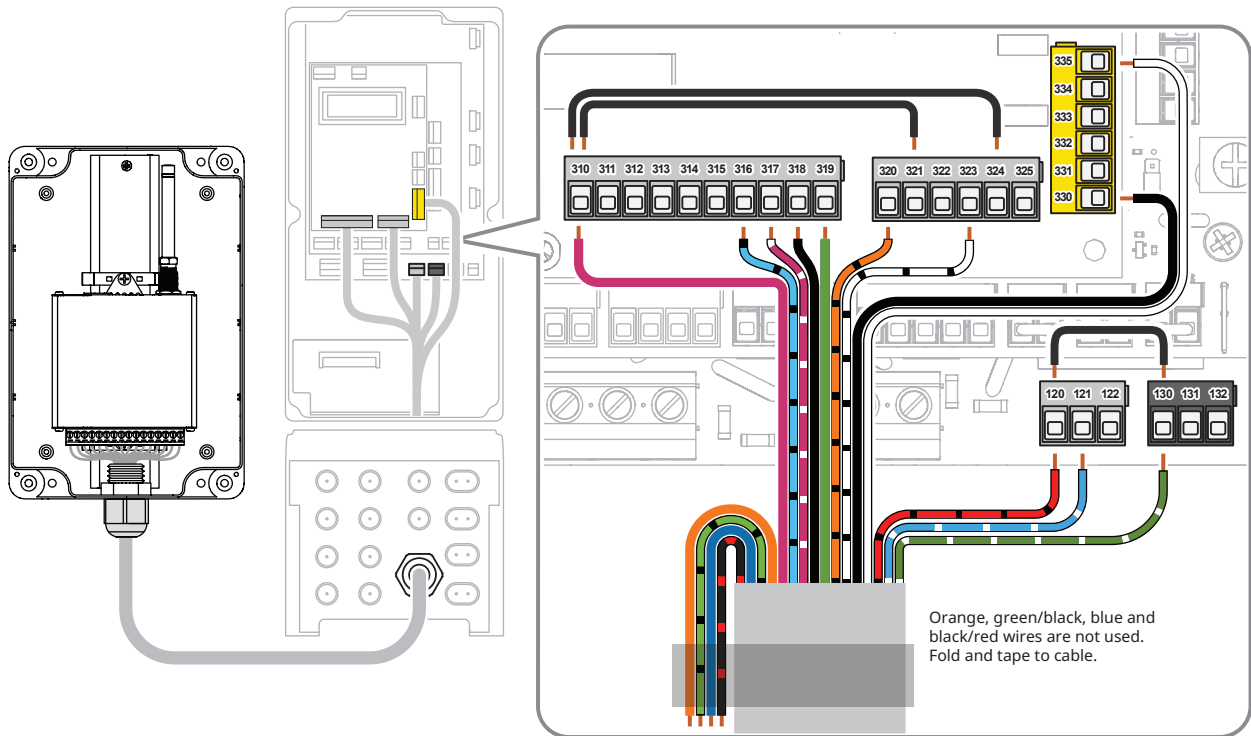

5 **Remove** the lockout/tagout and turn the power disconnect to the ON position.

6 **Make sure** the green LED is lit.

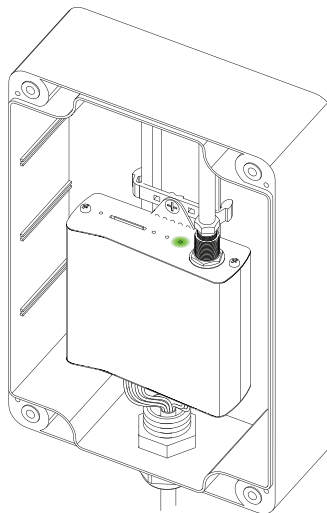


How to use the Rytec Connect comlink

1 **Go to** the [Rytec video site](http://www.rytec-dkb.com/rycon.html) (<http://www.rytec-dkb.com/rycon.html>) and watch the instructional videos for the Comlink device.


How to install the high power antenna (kit #R00122047)

1 Make sure that you have all supplies and tools.

What's in the kit

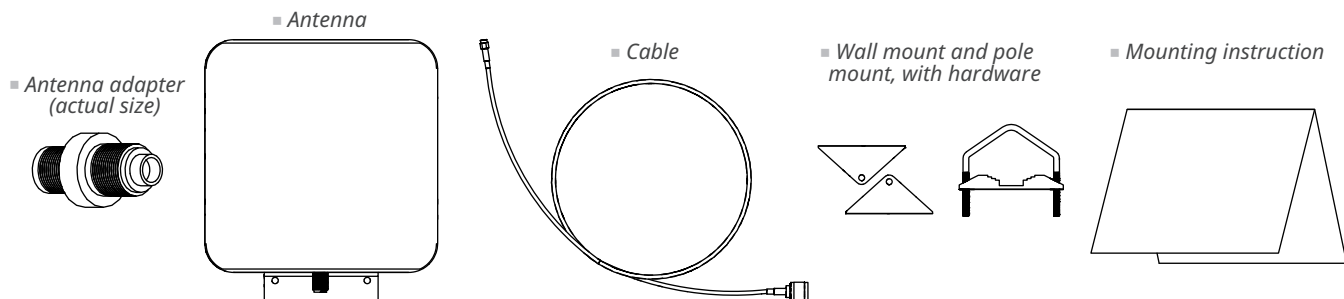

Supplies that you provide



Mounting hardware (4) for the antenna



NEMA 4 cable gland

Tools you will need






Power drill




Step drill bit

2 Open the Rytec Connect enclosure. Drill 7/8" hole in side. Install NEMA 4 cable gland.

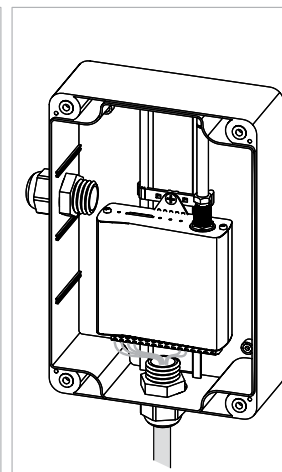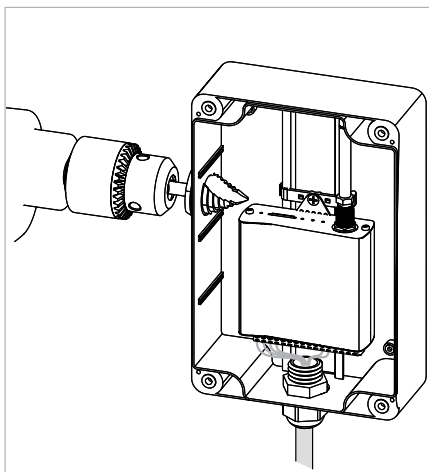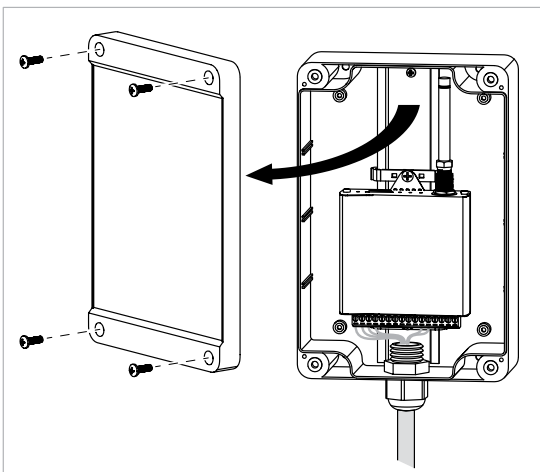

3 Remove antenna. **Install** adapter. **Install** antenna cable into adapter.

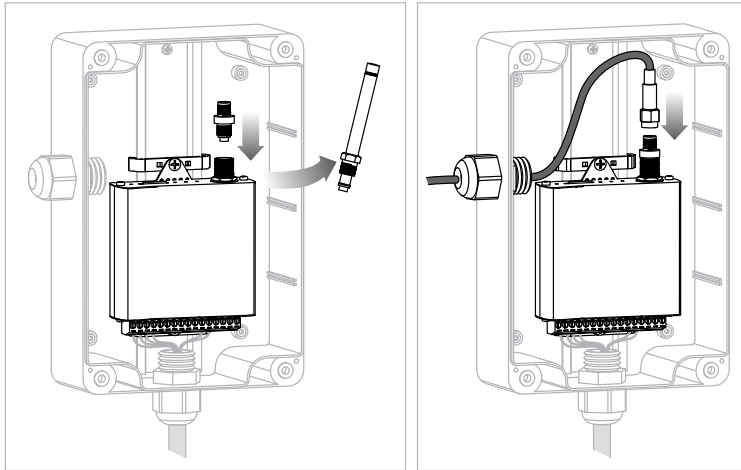

4 **Mount** antenna per instruction.