


Summary	Fast Fold guide and roller come-along replacement lubrication				
Products Affected	Rytec Fast Fold Non-Pneumatic Doors				
Key Word Tags	FF, Come Along, Track Roller, Replacement				
Tools/Equipment (If Required)	Grease Gun, Brush				
Parts/Materials (If Required)	ROLLER ASSY COMEALONG 500 GS R0199091				
	OR				
	ROLLER GS 500 TRACK		R0004292		
Related Media					
Author	Jeff Budoff, RevA Mike Burzlaff	Issue Date	12/13/2005	Status	Active

Please Read The Entire Bulletin Before Proceeding

When replacing the track and come along roller assemblies, grease needs to be added to the washers where they contact the yoke. The reason the yoke and washer needs to be greased is the bolt moves front to back when the door is opening and closing. If the bolt cannot move freely this may cause the track rollers to bind in the channel track.

Instructions:

With a grease gun, push enough grease on the applicator such as a small paint brush. Brush the grease onto the large washers above and below the yoke clamps areas as shown in the picture below. Move the bolt to move the grease around the washer and install the roller assembly.

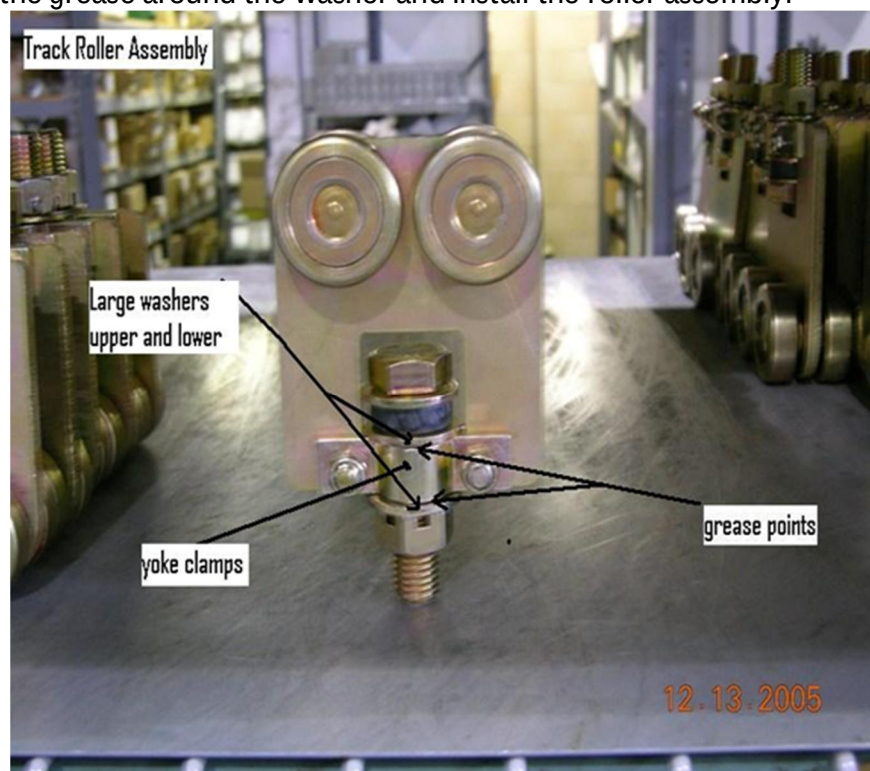

If you have any questions please contact Rytec Customer Support at 1-800-628-1909.